

MicroTiles™ Screen Tape Instruction Sheet

INTRODUCTION

Upon completion of a MicroTiles Array, the top corners of some of the display units may be exposed (Figure 1).

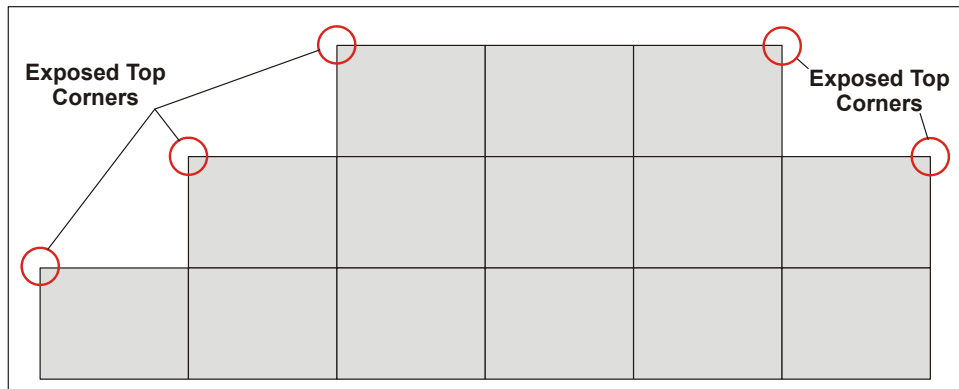


Figure 1 Sample Array with Exposed Top Corners Circled

There is a possibility of light infiltration through the exposed corners of the screen which may cause bright spots on the active area of the screen. To correct this potential problem, a 10cm piece of tape is added to those exposed top corners of the screen to increase the opacity and significantly reduce and possibly eliminate any light from entering the display unit from that point.

KITS REQUIRED

123-104106-01 - MicroTiles Setup Kit

TOOLS REQUIRED

Scissors

INSTRUCTIONS

1. Remove the affected screen using the proper screen removal procedures. Refer to Christie® MicroTiles™ User Manual (p/n 020-100329-xx).
2. Cut 10cm of tape from the 40cm piece included in the MicroTiles Setup Kit (Figure 2).

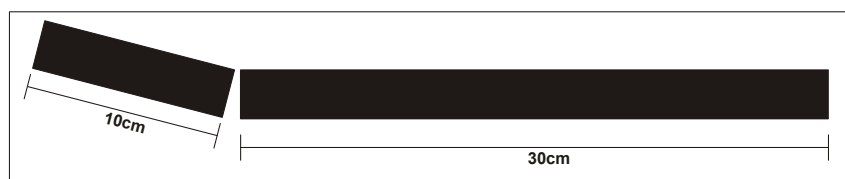


Figure 2 Cut 10cm of Tape

3. Align the tape to the existing tape using the front of the screen as a guideline. Ensure there is approximately 5cm of tape on either side of the corner (Figure 3).

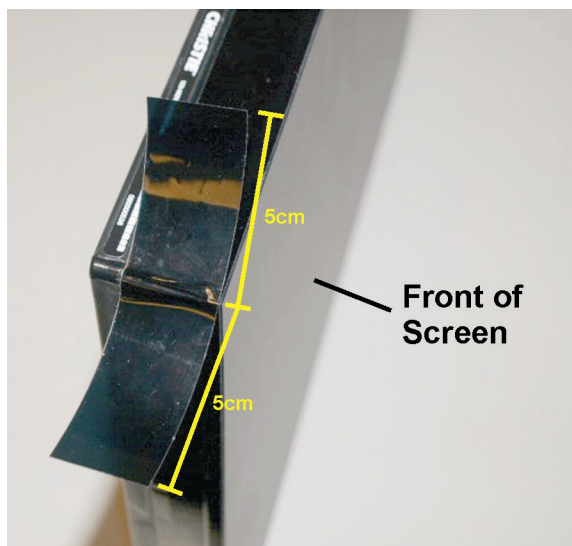


Figure 3 Align Tape to Front Edge of Screen

4. Apply tape to the sides of the screen. **NOTICE:** Make sure that the new tape does not protrude past the front of the screen (Figure 4).

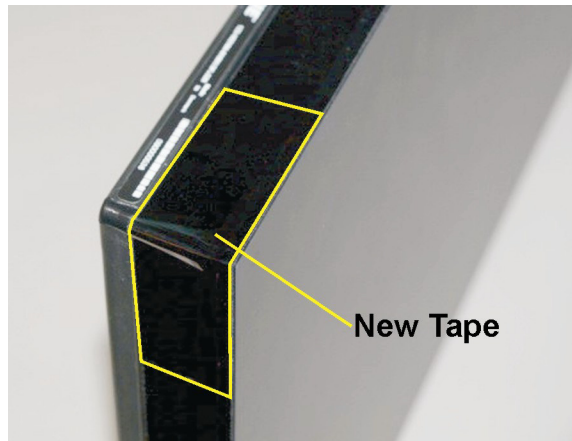


Figure 4 Apply Tape to Screen Frame

5. Re-install screen onto the display unit. Refer to Christie® MicroTiles™ User Manual (p/n 020-100329-xx).