

Unpacking the MicroTiles Screen Instruction Sheet

This document provides instructions to remove a MicroTiles screen from its packaging without damaging it.

Screen Handling Precautions

NOTICE

- Avoid touching the screen surface.
- Always handle the screen from the sides.
- Remove all jewelry and watches from your hands and wrists before handling.
- Never use gloves that are dirty or have a rough texture as they can leave marks on the screen.
- Never handle the screen without gloves once it has been removed from the plastic bag.
- Avoid placing the screen on a hard surface.
- Never set the screen on its corner or edge as they are fragile and can be easily damaged.

Prerequisites

- MicroTiles Screen S300 (123-124108-xx)

Unpack the Screen

1. Without removing it from the box, examine the screen to ensure it has not been damaged during shipping.
2. Place one hand under the screen's frame, between the front two foam corners.
3. Carefully lift the frame and screen until the front two foam corners are clear of the box.
4. Remove the front two foam corners.
5. Carefully lower the frame and screen back into the box.
6. With two hands, grasp the sides of the frame and lift the frame and screen together out of the box.
7. If the work surface is hard (for example, a table top), have another person close the lid of the box and place the screen on the lid. Otherwise, place the screen on the work surface.
8. Remove the remaining two foam corners.
9. Put on clean gloves.
10. Place one hand lightly on the screen and pull open the plastic bag.

11. Grip the bottom of the bag with one hand and the frame with the other and pull the screen out of the bag.
12. If you have lifted the screen and bag up while performing step 11, place the screen back on the work surface or box.

Technical Support

North and South America: +1-800-221-8025 or tech-support@christiedigital.com

Europe, Middle East, and Africa: +44 (0) 1189 778111 or techsupport-emea@christiedigital.com

Asia Pacific: tech-asia@christiedigital.com