

# Installing the rack stand adapter

Use the following instructions when installing the rack stand adapter kit to a Series II rack mount pedestal.

The rack stand adapter kit includes two brackets and hardware. It is used together with the foot brackets and foot locks of a Series II rack mount pedestal to properly locate and secure a CP2315/2320-RGB projector.

## Affected products


The following products are affected.

- Christie CP2315/2320-RGB (P/N: 163-006107-XX/163-005106-XX)
- Christie China models CP2315/2320-RGB (P/N: 163-010102-XX/163-009100-XX)


## Required components

The following components are required to complete these instructions.

- Rack stand adapter kit (163-111104-01)
  - Support bracket feet (QTY 4)
  - M5 x 12 hex key button head screws (QTY 12)

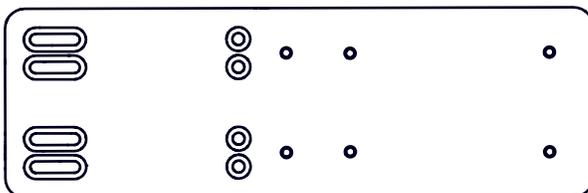

- Rack mount pedestal (108-416102-01)
  - Rear foot bracket (QTY 2) - A
  - Front foot bracket (QTY 2) - B
  - Foot locks (QTY 4) - C
  - M5 x 12 hex key button head screws (QTY 20)

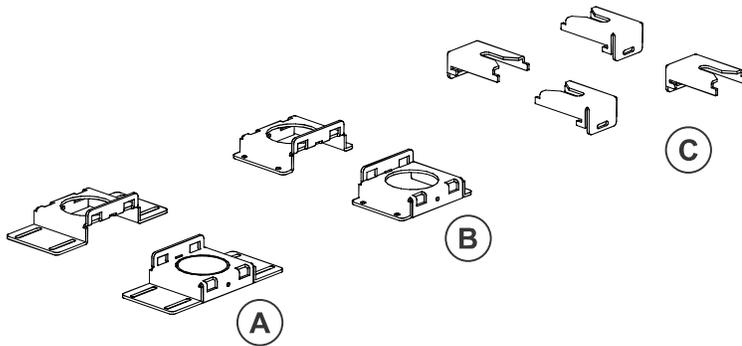

## Required tools

Keep the following tools on hand.

- 3 mm Allen key

## Safety warnings and guidelines

Read the following safety warnings before proceeding.



**Warning!** If not avoided, the following could result in death or serious injury.

- A minimum of four people or appropriately rated lift equipment is required to safely lift, install, or move the product.



All hardware in the following instructions must be tightened to 15 in-lb torque, unless noted otherwise.

## Preparing the rack mount pedestal

Safely install and position the rack mount pedestal.


If installing a rack mount pedestal from the box, refer to the *Christie Rack Mount Pedestal Installation Guide (020-100632-XX)* for instructions on how to position and secure the pedestal before the projector is mounted.

If reusing a pedestal already installed on site, you must first remove the projector by properly disconnecting it and using safe lifting practices. Refer to the documentation provided with the projector to do this.


## Assembling the rack stand adapter

Use the following instructions to assemble the front and rear rack stand adapter.


1. Install the flat plates on top of the rack stand.

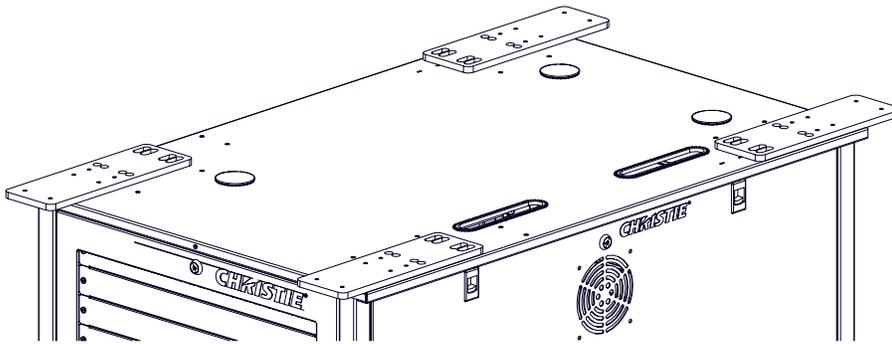


2. Install two M5 screws for each front plate and keep the screws loose.

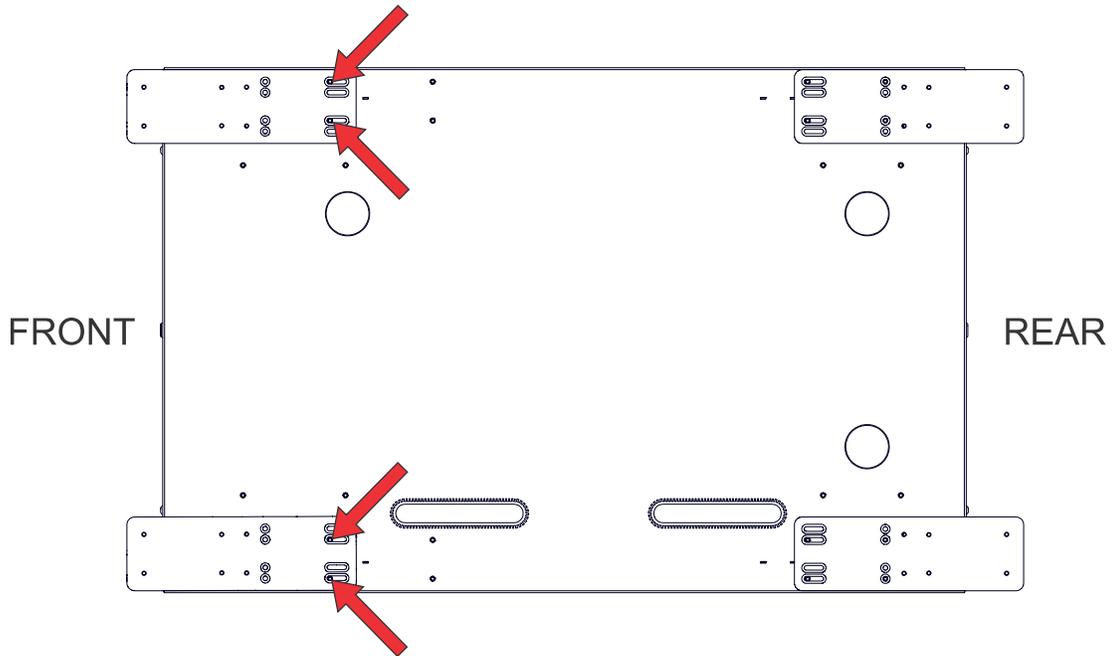


3. Install four M5 screws for each rear plate and torque the screws.

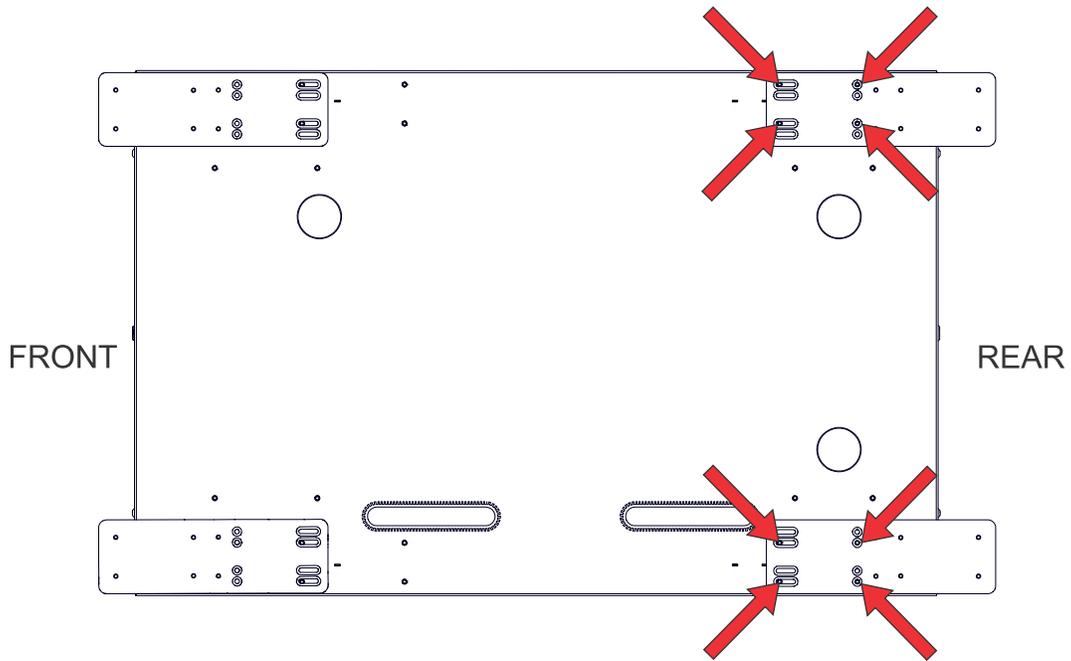


4. Install the front and rear foot holders.  
Orient the holders with the vertical flange inside the rack stand as shown.

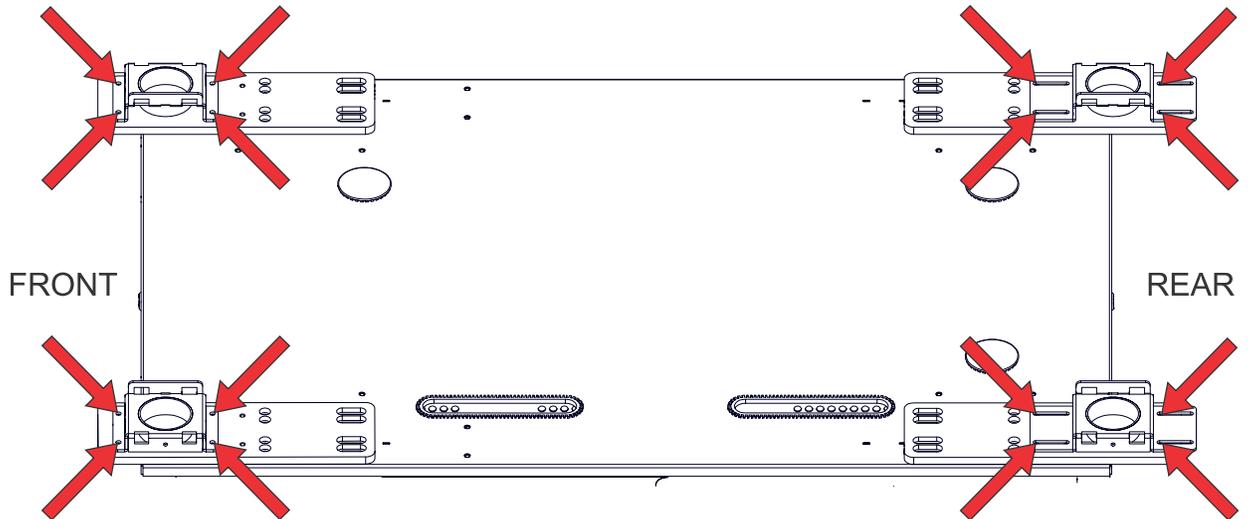

5. Install four M5 screws for each holder and torque only the front foot holder screws.  
Do not tighten the four screws on each of the rear foot holders.
6. Install the projector on the rack stand.

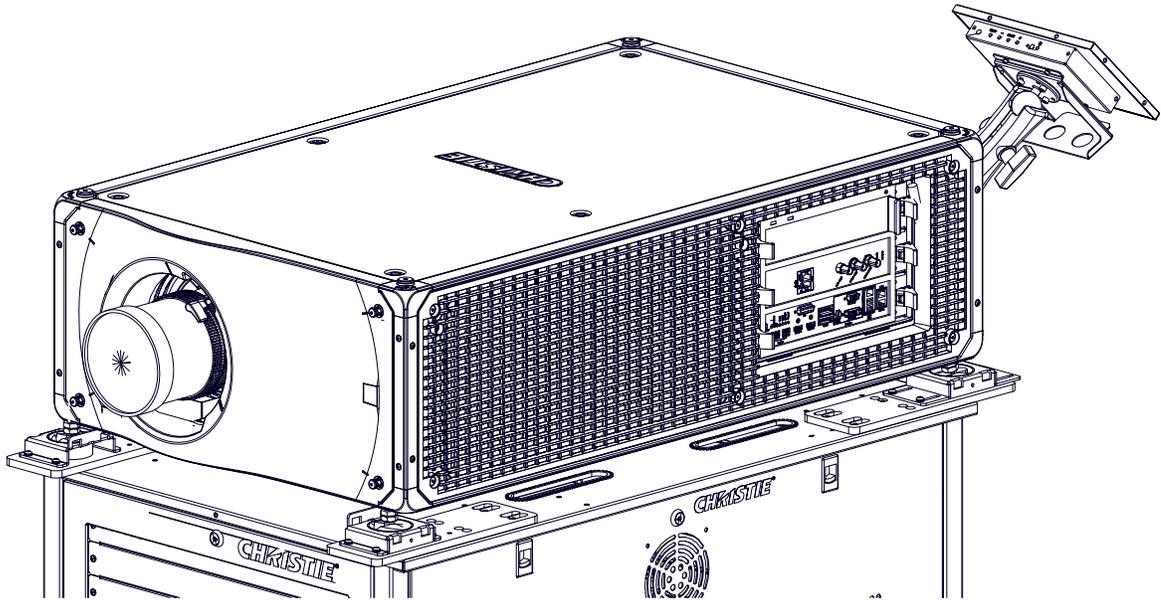

7. Install the foot cover bracket on all the feet and torque the four screws.

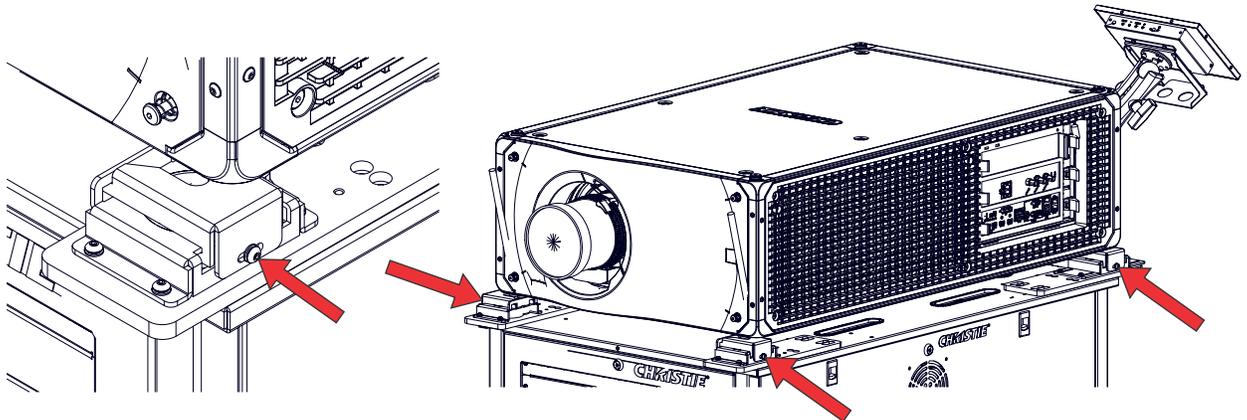

8. Tilt the projector to the required angle.
9. Tighten and torque all the loose screws.

## Technical support

Technical support for Christie products is available at:

- North and South America: +1-800-221-8025 or [Support.Americas@christiedigital.com](mailto:Support.Americas@christiedigital.com)
- Europe, Middle East, and Africa: +44 (0) 1189 778111 or [Support.EMEA@christiedigital.com](mailto:Support.EMEA@christiedigital.com)
- Asia Pacific: +65 6877-8737 or [Support.APAC@christiedigital.com](mailto:Support.APAC@christiedigital.com)
- Christie Managed Services: +1-800-550-3061 or [NOC@christiedigital.com](mailto:NOC@christiedigital.com)