Christie Touch Panel Accessory Instructions

This document provides instructions for installing a touch panel to the projector.

Use the touch panel to control the projector and perform functions such as turning the light source on or off, selecting channels, and viewing status information.

Affected products

The following products are affected.

- Christie CP2415-RGB
- Christie CP2420-RGB
- Christie CP4415-RGB
- Christie CP4420-RGB
- Christie CP4430-RGB

Required components

The following components are required.

Christie Touch Panel Accessory (P/N: 163-151108-01)

Safety warning and guidelines

Read all safety and warning guidelines before replacing a bulb.




Warning! If not avoided, the following could result in death or serious injury.


- All procedures must be performed by Christie qualified technicians.
- SHOCK HAZARD! Disconnect the product from AC before installing, moving, servicing, cleaning, removing components, or opening any enclosure. Inputs A and B must be removed prior to servicing.

Installing the touch panel controller

Install the touch panel controller (TPC) and connect the required harnesses for communication with the projector.

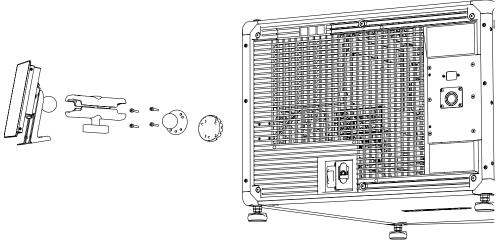

Install the spacer on the rear cover.
 CP2415 and CP2420 models do not require the spacer.

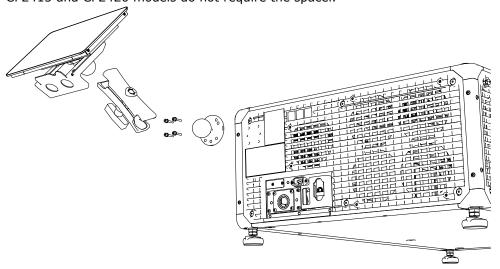

- 2. Install the ball arm onto the spacer.
- 3. To secure the ball arm, fasten with the four screws. Torque to 20in-lb.
- 4. Install the TPC arm onto the ball arm.
- 5. Install the touch screen monitor onto the TPC arm.
- 6. Connect the touch screen monitor communication harness.



Technical support

Technical support for Christie products is available at:

- North and South America: +1-800-221-8025 or Support.Americas@christiedigital.com
- Europe, Middle East, and Africa: +44 (0) 1189 778111 or Support.EMEA@christiedigital.com
- Asia Pacific

Australia: +61 (0)7 3624 4888
China: +86 10 6561 0240
India: +91 (80) 6708 9999
Japan: 81-3-3599-7481

• Singapore: +65 6877-8737 • South Korea: +82 2 702 1601

Christie Professional Services: +1-800-550-3061 or NOC@christiedigital.com

Christie Touch Panel Accessory Instruction Sheet 020-103409-01 Rev. 1 (08-2020)
Copyright © 2020 Christie Digital Systems USA, Inc. All rights reserved.