

The top half of the cover features an abstract background composed of numerous overlapping, semi-transparent triangles in various shades of blue, ranging from light sky blue to deep navy blue. This geometric pattern creates a sense of depth and movement. A clean, white diagonal line separates this patterned area from the solid white background below.

User Manual
020-001792-01

Christie GS Series

DWU6322-GS/DWU7062-GS

CHRISTIE®

NOTICES

COPYRIGHT AND TRADEMARKS

Copyright ©2020 Christie Digital Systems USA Inc. All rights reserved.

All brand names and product names are trademarks, registered trademarks or trade names of their respective holders.

GENERAL

Every effort has been made to ensure accuracy, however in some cases changes in the products or availability could occur which may not be reflected in this document. Christie reserves the right to make changes to specifications at any time without notice. Performance specifications are typical, but may vary depending on conditions beyond Christie's control such as maintenance of the product in proper working conditions. Performance specifications are based on information available at the time of printing. Christie makes no warranty of any kind with regard to this material, including, but not limited to, implied warranties of fitness for a particular purpose. Christie will not be liable for errors contained herein or for incidental or consequential damages in connection with the performance or use of this material. Canadian manufacturing facility is ISO 9001 and 14001 certified.

WARRANTY

Products are warranted under Christie's standard limited warranty, the complete details of which are available by contacting your Christie dealer or Christie. In addition to the other limitations that may be specified in Christie's standard limited warranty and, to the extent relevant or applicable to your product, the warranty does not cover:

- a. Problems or damage occurring during shipment, in either direction.
- b. Problems or damage caused by combination of a product with non-Christie equipment, such as distribution systems, cameras, DVD players, etc., or use of a product with any non-Christie interface device.
- c. Problems or damage caused by misuse, improper power source, accident, fire, flood, lightning, earthquake, or other natural disaster.
- d. Problems or damage caused by improper installation/alignment, or by equipment modification, if by other than Christie service personnel or a Christie authorized repair service provider.
- e. Use of third party product enclosures for environmental protection during outside use must be approved by Christie.
- f. Problems or damage caused by use of a product on a motion platform or other movable device where such product has not been designed, modified or approved by Christie for such use.
- g. Except where the product is designed for outdoor use, problems or damage caused by use of the product outdoors unless such product is protected from precipitation or other adverse weather or environmental conditions and the ambient temperature is within the recommended ambient temperature set forth in the specifications for such product.
- h. Defects caused by normal wear and tear or otherwise due to normal aging of a product.

The warranty does not apply to any product where the serial number has been removed or obliterated. The warranty also does not apply to any product sold by a reseller to an end user outside of the country where the reseller is located unless (i) Christie has an office in the country where the end user is located or (ii) the required international warranty fee has been paid.

The warranty does not obligate Christie to provide any on site warranty service at the product site location.

PREVENTATIVE MAINTENANCE

Preventative maintenance is an important part of the continued and proper operation of your product. Failure to perform maintenance as required, and in accordance with the maintenance schedule specified by Christie, will void the warranty.


REGULATORY

The product has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the product is operated in a commercial environment. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of the product in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the user's own expense.

CAN ICES-3 (A)/NMB-3 (A)

이 기기는 업무용 (A 급) 으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

ENVIRONMENTAL

The product is designed and manufactured with high-quality materials and components that can be recycled and reused. This symbol  means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from regular waste. Please dispose of the product appropriately and according to local regulations. In the European Union, there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

Content

Introduction	6
Safety and warning guidelines	6
AC/power precautions	7
Installation safety and warning guidelines	7
Laser safety precautions	7
Product labels	8
Projector components	10
Front view	10
Rear view	11
Left view	12
Right view	12
Built-in keypad	13
Input/Output (I/O) panel	14
DWU6322-GS Series	14
DWU7062-GS Series	15
IR remote keypad	16
LED status indicators	18
Light LED	18
Status LED	18
Picture Mute LED	18
Installation	19
Connecting to a computer	19
DWU6322-GS Series	19
DWU7062-GS Series	20
Connecting to video equipment	21
DWU6322-GS Series	21
DWU7062-GS Series	22
Turning the projector on	23
Turning the projector off	24
Adjusting the projector position	24
Calculating the lens offset	25
WUXGA projectors	25
Removing and installing the lens	28

Installing the cable cover	29
Installing the ceiling mount	29
Rotating the Christie badge	30
Operation	31
Picture menu	32
HSG Adjustment	35
Image blending	37
Screen menu	38
Geometry Correction	41
PIP/PBP Settings menu	42
PIP/PBP layout and size	44
Settings Menu	45
Language menu	47
Test Pattern menu	47
Light Source menu	48
Options Menu	49
Information menu	51
3D menu	53
Communications menu	54
LAN settings	56
Using web user interface	56
System requirements	56
Logging on to the web user interface	57
Setting the system notification	58
Troubleshooting	59
No image appears on screen	59
Incorrectly displayed image	59
Presentation is not displayed	60
Unstable or flickering images	61
Vertical flickering bar	61
Image is out of focus	61
Image is stretched	61
Image is not the correct size	62
Connection fail when DHCP on	62
Connection fail with new IP address	63

Specifications 64

 Inputs 64

 PIP/PBP compatibility 68

 Key features 69

 List of components 70

 Physical specifications 70

 Physical operating environment 71

 Power requirements 71

 Regulatory 72

 Safety 72

 Laser Safety 72

 Electro-Magnetic Compatibility 72

 Environmental 72

 Marking 73

 Federal Communications Commission (FCC) warning 73

 On-screen display tree 74

Introduction

This manual is intended for Christie qualified installers and trained operators of DWU6322-GS/DWU7062-GS projection systems.

For complete DWU6322-GS/DWU7062-GS product documentation and technical support, go to www.christiedigital.cn.

Safety and warning guidelines

This projector must be operated in an environment that meets the operating range specification. Use only the attachments and/or accessories recommended by Christie. Use of others may result in the risk of fire, shock, or personal injury.



Warning! If not avoided, the following could result in death or serious injury.

- Do not expose the product to moisture.
- Do not operate the product without all of its covers in place.
- This product must be installed within a restricted access location not accessible by the general public.
- Only personnel who are trained on the precautions for the restricted access location can be granted entry to the area.
- FIRE HAZARD! Keep hands, clothes, and all combustible material away from the concentrated light beam of the projector.
- TRIP OR FIRE HAZARD! Position all cables where they cannot contact hot surfaces, be pulled, be tripped over, or damaged by persons walking on or objects rolling over the cables.
- SHOCK HAZARD! Disconnect the product from AC before installing, moving, servicing, cleaning, removing components, or opening any enclosure.
- OPTICAL RADIATION HAZARD! Disconnect the power plug from the AC outlet if the product is not being used for an extended period of time.
- Do not allow anything to rest on the power cord.
- Always provide proper ventilation for the product to prevent overheating.



Caution! If not avoided, the following could result in minor or moderate injury.

- Only Christie qualified technicians are permitted to open product enclosures.
- All procedures must be performed by Christie qualified technicians.



Notice. If not avoided, the following may result in equipment or property damage.

- Always use a lens plug when installing or moving the product. This prevents contaminants from entering the product.
- Only use cleaning solutions recommended by Christie. All other cleaning solutions may cause product damage and will void the warranty.

AC/power precautions



Warning! If not avoided, the following could result in death or serious injury.

- FIRE HAZARD! Do not use a power cord, harness, or cable that appears damaged.
- FIRE OR SHOCK HAZARD! Do not overload power outlets and extension cords.
- SHOCK HAZARD! Only use the AC power cord provided with the product or recommended by Christie.
- FIRE AND SHOCK HAZARD! Do not attempt operation unless the power cord, power socket, and power plug meet the appropriate local rating standards.
- SHOCK HAZARD! Do not attempt operation if the AC supply is not within the specified voltage and current, as specified on the license label.
- SHOCK HAZARD! The AC power cord must be inserted into an outlet with grounding.
- SHOCK HAZARD! Disconnect the product from AC before installing, moving, servicing, cleaning, removing components, or opening any enclosure.
- Install the product near an easily accessible AC receptacle.

Installation safety and warning guidelines



Warning! If not avoided, the following could result in death or serious injury.

- High leakage current present when connected to IT power systems.



Caution! If not avoided, the following could result in minor or moderate injury.

- ELECTRICAL and BURN HAZARD! Use caution when accessing internal components.
- Only Christie qualified technicians are authorized to use the tools provided in the toolbox.

Laser safety precautions

This projector has been classified as Class 1 Laser Product - Risk Group 2 according to IEC 60825-1:2014, IEC 62471:2006, and IEC 62471-5:2015 standard. Read all safety and warning guidelines before installing or operating the projector.



Warning! If not avoided, the following could result in death or serious injury.

- LASER RADIATION HAZARD! This projector has a built-in Class 4 laser module. Never attempt to disassemble or modify the laser module.
- Any operation or adjustment not specifically instructed in the User manual creates the risk of hazardous laser radiation exposure.
- Do not operate the product without all of its covers in place.
- Do not look directly into the lens when the light source is on. The extremely high brightness can cause permanent eye damage.
- Only Christie qualified technicians who are knowledgeable about the hazards associated with laser use, high-voltage, and high temperatures generated by the product are authorized to assemble, install, and service the Christie Laser Projection System.

Product labels

Learn about the labels that may be used on the product. Labels on your product may be yellow or black and white.

General hazards

Hazard warnings also apply to accessories once they are installed in a Christie product that is connected to power.

Fire and Shock Hazard



To prevent fire or shock hazards, do not expose this product to rain or moisture.
Do not alter the power plug, overload the power outlet, or use it with extension Cords.
Do not remove the product enclosure.
Only Christie qualified technicians are authorized to service the product.

Electrical Hazard



Risk of electric shock.
Do not remove the product enclosure.
Only Christie qualified technicians are authorized to service the product.



General hazard.



Electric shock hazard. To avoid personal injury, disconnect all power sources before performing maintenance or service.



Electrocution hazard. To avoid personal injury, always disconnect all power sources before performing maintenance or service procedures.



Fire hazard. To avoid personal injury and property damage, follow the instructions provided in this document.



Hot surface hazard. To avoid personal injury, allow the product to cool for the recommended cool down time before performing maintenance or service.



Burn hazard. To avoid personal injury, allow the product to cool for the recommended cool down time before performing maintenance or service.



Moving parts hazard. To avoid personal injury, keep hands clear and loose clothing tied back.



Fan hazard. To avoid personal injury, keep hands clear and loose clothing tied back. Always disconnect all power sources before performing maintenance or service procedures.



Voltage hazard. To avoid personal injury, always disconnect all power sources before performing maintenance or service procedures.



Not for household use.

Mandatory action



Consult the service manual.



Disconnect all power sources before performing maintenance or service procedures.

Electrical labels



Indicates the presence of an earth ground.

Laser labels



Do not look into the projector lens when the laser is on. The bright light may result in permanent eye damage.




This projector has been classified as Class 1 Laser Product- Risk Group 2 according to IEC 60825-1:2014, IEC 62471:2006, and IEC 62471-5:2015.

Projector components

Identify the main components of the projector.

Front view


Identify the main components on the front of the projector.

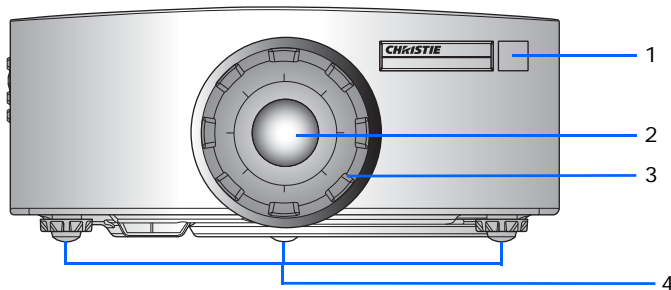

ID	Part name	Description
1	Front IR sensors	Receives signals from the IR remote keypad. Keep the signal path to the sensor unobstructed for uninterrupted communication with the projector.
2	Projection lens	Allows automated lens control and adjustment: vertical and horizontal offsets, zoom, and focus.
3	Lens ring	Protects the lens motors and mechanism. Remove in order to insert or remove the lens.
4	Adjustable feet	Raises or lowers the feet to level the projector.

Rear view


Identify the main components on the rear of the projector.

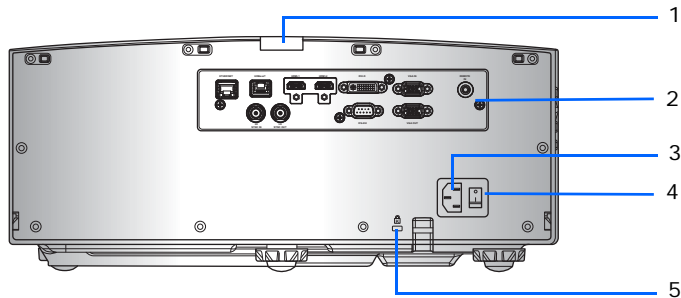

ID	Part name	Description
1	Rear IR sensor	Receives signals from the IR remote keypad. Keep the signal path unobstructed for uninterrupted communication with the projector.
2	Input/Output (I/O) panel	Connects the projector to external devices.
3	AC input	Connects to the supplied power adapter (100-240V~).
4	Power button	Powers the projector on or off.
5	Kensington Security Slot	Secures the projector to help prevent theft or unauthorized removal.

Left view


Identify the main components on the left side of the projector.

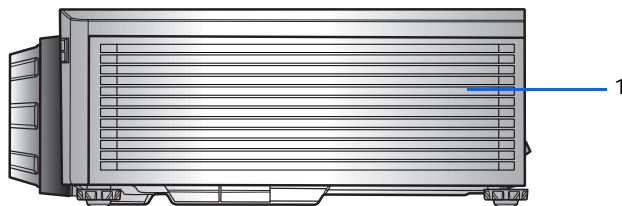

ID	Part name	Description
1	Cooling air vents (intake)	Provides cooling to the projector. Keep these vents unobstructed to prevent the projector from overheating.

Right view


Identify the main component on the right side of the projector.

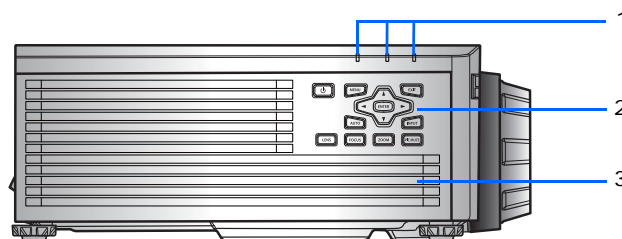

ID	Part name	Description
1	LED Status Indicators	Displays the status of the projector. They are (from left to right): LIGHT, STATUS, and PICTURE MUTE.
2	Built-in keypad	Controls the projector.
3	Cooling air vents (exhaust)	Provides cooling to the projector. Keep these vents unobstructed to prevent the projector from overheating.

Built-in keypad

The built-in keypad controls the projector.

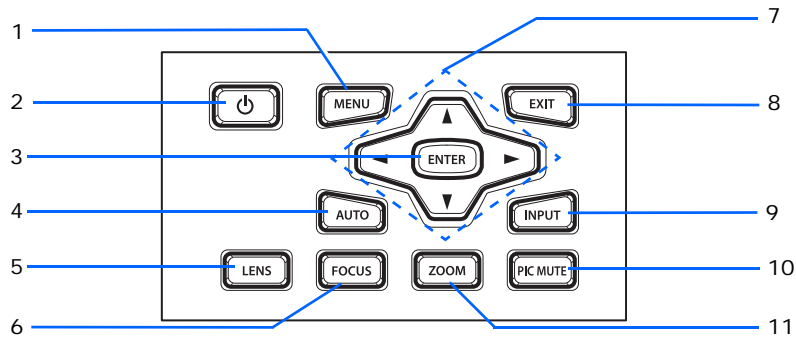


ID	Part name	Description
1	Menu	Displays the menus.
2	Power	Turns the projector on or off.
3	Enter	Confirms a selection.
4	Auto	Automatically optimizes an image.
5	Lens	Adjusts the lens vertical or horizontal offset setting.
6	Focus	Adjusts the focus.
7	Arrow keys	Adjusts a setting up or down, or navigate within a menu.
8	Exit	Returns to the previous level or exits the menus if at top level.
9	Input	Selects an input for the main or PIP/PBP image.
10	Picture mute	Displays or blanks the video image.
11	Zoom	Adjusts the zoom.

Input/Output (I/O) panel


Identify the components of the Input/Output (I/O) panel.

DWU6322-GS Series

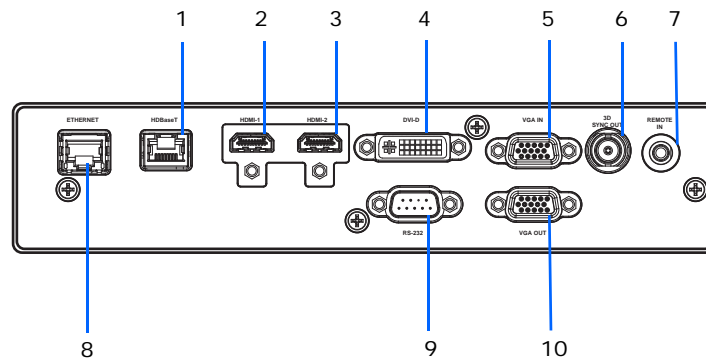

ID	Connector name	ID	Connector name
1	HDBaseT	6	3D SYNC OUT
2	HDMI-1	7	REMOTE IN
3	HDMI-2	8	ETHERNET (LAN)
4	DVI-D	9	RS-232
5	VGA IN	10	VGA OUT

DWU7062-GS Series

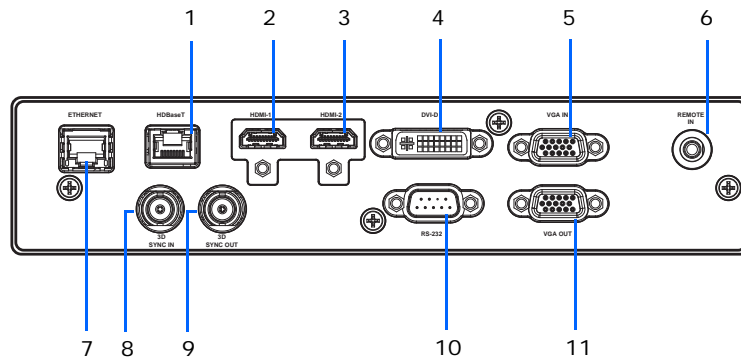


ID	Connector name	ID	Connector name
1	HDBaseT	7	ETHERNET (LAN)
2	HDMI-1	8	3D SYNC IN
3	HDMI-2	9	3D SYNC OUT
4	DVI-D	10	RS-232
5	VGA IN	11	VGA OUT
6	REMOTE IN		

IR remote keypad

The IR remote keypad communicates with the projector by way of wireless communications.

If you choose to use a cable, not supplied, it must be 20m or less. If the length of cable exceeds 20 m, the IR remote keypad may not work correctly.

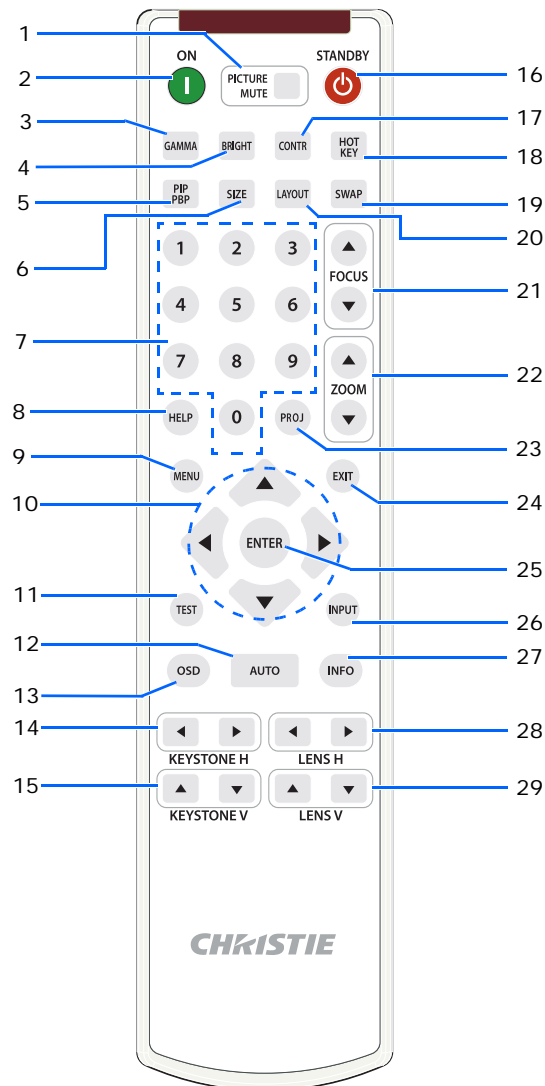

ID	Button	Description
1	PICTURE MUTE	Displays or blanks the video image.
2	ON	Turns the projector on.
3	GAMMA	Adjusts the mid-range levels.
4	BRIGHT	Adjusts the amount of light in the image.
5	PIP/PBP	Turns PIP/PBP on or off.

ID	Button	Description
6	SIZE	Adjusts the PIP/PBP size.
7	Number Keys	Enters a number, such as a channel, value, and so on. The on-screen display indicates if a function is not supported.
8	HELP	Displays the instructions for source connection.
9	MENU	Displays the menus.
10	Arrow Keys	Adjusts a setting up or down to navigate within a menu.
11	Test	Displays a test pattern.
12	AUTO	Automatically optimizes an image.
13	OSD	Uses to hide or shows on-screen display (OSD) menus.
14	KEystone H	Adjusts the horizontal keystone.
15	KEystone V	Adjusts the vertical keystone.
16	STANDBY	Turns the projector off.
17	CONTR	Adjusts the difference between dark and light.
18	HOT KEY	Selects your preset key quickly.
19	SWAP	Swaps the main and PIP/PBP images.
20	LAYOUT	Adjusts the PIP/PBP layout.
21	FOCUS	Adjusts the focus to improve image clarity as required.
22	ZOOM	Adjusts the zoom to achieve a required image size.
23	PROJ	Changes the IR remote keypad ID. <ul style="list-style-type: none"> • To assign an ID, press Proj + <1 to 9>. • To return to the universal IR remote ID, press Proj + 0.
24	EXIT	Returns to previous level or exit menus if at top level.
25	ENTER	Selects a highlighted menu item, or changes or accepts a value.
26	INPUT	Selects an input for the main or PIP/PBP image.
27	INFO	Displays the source image information.
28	LENS H	Adjusts the position of the image horizontally.
29	LENS V	Adjusts the position of the image vertically.

LED status indicators

LEDs are defined below.

Light LED

Identify the laser diode state colors and meaning.

LED status	Projector state
Red (flashing)	Projector has lost over 60% initial luminance.
Orange (solid)	Laser diode time has expired.
Green (solid)	Laser diode is on and operating correctly.
Off	Laser diode is off.

Status LED

Identify the LED state colors and meaning.

LED status	Projector state
Off	AC power is off (without AC plugged in).
Off, but keypad LED is on	AC has been applied, projector is in standby mode. NOTE: Status LED cannot be flashing red, as this is reserved for an error condition. Status LED is off but keypad LED will indicate Standby Mode.
Green (solid)	Projector is powered up and operating normally.
Green (flashing)	Projector communications.
Orange (flashing)	Projector is in cool down mode or startup mode.
Green (flashing) / Orange (solid)	Projector is in flash update state.
Red (solid)	Over-temperature.
Red (flashing)	Fan failure.

Picture Mute LED

Identify the picture mute LED state colors and meaning.

LED status	Projector state
Green (solid)	Light is on and an image is displayed.
Orange (solid)	Light is on and the image is blank.


Installation

Learn how to install, connect, and optimize the projector display.

Connecting to a computer

Learn what cables/connectors that may be used to connect to various devices.

DWU6322-GS Series

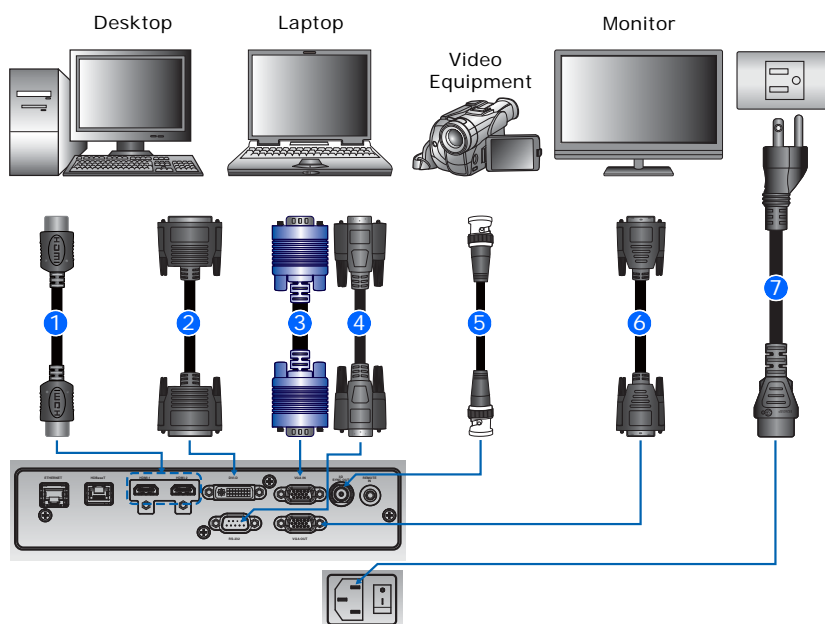


ID	Connector name	ID	Connector name	ID	Connector name
1	HDMI cable	4	RS-232 cable	7	Power cord
2	DVI-D cable	5	3D sync out cable		
3	VGA in cable	6	VGA out cable		



- Due to the difference in applications for each country, the accessories required in some regions may differ from those shown.
- This diagram is for illustrative purposes only, and does not indicate that these accessories are supplied with the projector.

DWU7062-GS Series

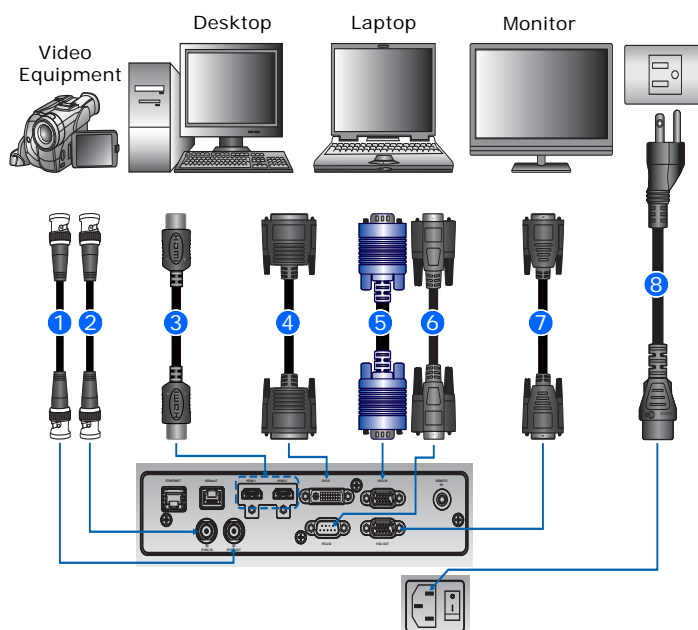

ID	Connector name	ID	Connector name	ID	Connector name
1	3D sync out cable	4	DVI-D cable	7	VGA out cable
2	3D sync in cable	5	VGA in cable	8	Power cord
3	HDMI cable	6	RS-232 cable		




- Due to the difference in applications for each country, the accessories required in some regions may differ from those shown.
- This diagram is for illustrative purposes only, and does not indicate that these accessories are supplied with the projector.

Connecting to video equipment

Learn what cable/connectors may be used to connect to various devices.

DWU6322-GS Series

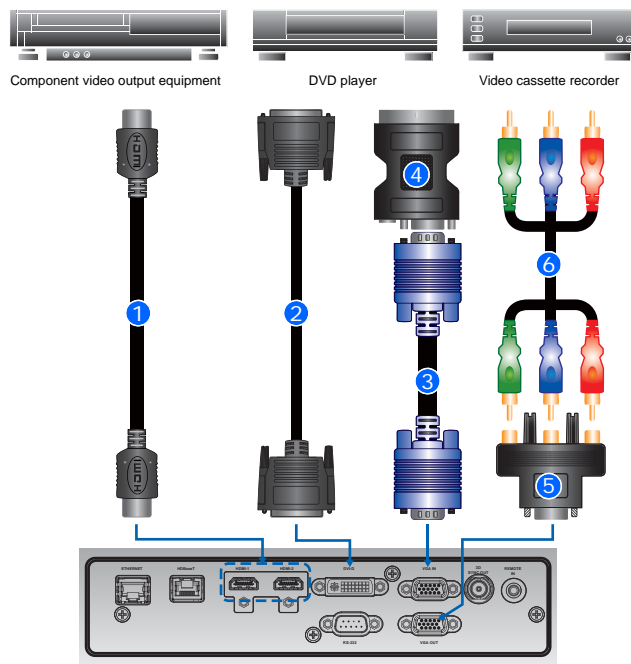


ID	Connector name	ID	Connector name	ID	Connector name
1	HDMI cable	3	VGA in cable	5	15-pin to 3 RCA Component/HDTV Adapter
2	DVI-D cable	4	VGA to Component	6	3 RCA Component cable



- Due to the difference in applications for each country, the accessories required in some regions may differ from those shown.
- This diagram is for illustrative purposes only, and does not indicate that these accessories are supplied with the projector.

DWU7062-GS Series

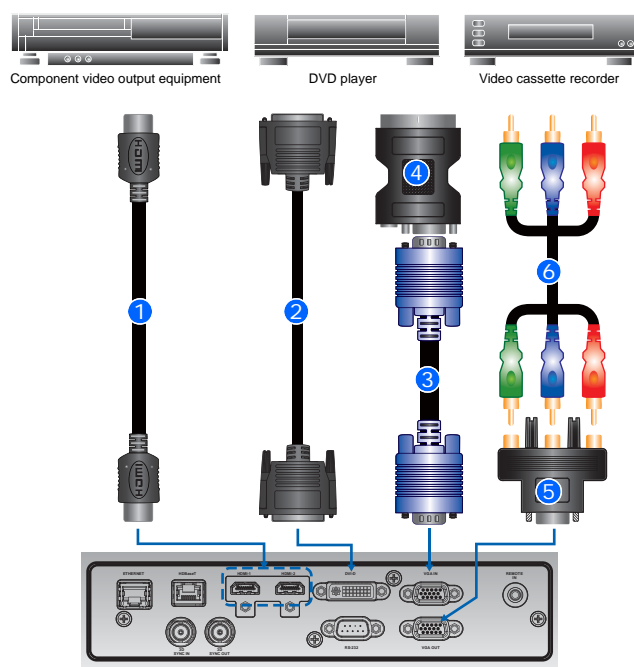

ID	Connector name	ID	Connector name	ID	Connector name
1	HDMI cable	3	VGA in cable	5	15-pin to 3 RCA Component/HDTV Adapter
2	DVI-D cable	4	VGA to Component	6	3 RCA Component cable



- Due to the difference in applications for each country, the accessories required in some regions may differ from those shown.
- This diagram is for illustrative purposes only, and does not indicate that these accessories are supplied with the projector.

Turning the projector on

The projector cables must be securely connected before turning the power on.





Warning! Failure to comply with the following could result in death or serious injury.


- Do not look into the projector lens when the laser is on. The bright light may result in permanent eye damage

1. Connect the projector power cables to AC power.

The Power button on the keypad is illuminated when the power cables are connected.


2. Ensure the lens has been installed in the projector.
3. Ensure that no one or no objects are in the beam path before turning on the projector.
4. To turn on the projector, on the IR remote keypad press  or on the built-in keypad press .

The status LED is orange with a long blink. 

5. To select an input source and turn it on, on the IR remote keypad select **Input**. 

Available input sources are VGA, HDMI, DVI, and HDBaseT.

The projector detects the source you selected and displays the image.

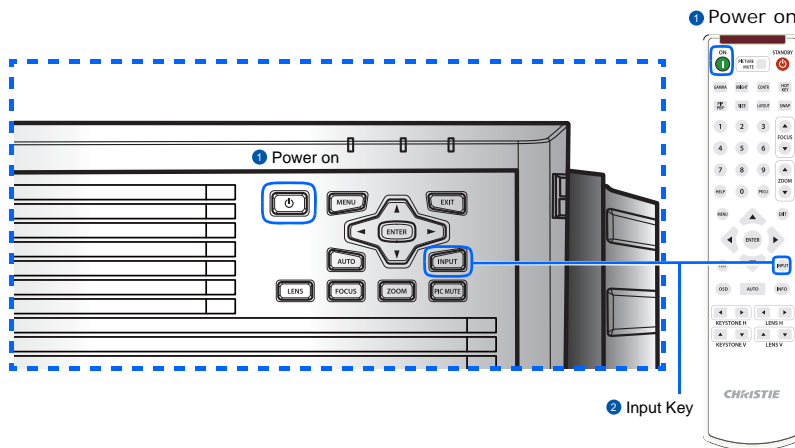

The first time the projector is used, select the preferred language from the Main Menu after the startup screen is displayed.

Turning the projector off

Power off the projector in preparation for inspection or maintenance.

1. To turn the projector off, on the IR remote keypad or built-in keypad press **⏻**.

A warning message appears on the displayed image.


2. To confirm your selection, press **⏻** again.

If you do not press **⏻** again, the warning message disappears after three seconds and the projector remains on.

Adjusting the projector position

When you select a position for the projector, consider the size and shape of your screen, the location of your power outlets, and the distance between the projector and the rest of your equipment. Follow these general guidelines:

- Position the projector on a flat surface at a right angle to the screen. The projector (with the standard lens) must be at least 3 feet (0.9 m) from the projection screen.
- Position the projector to the required distance from the screen. The distance from the lens of the projector to the screen, the zoom setting, and the video format determine the size of the projected image.
- Determine the lens throw ratio:
 - Lens 0.75~0.95 (WU)
 - Lens 0.95~1.22 (WU)
 - Lens 1.22~1.52 (WU)
 - Lens 1.52~2.92 (WU)
 - Lens 2.90~5.50 (WU)
 - Lens 0.36 (120" screen, WU)
- 360 degree operation (along the widest axis)

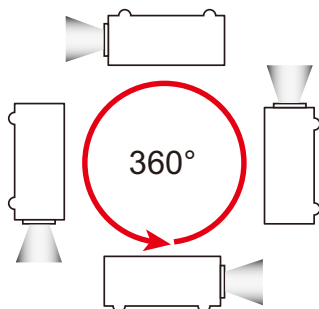

Calculating the lens offset


Adjust the offset to align the image on the screen with half image size.

- The vertical image offset (shift) range for the projector is +/-100% (WUXGA).
- The horizontal image offset (shift) range for the projector is +/-30% (WUXGA).
- The method for calculating lens offset complies with industry standards. For example for vertical lens offset:
 - At 0% offset (or on axis), the center of the image is on the lens center, so half of the image appears above and half appears below the lens center.
 - At +100% offset, the entire image appears above the lens center.
 - The percentage (%) offset is calculated as the ratio of the number of pixels shifted up or down to half image size.


WUXGA projectors

The following show vertical and horizontal image offsets for the WUXGA projectors:


- Vertical image offset: 0%

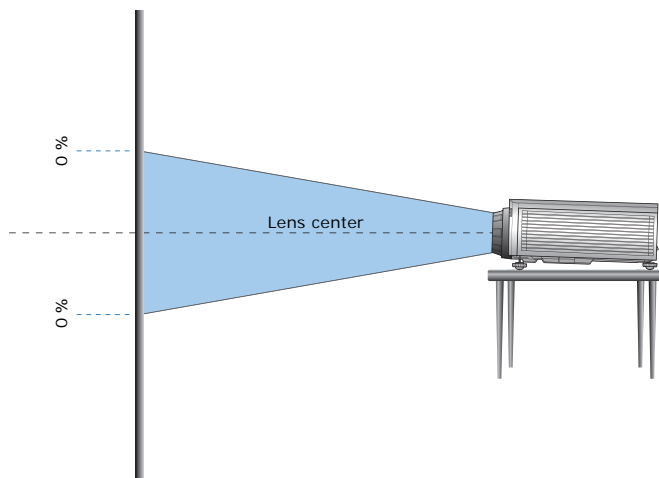


- Vertical image offset: +100%

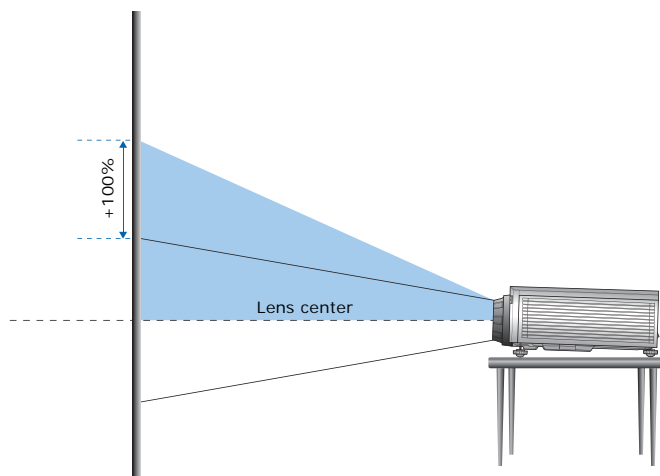

- Vertical image offset: -100%

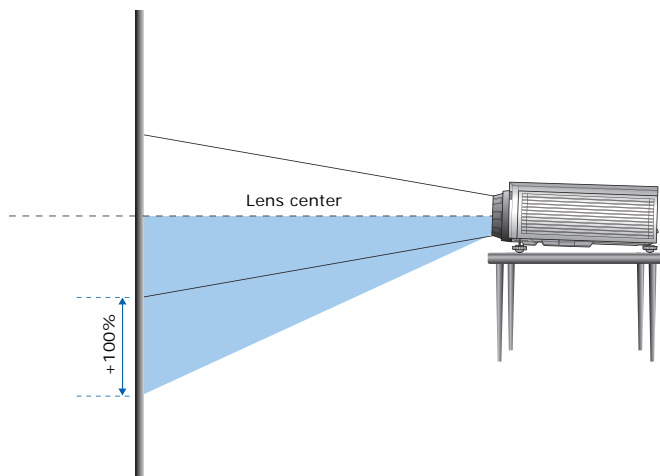

- Horizontal image offset: +/-30%

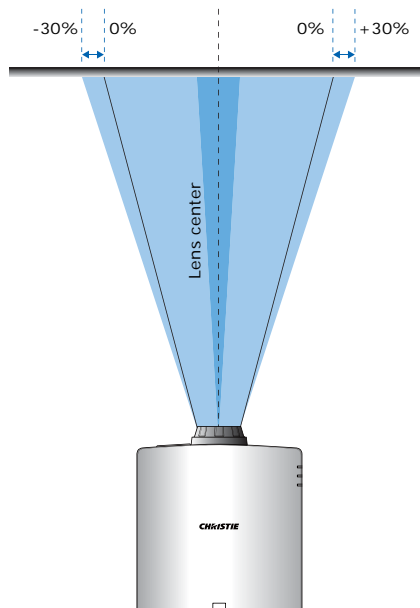

Removing and installing the lens



Warning! Failure to comply with the following could result in death or serious injury.

- Turn off the projector and remove the power cord, before installing or replacing a lens.


When handling the projector after lens installation, make sure the front lens cap is placed on the lens to protect the lens surface from potential damage. When carrying or moving the projector, do not handle by the lens. This may damage the lens, the chassis, or other mechanical parts within the projector.

1. Center the lens. Ensure the lens is at or near its center position. Attempting to remove the lens with a large offset may cause damage to the lens assembly.

Center the lens while the projector is switched on by pressing the **Lens Horizontal** or **Lens Vertical** button and then pressing **Enter**.

2. Turn off the projector.
3. Allow the projector to cool down into standby mode before replacing the lens.
4. After the projector has cooled down and prior to replacing the lens, remove the power cord.
5. To remove the lens, remove the lens ring cover first. Then press the **Lens Release button** **A** with a tool and rotate the lens counterclockwise by a quarter **B** to release the lock.

Remove the lens through the front of the projector.

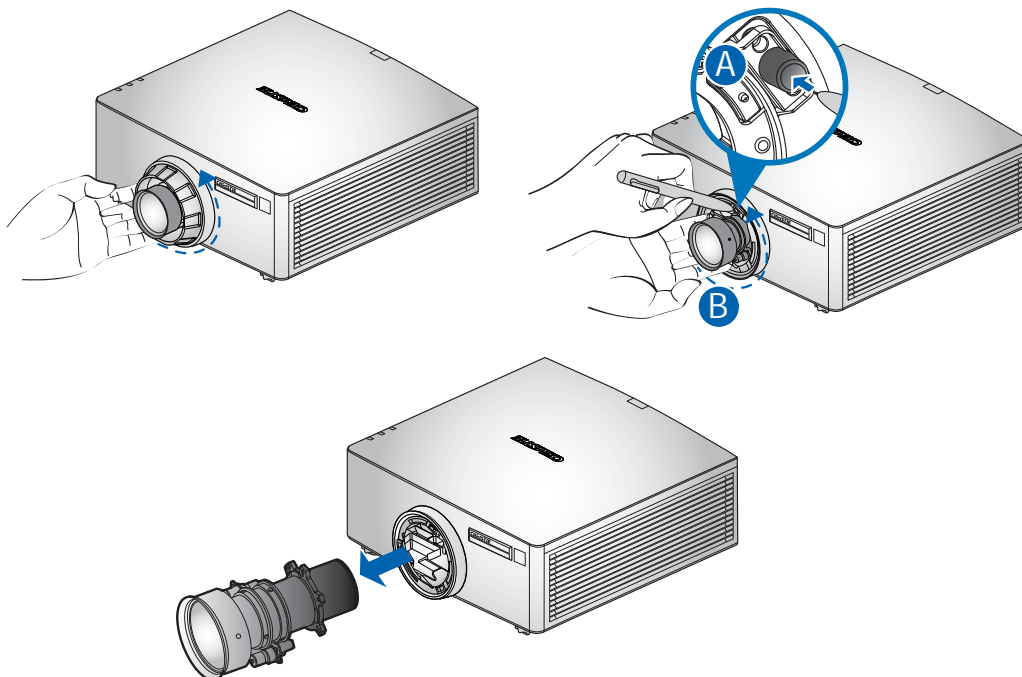


6. To install the new lens, fully insert the lens assembly straight into the lens mount without turning. Rotate the lens cap clockwise to lock the lens in place.



Notice. For ultra short throw lens installation information, refer to the *Ultra short throw lens installation instruction sheet* (P/N: 020-102569-XX).

Installing the cable cover


1. Rotate the cable cover and insert the two guide pins into the guide holes.
2. Press and hold both lower corners of the cable cover while inserting the sheet clips into the projector casing.

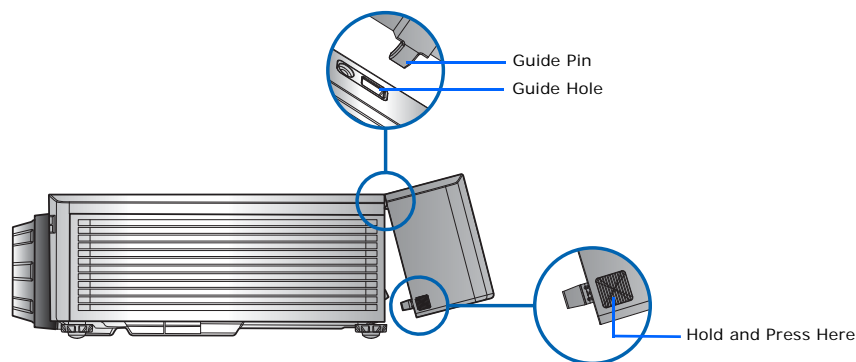

Installing the ceiling mount

Mount the projector with a Christie-approved mount, using the four mounting points on the underside of the projector.

See [List of components](#) on page 70.

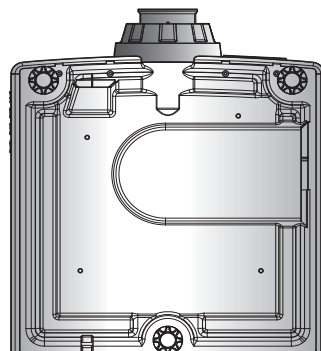


1. Refer to the installation instructions and safety guidelines provided in the kit.

See [List of components](#) on page 70.

Rotating the Christie badge

The Christie magnetic badge on the front panel of the projector can be rotated for inverted installation.

1. Push on the edge of the badge to release it from its slot on the front panel.
2. Rotate the badge 180 degrees.
3. Push the badge back into its slot on the front panel. Make sure the badge is properly seated inside the slot.

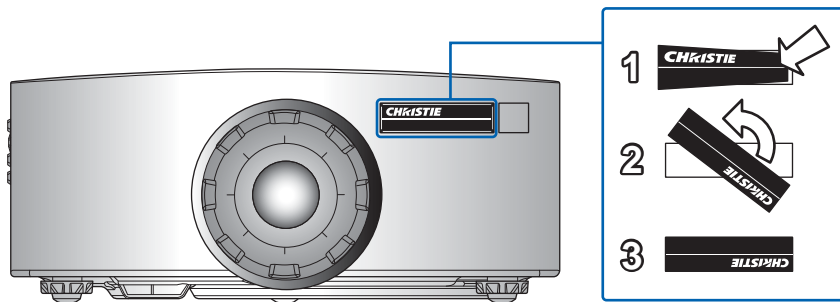

Operation

The projector has multilingual on-screen display (OSD) menus so you can make image adjustments and change a variety of settings.

Most of the projector controls are accessed from within the projector menu system. Several groups of related functions are selectable from the Main menu as shown below.

1. To display the Main menu, on the IR remote keypad or on the built-in keypad on the right side of the projector, press **MENU**.
2. To navigate within the menu and adjust a setting up or down, use the arrow keys.
3. To select a highlighted menu item or use it to change or accept a value, press **ENTER**.
You can then select the next item that you want to adjust in the menu and adjust it.
4. To exit menus if at top level, press **EXIT**.

Picture menu

The Picture menu sets the picture settings, wall color, and other settings for images.



Menu item	Description	Options
Picture Settings	Optimizes the projector for displaying images under certain conditions. It affects the following: <ul style="list-style-type: none"> • Gamma • Detail • White Peaking • Overscan • Brightness • Contrast • Color • Tint • Red Gain • Green Gain • Blue Gain • Red Offset • Green Offset • Blue Offset 	<ul style="list-style-type: none"> • Bright • Presentation • Film • REC709 • Blending • DICOM SIM. • User
Wall Color	Sets the wall color so that the projector can enhance the color performance customized for the specific wall.	<ul style="list-style-type: none"> • White • Gray 130
Brightness	Adjusts the intensity of the image.	0-100
Contrast	Adjusts the degree of difference between the lightest and darkest parts of the image and changes the amount of black and white in the image.	0-100
Detail	Adjusts the edge clarity of the image.	0-10
Color	Adjusts a video image from black and white to fully saturated color. (Video sources only).	0-100
Tint	Adjusts the red-green color balance in the image of NTSC video images. (NTSC video sources only).	0-100
Gamma	Adjusts the mid-range levels.	<ul style="list-style-type: none"> • Video • Film • Bright • CRT • DICOM
White Peaking	Increases the brightness of whites near 100%.	0-100
Color Temperature	Changes the intensity of the colors. Select a listed relative warmth value.	<ul style="list-style-type: none"> • Warm • Bright • Cool
Color Wheel Speed	Selects the color wheel speed from 2x or 3x. The color wheel speed defines the delay between the color wheel and the DMD. The higher the speed, the less rainbow effect on the screen.	<ul style="list-style-type: none"> • 2x • 3x

Menu item	Description	Options
HSG Adjustment	For more information on HSG adjustment, see HSG Adjustment on page 35.	<ul style="list-style-type: none"> • Red • Green • Blue • Cyan • Magenta • Yellow • White Gain • Reset to Default
Contrast Enhancement	Enables or disables the contrast enhancement function. Enable this function to raise the contrast ratio.	<ul style="list-style-type: none"> • Off • Dynamic Black—Auto adjusts the contrast ratio for video contents. • Real Black—Reduces the black level for dark images to raise the contrast ratio.
Color Space	Selects a color space specifically tuned for the input signal. Only useful for analog signals and certain digital sources.	<ul style="list-style-type: none"> • Auto • RGB(0~255) • RGB(16~235) • YUV
Save to User	Saves customized picture settings. You can save the following settings: <ul style="list-style-type: none"> • Brightness • Contrast • Color • Tint • Red Gain • Green Gain • Blue Gain • Red Offset • Green Offset • Blue Offset • Color Temperature • Gamma • Detail • White Peaking 	<ul style="list-style-type: none"> • Yes • No


HSG Adjustment

Hue, Saturation, and Gain (HSG) software controls the color regions R, G, B, C, M, Y, and W independently. To adjust the HSG settings, select **Picture > HSG Adjustment**.

Hue

Note the following about adjusting hue:


- Adjust the hue independently for each color (R,G,B,C,M, and Y).
- White does not have a hue input.
- A negative hue input provides a clockwise rotation of the color's hue.
- A positive hue input provides a counter-clockwise rotation of the color's hue.
- A zero input does not change the hue of the color.

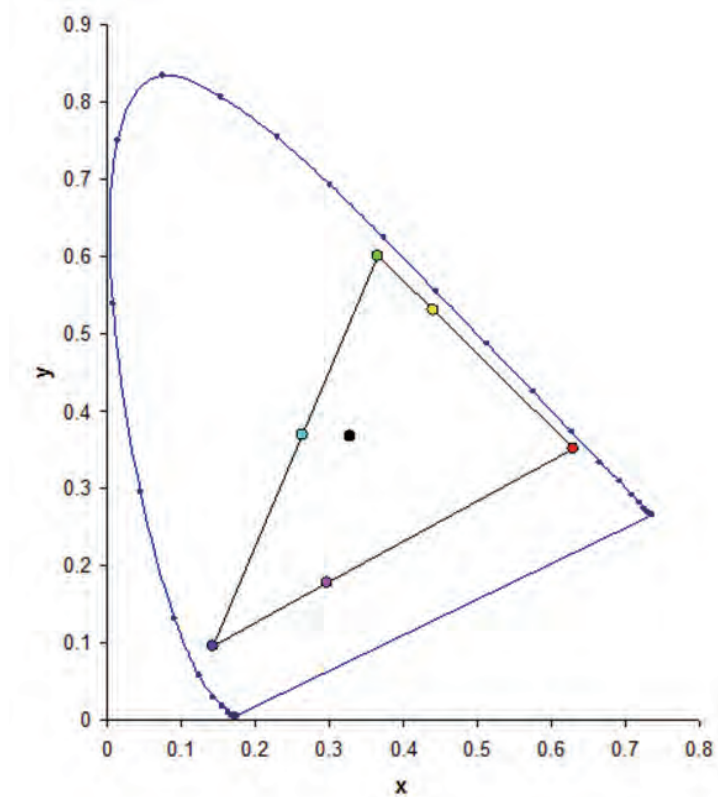

Saturation

Note the following about adjusting saturation:

- The saturation can be adjusted independently for each color (R,G,B,C,M, and Y).
- A saturation level of 0 removes all color from that region.
- A saturation level of 254 sets the color region to have maximum color.
- A saturation level of 127 does not change the saturation.

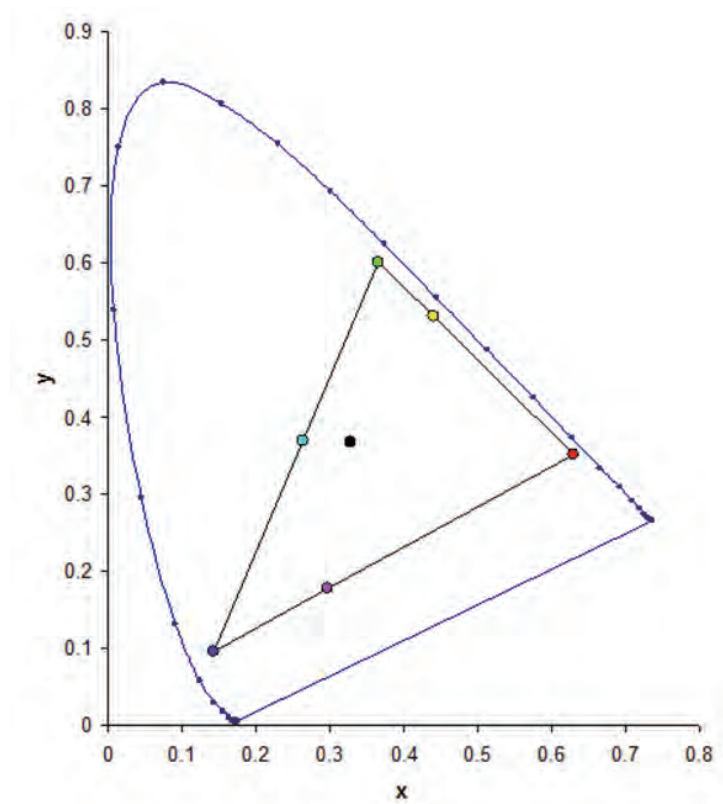

Gain

Note the following about adjusting gain:

- The gain can be adjusted independently for each color (R,G,B,C,M,Y, and W).
- The range of input is 0 to 254.
- The gain changes the intensity level of the respective color.
- A gain level of 127 disables the HSG controls for that color.
- A gain level less than 127 darkens the respective color.
- A gain level of 254 sets the color region to have maximum gain; however, clipping occurs on the signal.
- A gain of 127 is the nominal setting.
- White provides three gain level controls, one each for the R,G,B component of white.


Image blending

Adjust blend widths and settings to left, right, top and/or bottom sides to create a seamless multi-projector stitched image.

Image blending is only available in DWU7062-GS.


What is a blend?

A blend appears as a gradient strip along an edge of a projected image. It is darkest along the extreme edge of the image, and lightens nearer to the rest of the image (see below).

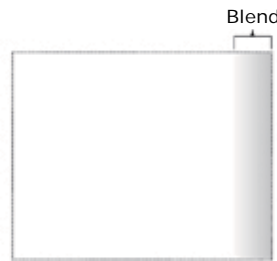

How are blends used?

Complementary blends between neighboring images can compensate for the extra brightness or intensity where these edges overlap. By controlling blend width and other properties, you can achieve uniformity across the group of images. Visible overlaps disappear, as shown below.

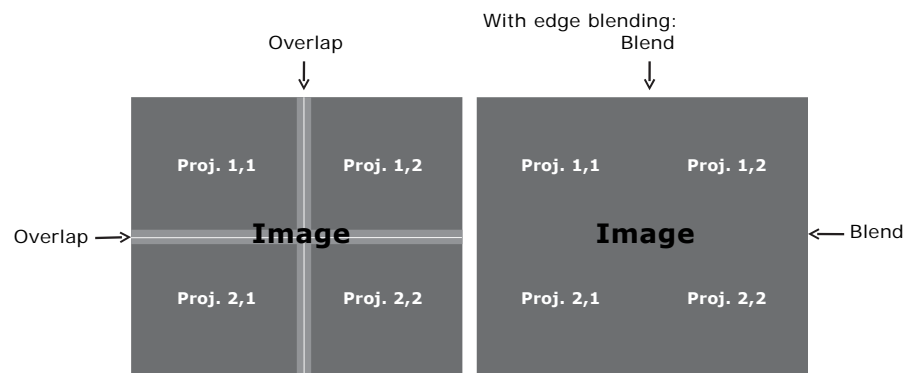

Blending regions can be defined on all sides—left, right, top, and bottom. The same gamma curve is used for all blending regions.

Screen menu

The Screen menu determines the size and position of the image on the screen.



Menu item	Description	Options
Size Presets	Displays an image with the detected size, or resizes the image by maximizing either the height, width, both, or resizes to the maximum size possible while keeping the original aspect ratio.	<ul style="list-style-type: none"> • Auto—Displays with the detected size. • 4:3—Retains 4:3 aspect ratio. • 16:9—Retains 16:9 aspect ratio. • 16:10—Retains 16:10 aspect ratio.
Pixel Phase	Adjust the pixel phase when the image shows shimmer or noise after pixel tracking is optimized. Pixel phase can adjust the phase of the pixel-sampling clock relative to the incoming signal. (Analog RGB signals only.)	0-100

Menu item	Description	Options
Pixel Track	Ensures that the image quality is consistent across the screen, the aspect ratio is maintained, and the pixel phase can be optimized. Steady flickering or several soft vertical stripes or bands across the entire image indicates poor pixel tracking. (Analog RGB signals only).	0-100
Horz Position	Moves the image right or left within the area of available pixels.	0-100
Vert Position	Moves the image up or down within the area of available pixels.	0-100
Digital Horz Zoom	Changes the size of projector's display area horizontally. If the display area has been resized by this setting, it can be moved by changing the Digital Horz Shift.	0-10
Digital Vert Zoom	Changes the size of projector's display area vertically. If the display area has been resized by this setting, it can be moved by changing the Digital Vert Shift settings.	0-10
Digital Horz Shift	Moves the display area horizontally if its size has been changed by the Digital Horz Zoom setting.	0-100
Digital Vert Shift	Moves the display area vertically if its size has been changed by the Digital Vert Zoom setting.	0-100
Ceiling Mount	Turns the image upside down for ceiling-mounted projection.	<ul style="list-style-type: none"> • Off • On • Auto—Projector would detect automatically.
Rear Projection	Reverses the image so that you can project from behind a translucent screen.	<ul style="list-style-type: none"> • Off • On
Geometry Correction	Provides several ways for warping control. For more information on geometry correction, see Geometry Correction on page 41.	<ul style="list-style-type: none"> • H. Keystone—Adjusts the keystone horizontally and make a more square image. 0-40 • V. Keystone—Adjusts the keystone vertically and make a more square image. 0-40 • 4 Corners—Allows the image to be squeezed to fit an area defined by moving each of the four corners' x and y position. • Grid Color—Choose the color of 4 corner, green or purple. • Reset—Restore the settings to its default value. • PC Mode off—User can do simple horizontal and vertical keystone, and 4-corner control by using the on-screen display. • PC Mode on—User can do arbitrary warping or blending control by using PC APP provided separately.

Menu item	Description	Options
PIP-PBP Settings	Displays an image with two sources in PIP mode or PBP mode. Refer to PIP/PBP Settings menu on page 42 and PIP/PBP layout and size on page 44.	<ul style="list-style-type: none"> • Function—Toggles between displaying two sources at once (main and PIP/PBP images) or one source only. • Main Source—Selects an active input to be used as the main image. • Sub Source—Selects an active input to be used as the PIP/PBP. • Main Layout—Sets the location of the PIP image on the screen. • Size—Selects the PIP size to small, medium, or large. • Swap—Changes the main image to PIP/PBP, and the PIP/PBP to main image. Swapping is available only when PIP/PBP is enabled.
Input Key	Lists or changes the sources.	<ul style="list-style-type: none"> • Change Sources • List all Sources • Auto Source
Auto Image	Forces the projector to reacquire and lock to the input signal. This is useful when signal quality is marginal.	<ul style="list-style-type: none"> • Normal—Supports all of the 4:3 input sources. • Wide—Supports all of the 16:9 input source and most of the 4:3 input source. <p>For the 4:3 input sources not recognized by Wide mode (for example, 1400 x 1050), perform Auto Image using Normal mode.</p>
Source Info	Displays the current source settings. (Read-only).	

Geometry Correction

Geometry correction provides two ways for warping control:

- PC Mode off—User can do simple horizontal and vertical keystone, and 4-corner control by using the on-screen display.
- PC Mode on—User can do arbitrary warping or blending control by using the PC APP provided separately.



- PC mode is only available in DWU7062-GS.

The following table provides information about the geometry correction feature compatibility:


Warp Function	4 Corners	Keystone
4 Corners	--	✓
Keystone	✓	--



- The Geometry Correction function for DWU6322-GS model is not supported while using PC mode.

H. Keystone


Adjust the keystone horizontally and make a more square image. Horizontal keystone is used to correct a keystoned image shape in which the left and right borders of the image are unequal in length, and the top and bottom are slanted to one of the sides. This is intended for use with horizontally on-axis applications.

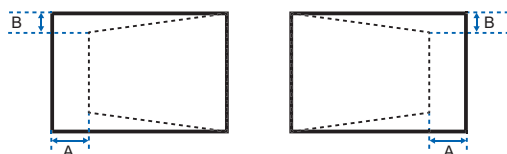

Ind.	1080P	WUXGA
A	10.00%	7.20%
B	6.50%	5.30%

V. Keystone


Adjust the keystone vertically and make a more square image. Vertical keystone is used to correct a keystoned image shape in which the left and right borders of the image are unequal in length, and the top and bottom are slanted to one of the sides. This is intended when for use with vertically on-axis applications.

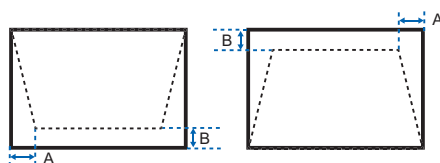

Ind.	1080P	WUXGA
A	4.40%	3.41%
B	8.93%	5.46%

4 Corners


Allow the image to be squeezed to fit an area defined by moving each of the four corners' x and y position.

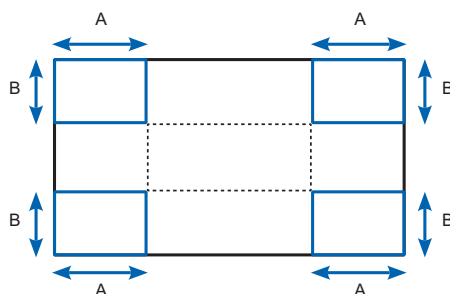

Ind.	1080P	WUXGA
A	7.30%	7.30%
B	7.40%	6.70%

PIP/PBP Settings menu

The PIP/PBP Settings menu determines how the main and PIP/PBP inputs are handled.

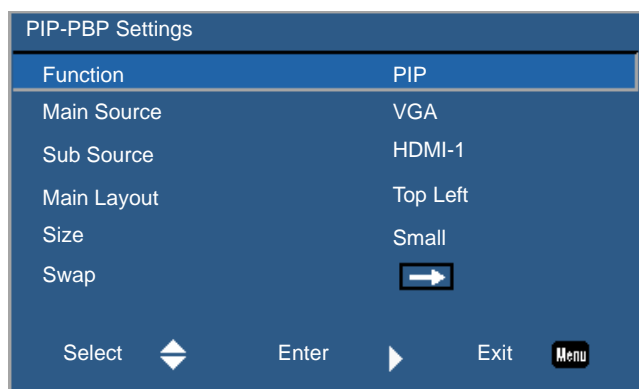















Menu item	Description	Options
Function	Toggles between displaying two sources at once (Main and PIP/PBP images) or one source only.	<ul style="list-style-type: none"> Off—Displays image from the main source only. PBP—Displays images from two sources by separating the screen into two parts. One source is displayed on the main screen and another source is displayed in an inset window. PIP—Displays images from two sources by separating the screen into half. One source is displayed on the left side of the screen and the other source on the right side of the screen. <p>Refer to PIP/PBP layout and size on page 44.</p>

Menu item	Description	Options
Main Source	Selects an active input to be used as the main image.	<ul style="list-style-type: none"> • VGA • HDMI-1 • HDMI-2 • DVI • HDBaseT
Sub Source	Selects an active input to be used as the sub image.	<ul style="list-style-type: none"> • VGA • HDMI-1 • HDMI-2 • DVI • HDBaseT
Main Layout	Sets the location of the PIP/PBP image on the screen. Refer to PIP/PBP layout and size on page 44.	<ul style="list-style-type: none"> • Top Left • Top Right • Bottom Left • Bottom Right
Size	Selects the PIP/PBP size to small, medium, or large.	—
Swap	Changes the main image to PIP/PBP, and the PIP/PBP to main image. Swapping is available only when PIP/PBP is enabled.	—

PIP/PBP layout and size

A P indicates the primary source region (lighter color) and an asterisk (*) indicates both regions are the same size.

PIP Layout	PIP Size		
	Small	Medium	Large
PIP-Bottom Right			
PIP-Bottom Left			
PIP-Top Left			
PIP-Top Right			

PBP Layout	PBP Size		
	Small	Medium	Large
PBP, Main Left	--	--	
PBP, Main Right	--	--	

Settings Menu

The Settings menu sets the language, menu location, LAN (standby), and other preferences for the projector.



Menu item	Description	Options
Language	Selects an available language for the on-screen display.	<ul style="list-style-type: none"> • English • Simplified Chinese • French • German • Italian • Japanese • Korean • Russian • Spanish

Menu item	Description	Options
Menu Location	Sets up the on-screen display menu location.	<ul style="list-style-type: none"> • Left Top • Right Top • Center • Left Bottom • Right Bottom
LAN (Standby)	Determines the power modes for projector.	<ul style="list-style-type: none"> • 0.5W mode—Low power mode. • Communication mode—Normal power mode.
Test Pattern	Chooses the required internal test pattern to display.	<ul style="list-style-type: none"> • None • Grid • White • Black • Checkerboard • Color Bars
Direct Power On	Automatically turns the projector on when electrical power is connected.	<ul style="list-style-type: none"> • On • Off
Hot-Key Settings	<p>Assigns a different function to the hot key on the IR remote keypad by highlighting the function in the list and pressing Enter.</p> <p>Chooses a function that does not already have a dedicated button, and assign the hot key to that function, allowing you to quickly and easily use the chosen function.</p>	<ul style="list-style-type: none"> • Blank Screen • Size Presets • Freeze Screen • Projector Info
Reset to Default	Restores all settings to their default value. It does not reset network but it resets RS232.	<ul style="list-style-type: none"> • Yes • No
Service	Displays projector information, sets test patterns, error logs, and high temperature warnings.	<ul style="list-style-type: none"> • Projector Info—Displays the current projector settings. (Read-only) • Factory Reset—Restores all settings to their default value. It does not reset network but it resets RS232. • Test Pattern—Sets the required internal test pattern to display. To turn off a test pattern, select Off. • Wheel Index (2x)—Sets the wheel index to Speed 2X. Only use this setting when a new main board is installed, and the picture quality needs to be optimized. • Wheel Index (3x)—Sets the wheel index to Speed 3X. Only use this setting when a new main board is installed, and the picture quality needs to be optimized. • Error Log—Shows the projector error log for debug. • Laser Diode Info—Displays the information of each laser diode bank including its voltage, current, and temperature.


Language menu

Select an available language for the on-screen display.




Test Pattern menu

Choose the required internal test pattern to display, or select **None** to turn off a test pattern.



Light Source menu

The Light Source menu sets the light source mode and power preferences.

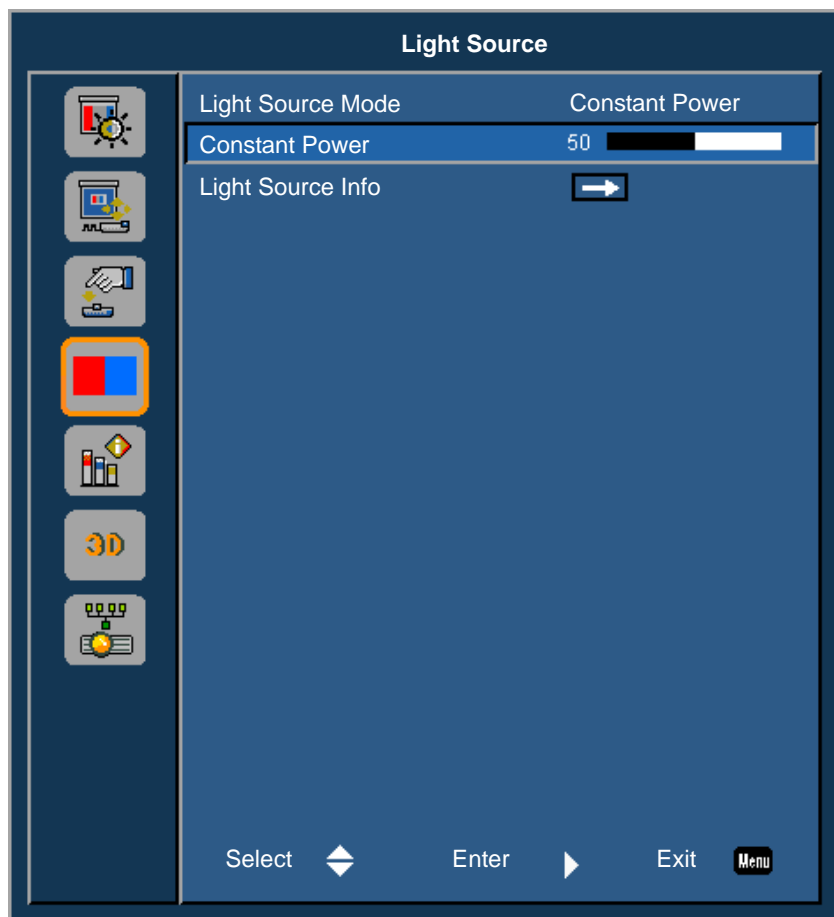

Menu item	Description	Options
Light Source Mode	Sets the light source mode.	<ul style="list-style-type: none"> Constant Power Constant Intensity ECO 1—The factory default brightness is 80%. ECO 2—The factory default brightness is 50%.
Constant Power	Sets the value of the laser diode power.	0-99
Light Source Info	Displays the total hours of the projector, the total hours of the laser diode that have been used, and information on the light sensor calibration.	—

Options Menu

The Options menu allows to select the splash screen, configure auto shutdown parameters, set sleep timer, and configure other options for the projector.




Menu item	Description	Options
Splash Screen Setup	Selects the splash screen.	<ul style="list-style-type: none"> • Factory Logo • Blue • Black • White
Auto Shutdown	Automatically turns the projector off after no signals are detected for a preset number of minutes. If an active signal is received before the projector powers down, the image is displayed.	0-120 mins

Menu item	Description	Options
Sleep Timer	Allows the projector to automatically power off after it has been on for a specified amount of time.	0-990 mins
Lens Settings	Adjusts the lens parameters.	<ul style="list-style-type: none"> • Focus—Adjusts the focus point of the image. • Zoom—Adjust the zoom of the image in or out. • Lens Shift—Shifts the lens up and down, or left and right. • Lock Lens Motors—Selects this function to prevent all lens motors from moving. It will disable the Zoom, Focus, Horizontal and Vertical Position settings, effectively locking out any changes and overriding all other lens features. This is particularly useful to prevent accidental lens position changes in multi-projector installations. • Lens Calibration—Calibrates to move the lens back to center.
High Altitude	Enables or disables high altitude mode.	<ul style="list-style-type: none"> • On—Enables high altitude mode for altitudes ≥ 2000 m. The fan operates at high speed to ensure sufficient air flow for high altitudes. • Off—Disables high altitude mode. For altitudes below 2000m.
PIN Protect	Protects your projector with a password. Once enabled, you must enter the password before you can project an image.	—
Remote Settings	Turns on/off remote settings.	<ul style="list-style-type: none"> • Top • Front • HDBaseT • Projector Address. 0-9.
Information Hide	Hides or displays projector settings.	<ul style="list-style-type: none"> • On • Off
Backlight Preferences	Controls the backlight behavior and status LED.	<ul style="list-style-type: none"> • Keypad Backlight • Status LED
Information	Displays the projector settings. (Read-only)	—

Information menu

The read-only Information menu lists a variety of details about the standard and optional components currently detected in the projector.

For DWU Models

Information	
Model Name	DWU6322-GS
Serial Number	FCUYYWWXXX
Native Resolution	0
FW Version	V1.4.0
MCU FW	A00.92
DDP FW	V06.30
M9813 FW	M00.71
Motor FW	K00.20
PW808 FW	B04.11
Main Input	VGA
Main Signal Format	-
Main Pixel Clock	-
Main Sync Type	-
Main Horz Refresh	-
Main Vert Refresh	-
PIP/PBP Input	HDMI-1
PIP/PBP Signal Format	-
PIP/PBP Pixel Clock	-
PIP/PBP Sync Type	-
PIP/PBP Horz Refresh	-
PIP/PBP Vert Refresh	-
Light Source Power	0
Light Source Hours	0
Standby Mode	Communication mode
Lens Lock Settings	Allow
IP Address	-
DHCP	Off
System Temperature	-
Exit 	

Information	
Model Name	DWU7062-GS
Serial Number	BCUYYWWXXX
Native Resolution	0
FW Version	V1.4.0
MCU FW	A00.92
DDP FW	V06.30
M9813 FW	M00.71
Motor FW	K00.20
PW808 FW	B04.11
Main Input	VGA
Main Signal Format	-
Main Pixel Clock	-
Main Sync Type	-
Main Horz Refresh	-
Main Vert Refresh	-
PIP/PBP Input	HDMI-1
PIP/PBP Signal Format	-
PIP/PBP Pixel Clock	-
PIP/PBP Sync Type	-
PIP/PBP Horz Refresh	-
PIP/PBP Vert Refresh	-
Light Source Power	0
Light Source Hours	0
Standby Mode	Communication mode
Lens Lock Settings	Allow
IP Address	-
DHCP	Off
System Temperature	-
<div>Exit</div> <div>Menu</div>	

3D menu

The 3D menu sets the usage of 3D function and its settings.



Menu item	Description	Options
3D	Enables 3D content detection.	<ul style="list-style-type: none"> On Auto
3D Invert	Inverts the 3D sync signal when using a single projector.	<ul style="list-style-type: none"> On Off
3D Format	Sets the 3D format. Supports mandatory 3D formats and frame sequential 3D@120Hz.	<ul style="list-style-type: none"> Frame Packing Side-by-Side(Half) Top and Bottom Frame Sequential (DWU7062-GS only)
1080p@24	Sets the 3D resolution 1080p@24 frequency.	<ul style="list-style-type: none"> 96Hz 144Hz

Menu item	Description	Options
3D Sync Out	Transmits a 3D sync signal by the 3D sync output corrector to the emitter or to the next projector for 3D blending purposes.	—
Frame Delay	Corrects asynchronous displaying of images under 3D blending.	—
L/R Reference	Source of the left or right reference.	<ul style="list-style-type: none"> • 1st Frame—This is used for single 3D projector. • Field GPIO—Select Field GPIO to make the first 3D output signal the same for multi-projectors application.

Communications menu


The Communications menu sets the LAN parameters, network status, and other settings for the projector.



Menu item	Description	Options
LAN	Determines the communication settings.	<ul style="list-style-type: none"> • DHCP—Turns the DHCP on or off. • IP Address—Assigns the network IP address. • Subnet Mask—Assigns the network subnet mask. • Default Gateway—Assigns the network default gateway. • MAC Address—Displays the network MAC address value. • Apply—Apply the LAN configuration when the setting is changed or added.
Network		<ul style="list-style-type: none"> • Projector Name—Displays the projector name. • Show Network Messages—Turns network messages on or off. • Restart Network—Restarts the network. • Network Factory Reset—Performs factory reset on the network settings. The Projector Name, IP Address (LAN), Start IP and End IP, and SNMP settings can be reset.
Serial Port Baud Rate	Selects the serial port and baud rate.	<ul style="list-style-type: none"> • 1200 • 2400 • 4800 • 9600 • 14400 • 19200 • 38400 • 57600 • 115200
Serial Port Echo	Controls whether the serial port echoes characters.	<ul style="list-style-type: none"> • Off • On
Serial Port Path	Sets the serial port path to RS232 or HDBaseT.	<ul style="list-style-type: none"> • RS232 • HDBaseT

LAN settings

The LAN menu sets the DHCP, IP address, and other network settings for the projector.

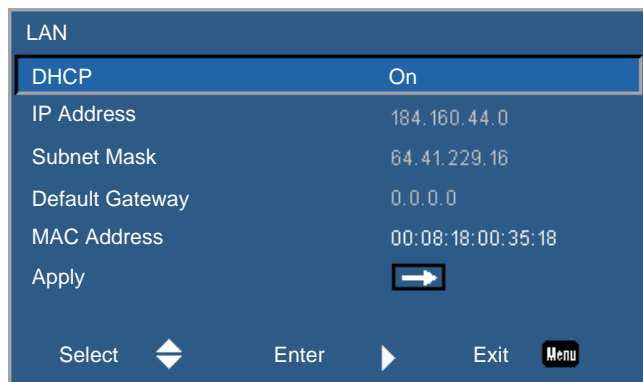

Using web user interface

The web user interface provides an alternate way to access the menu functionality on the projector. You can log on to the web user interface from a computer or mobile devices.

System requirements

To use the web user interface, make sure your devices and software meet the minimum system requirements.

Minimum system requirements	
Hardware	<ul style="list-style-type: none"> • Projector • Power cord, provided with the projector and appropriately rated for your region • RJ45 cable (CAT-5e) or wireless dongle • PC, laptop, mobile phone, or tablet installed with a web browser
Software	<ul style="list-style-type: none"> • Firmware upgrade program • Web browser <ul style="list-style-type: none"> • Internet Explorer 11 • Microsoft Edge 40 • Firefox 57 • Chrome 63 • Safari 11 • Operating system of mobile devices <ul style="list-style-type: none"> • iOS 10 • Android 5

Logging on to the web user interface

Log on to the web user interface by following the steps below.

1. Connect the projector to AC and power it on.
2. When network is available, connect the projector and computer to the same network.
 - a. To check the projector address in a wired network, select **Menu > Configuration > Communications > LAN > IP Address**.
 - b. To check the projector address in a wireless network, select **Menu > Configuration > Communications > WLAN > Default Gateway**.
3. If network is unavailable, connect the projector to the computer with an RJ45 cable.
 - a. Set the Default Gateway and Subnet Mask of the computer to match the projector.
 - b. Set the IP address of the computer to match the first three numbers of the projector.
 For example, if the projector IP address is 192.168.000.100, set the computer IP address to 192.168.000.xxx, where xxx is not 100.
4. Open a web browser and type the projector address in the browser address bar.
5. In the Username field, type the username.
 The default username is admin.
6. In the Password field, type the password.
 The default password is admin.
7. Click **Login**.

Setting the system notification

Configure the Simple Network Management Protocol (SNMP) settings for receiving notifications from the system directly to the email. SNMP provides network administrators with a common way to manage their network devices from a single remote location. Administrators can use the SNMP interface to query a number of devices to see their current status or configuration. Operators can change configuration values and configure trap notifications to be sent when certain events occur (for example, loss of signal, power state change, and so on).

Emails are sent to the mail server configured in the projector settings. Up to two user email accounts can be selected. Important information regarding the event is located in the body content of the email.

SNMP traps are notifications that are sent from the projector. They are only received by a trap receiver (MIB Browser) in the computer.

1. From the web user interface, select **Network > Notification**.
See [Using web user interface](#) on page 56 for further information.
2. Set up the appropriate SNMP setting:
 - **SNMP Read Community**—Plain text password that must also be entered in the MIB browser. This password allows various settings in the projector to be queried.
 - **SNMP Location**—Use as a description to where a projector is located in a building. SNMP emails sent specify this location.
 - **Trap IP Address**—Fill in this field with the IP address of the computer, on which you want to view received traps from the projector.
 - **Sender Email**—Set the email account as the source of the system notifications.
 - **SMTP Server**—Enter the IP address of the mail server.
 - **Recipient**—Enter up to two email accounts to receive the system notification.
3. Set the SNMP actions for the system events:
 - **Disabled**—Disable email notification
 - **SNMP Trap**—Send the notification to the trap receiver (MIB Browser).
 - **Email**—Send the notification to the email recipient.
 - **SNMP Trap and Email**—Send the notification to the trap receiver and the email recipient.
4. To apply the notification settings, click **Save**.

Troubleshooting

If you cannot resolve an issue using the information provided in this section, contact your reseller or service center.

No image appears on screen

The image does not appear on the screen.

Resolution

- Make sure all the cables and power connections are correctly and securely connected.
See [Installation](#) on page 19 for more details.
- Check if the Light Status LED is in Green.
- Make sure you have removed the lens cap and the projector is switched on.

Incorrectly displayed image

The image is partial, is scrolling, or is otherwise incorrectly displayed.

Resolution

If using a PC:

1. On control panel or IR remote keypad, press **AUTO**.
2. Select **My Computer > Control Panel**.
3. Double-click **Display**.
4. Select the **Settings** tab.
5. Verify your display resolution setting is lower than or equal to WUXGA (1920 × 1200).
6. Click **Advanced Properties**.
7. If the projector is still not projecting the entire image, change the monitor display:
 - a. Verify the resolution setting is lower than or equal to WUXGA (1920 × 1200).
 - b. Switch to the **Monitor** tab.

- c. Click **Change**.
- d. Click **Show all devices**.
- e. Under the SP box, select **Standard monitor types**.
- f. Under the Models box, select the appropriate resolution mode.
- g. Verify that the resolution setting of the monitor display is lower than or equal to WUXGA (1920 × 1200).

If using a Notebook:

1. On control panel or IR remote keypad, press **AUTO**.
2. Adjust resolution of the computer.
3. To send signal out from notebook to projector, press the keys listed below for your Notebook manufacturer (for example, [Fn] + [F4]):

Notebook brand	Function keys
Acer	[Fn] + [F5]
Asus	[Fn] + [F8]
Dell	[Fn] + [F8]
Gateway	[Fn] + [F4]
IBM/Lenovo	[Fn] + [F7]
HP/Compaq	[Fn] + [F4]
NEC	[Fn] + [F3]
Toshiba	[Fn] + [F5]
Mac Apple	System Preference > Display > Arrangement > Mirror display

4. If you experience difficulty changing resolutions or your monitor freezes, restart all equipment including the projector.

Presentation is not displayed

The screen of the Notebook or PowerBook computer is not displaying your presentation.

Details

Some Notebook PCs may deactivate their own screens when a second display device is in use. Each has a different method of reactivation.

Resolution

Refer to your computer manual for information on changing the method of reactivation.

Unstable or flickering images

The image is unstable or is flickering when projected.

Resolution

- To correct the pixels, use Pixel Track and Pixel Phase.
- Change the monitor color setting on your computer.

Vertical flickering bar

The image has a vertical, flickering bar when projected.

Resolution

- To make an adjustment, use **Auto Image**.
- Check and reconfigure the display mode of your graphic card to make it compatible with the projector.

Image is out of focus

The image is out of focus on the screen.

Resolution

- Make sure both lens caps (front and back) are removed.
- Adjust the lens focus to fit the screen.
- Make sure the projection screen is between the required distance.

Image is stretched

The image is stretched when displaying a 16:9 DVD title.

Details

When you play anamorphic DVD or 16:9 DVD, the projector shows the best image if the projector display mode is set to 16:9 in the on-screen display.

Resolution

- If you play 4:3 format DVD titles, change the format to 4:3 in the projector on-screen display.
- If the image is still stretched, adjust the aspect ratio by setting the display format as 16:9 (wide) aspect ratio type on your DVD player. For more details, see [Screen menu](#) on page 38.

Image is not the correct size

The image is too small or too large.

Resolution

- Adjust the lens zoom to fit.
- Verify you are using the correct lens.
- Change the position of the projector.

Connection fail when DHCP on

IP address shows 0.0.0.0 when DHCP is on.

Resolution

- Make sure RJ45 cable is connected correctly and securely to the projector and the network device.
- Check if there is a DHCP server in this network.
- After checking the steps above, refresh the network setting by turning DHCP off and turning back on.
- Contact your IT engineer if the steps above cannot resolve the network issue.



- Turning off DHCP returns back to default setting if DHCP on fails.

Connection fail with new IP address

User cannot control the projector after setting up the new IP address manually.

Resolution

- Make sure RJ45 cable is connected correctly and securely to the projector and the network device.
- Make sure the IP address of projector and the controlling device are set to the same region with different IP addresses.
- Connect the projector directly to the computer. If it is successfully connected, check the network environment.
- Make sure every device has a unique IP address.
- Contact your network engineer if the steps above cannot resolve the network issue.

Specifications

Learn about the product specifications. Due to continuing research, specifications are subject to change without notice.

Inputs

The following table details the inputs for GS Series. RB in the Resolution column indicates reduced blanking.

Signal Type	Resolution	Frame rate (Hz)	HDMI	VGA	DVI
PC	640x350	85	•		
	640x400	85	•	•	•
	640x480	59	•		
	640x480	60	•	•	•
	640x480	72	•	•	•
	640x480	75	•	•	•
	640x480	85	•	•	•
	720x400	85	•	•	•
	768x480	60	•		
	768x480	75	•		
	768x480	85	•		
	800x600	50	•		
	800x600	56	•	•	•
	800x600	60	•	•	•
	800x600	72	•	•	•
	800x600	75	•	•	•
	800x600	85	•	•	•
	848x480	50	•		
	848x480	60	•		
	848x480	75	•		

Signal Type	Resolution	Frame rate (Hz)	HDMI	VGA	DVI
PC	848x480	85	•		
	960x600	50	•		
	960x600	60	•		
	960x600	75	•		
	960x600	85	•		
	1024x768	60	•	•	•
	1024x768	75	•	•	•
	1024x768	85	•	•	•
	1064x600	50	•		
	1064x600	60	•		
	1064x600	75	•		
	1064x600	85	•		
	1152x720	50	•		
	1152x720	60	•		
	1152x720	75	•		
	1152x720	85	•		
	1152x864	60	•	•	•
	1152x864	70	•	•	•
	1152x864	75	•	•	•
	1152x864	85	•	•	•
	1280x720	50	•		
	1280x720	60	•	•	•
	1280x720	75	•	•	•
	1280x720	85	•	•	•
	1280x768	60	•	•	•
	1280x768	75	•	•	•
	1280x768	85	•	•	•
	1280x800	50	•	•	•
	1280x800	60	•	•	•
	1280x800	75	•	•	•
	1280x800	85	•	•	•
	1280x960	60	•	•	•
	1280x960	75	•	•	•
	1280x960	85	•	•	•

Signal Type	Resolution	Frame rate (Hz)	HDMI	VGA	DVI
PC	1280x1024	50	•		
	1280x1024	60	•	•	•
	1280x1024	75	•	•	•
	1280x1024	85	•	•	•
	1360x768	50	•		
	1360x768	60	•		
	1360x768	75	•		
	1360x768	85	•		
	1366x768	60	•	•	•
	1400x900	60	•	•	•
	1400x1050	50	•		
	1400x1050	60	•	•	•
	1400x1050	75	•	•	•
	1440x900	60	•	•	•
	1440x900	75	•		
	1600x900	60	•		
	1600x1200	50	•		
	1600x1200	60	•	•	•
	1680x1050	50	•		
	1680x1050	60	•	•	•
	1680x1050	75	•		
	1704x960	50	•		
	1704x960	60	•		
	1728x1080	50	•		
	1728x1080	60	•		
	1864x1050	50	•		
	1864x1050	60	•		
	1920x1080	50	•		
	1920x1080	60	•	•	•
	1920x1200RB	60	•	•	•
	1920x1200RB	50	•	•	•
NTSC	NTSC (M, 4.43)	60			

Signal Type	Resolution	Frame rate (Hz)	HDMI	VGA	DVI
PAL	PAL (B,G,H,I)	50			
	PAL (N)	50			
	PAL (M)	60			
SECAM	SECAM (M)	50			
SDTV	480i	60	•	•	•
	576i	50	•	•	•
EDTV	480p	60	•	•	•
	576p	50	•	•	•
HDTV	1080i	25	•	•	•
	1080i	29	•	•	•
	1080i	30	•	•	•
	720p	50	•	•	•
	720p	59	•	•	•
	720p	60	•	•	•
	1080s	23	•		
	1080s	24	•		
	1080p	23	•	•	•
	1080p	24	•	•	•
	1080p	25	•	•	•
	1080p	29	•	•	•
	1080p	30	•	•	•
	1080p	50	•	•	•
	1080p	59	•	•	•
	1080p	60	•	•	•

PIP/PBP compatibility

The following table details the PIP/PBP compatibility.

PIP/PBP Matrix	VGA	DVI-D	DHMI-2	DHMI-1	HDBaseT
VGA	-	•	•	•	•
DVI-D	•	-	•	-	-
HDMI-2	•	•	-	•	•
HDMI-1	•	-	•	-	-
HDBaseT	•	-	•	-	-

- Dot (•): PIP/PBP combinations are enabled.
- Dash (-): PIP/PBP combinations are disabled.

Key features

- WUXGA 0.67" 1920 × 1200 resolution
- Projection lens compatibility:
 - Horizontal offset ranges: +/-30%
 - Vertical offset ranges: +/-100% (WUXGA)
Measurements are based on industry standards where offset is calculated as a ratio of the number of pixels shifted up/ down to half the image size.
- SNMP traps and email notifications
- 10-bit image processor electronics with modular design
- All video formats can be resized to full screen either horizontally or vertically while maintaining aspect ratio
- The projector can be operated using any of the following:
 - The built-in keypad, an infrared (IR) remote control, a wired remote control, a PC/device using serial communications (Ethernet or RS232)
 - A Web page via Ethernet
- Weight:
 - Maximum product weight (with lens removed): 16.5 kg (36 lbs)
- Built-In keypad

List of components

This projector comes with all the items listed below. Check to make sure your package is complete. If anything is missing, contact your dealer.

- IR remote control (P/N: 003-004468-01)
- AC power cord (China)
- DVI to HDMI dongle
- Product Safety Guide

Due to the difference in applications for each country, some regions may have different accessories.

The following accessories are available for the projector:

- Cable Cover GS White (P/N: 140-106108-XX)
- Cable Cover GS Black (P/N: 140-106119-XX)
- Optional Lens 0.75 - 0.95 (P/N: 140-119102-XX)
- Optional Lens 0.95 - 1.22 (P/N: 140-101103-01)
- Optional Lens 1.22-1.52 (P/N: 140-131106-XX)
- Optional Lens 1.52 - 2.92 (P/N: 140-102104-01)
- Optional Lens 2.90 - 5.50 (P/N: 140-107109-XX)
- Optional Lens 0.36 (P/N: 140-133108-XX)
- Christie One Mount (P/N: 108-506102-XX)
- One Mount Extender Rod (P/N: 121-125109-XX)
- One Mount Rigging Kit (P/N: 121-126100-XX)

Physical specifications

Learn the dimensions and weight of the projector.

Description	Dimensions
Projector size	
Overall size (L x W x H) (excluding lens, feet)	456 mm (18.0 in) x 505 mm (19.9 in) x 190 mm (7.5 in)
Overall size, shipping without lens (L x W x H) (includes packaging)	596 mm (23.5 in) x 626 mm (24.6 in) x 341 mm (13.4 in)
Projector Weight	
Without lens	16.5 kg (36 lbs)
Shipping without lens (includes packaging)	22.3 kg (49.2 lbs)
Operating position	
360 degree front to back and portrait capable	Free orientation and no tilt range constraint.

Physical operating environment

Provides specifications for the operating environment.

- Operating: 5°C to 40°C
 - 5 to 40 degrees C (0 to 2500 ft)
 - 5 to 35 degrees C (2500 to 5000 ft)
 - 5 to 30 degrees C (5000 to 10000 ft)
- Storage temperature range: -10°C to 60°C
- Humidity range: 10% to 85% RH (maximum), non condensing
- Storage humidity range: 5% to 90% RH (maximum), non condensing
- Operating altitude: 10,000 ft maximum

Power requirements

Learn the power requirements for the projector.

Parameter	Requirement
Rated voltage	
Input	100-240V
Rated current	
Input	7A
Line frequency	50/60Hz
AC input coupler	
Inrush current	76A max
Maximum power consumption	
Input	650W
Maximum power consumption, ECO mode	
Input	470W
Maximum power consumption, WLAN mode	
Input	< 8.0W
Maximum power consumption, Standby mode	
Input	< 0.5W

Regulatory

This product conforms to the following regulations related to product safety, environmental requirements and electromagnetic compatibility (EMC).

Safety

- CSA C22.2 No. 60950-1
- UL 60950-1
- IEC 60950-1
- EN 60950-1

Laser Safety

- IEC 60825-1
- IEC 62471
- FDA CDRH CFR 1040.10
- FDA CDRH CFR 1040.11

Electro-Magnetic Compatibility

Emissions

- FCC CFR47, Part 15, Subpart B/ANSI C63.4, Class A - Unintentional Radiators
- CISPR32/EN55032 Class A - Information Technology Equipment
- ICES/NMB003 (A) - Information Technology Equipment

Immunity

- CISPR 24/EN55024 EMC Requirements - Information Technology Equipment

Environmental

- The product conforms to:
 - EU Directive (2011/65/EU) on the restriction of the use of certain hazardous substances (RoHS) in electrical and electronic equipment and the applicable official amendment(s).
 - EU Regulation (EC) No. 1907/2006 on the registration, evaluation, authorization and restriction of chemicals (REACH) and the applicable official amendment(s).
 - EU Directive (2012/19/EU) on waste and electrical and electronic equipment (WEEE) and the applicable official amendment(s).
 - China Ministry of Information Industry Order No.39 (02/2006) on the control of pollution caused by electronic information products, the hazardous substances concentration limits (SJ/T11363-2006), and the applicable product marking requirement (SJ/T11364-2006).

Marking

- This product conforms to all relevant Canadian, US, and European directives, standards, safety, health and environmental concerns. International packaging recycling marks conform to:
 - EU Directive (2012/19/EU) on waste and electrical and electronic equipment (WEEE).
 - EU Directive (94/62/EC) on packaging and packaging waste.
 - China packaging recycling mark standard (GB18455-2001).

Federal Communications Commission (FCC) warning

- A shielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.
- Use only shielded signal cables to connect I/O devices to this equipment.

On-screen display tree

The following table provides the on-screen display menu.

Level 1	Level 2	Level 3 (Or List)	Level 4 (Or List)	Level 5 (Or List)	Level 6 (Or List)	Default
Picture	Picture Settings	Bright				Depends on signal type.
		Presentation				
		Film				
		REC709				
		Blending				
		DICOM SIM.				
		User				
	Wall color	White				White
		Gray 130				
	Brightness	0 ~ 100				Depends on color mode.
	Contrast	0 ~ 100				Depends on color mode.
	Detail	0 ~ 10				5
	Color	0 ~ 100				VGA component signal only.
	Tint	0 ~ 100				VGA component signal only (white color).
	Gamma	Video				Depend on color mode.
		Film				
		Bright				
		CRT				
		DICOM				
	White Peaking	0 ~ 100				
	Color Temperature	Warm				Bright
		Bright				
		Cool				

Level 1	Level 2	Level 3 (Or List)	Level 4 (Or List)	Level 5 (Or List)	Level 6 (Or List)	Default
Picture	Color Wheel Speed	2X				3X
		3X				
	HSG Adjustment	Red	Hue		1 ~ 199	
			Saturation		0 ~ 199	
			Gain		1 ~ 199	
		Green	Hue		1 ~ 199	
			Saturation		0 ~ 199	
			Gain		1 ~ 199	
		Blue	Hue		1 ~ 199	
			Saturation		0 ~ 199	
			Gain		1 ~ 199	
		Cyan	Hue		1 ~ 199	
			Saturation		0 ~ 199	
			Gain		1 ~ 199	
		Magenta	Hue		1 ~ 199	
			Saturation		0 ~ 199	
			Gain		1 ~ 199	
		Yellow	Hue		1 ~ 199	
			Saturation		0 ~ 199	
			Gain		1 ~ 199	
		White Gain	Red		1 ~ 199	
			Green		0 ~ 199	
			Blue		1 ~ 199	
		Reset to Default				
	Contrast Enhancement	Off				Off
		Dynamic Black				
		Real Black				
	Color Space	Auto				Auto
		RGB(0-255)				
		RGB(16-235)				
		YUV				
	Save to User	Yes				
		No				

Level 1	Level 2	Level 3 (Or List)	Level 4 (Or List)	Level 5 (Or List)	Level 6 (Or List)	Default
Screen	Size Presets	Auto				
		4:3				
		16:9				
		16:10				
	Pixel Phase	0 ~ 100				
	Pixel Track	0 ~ 100				
	Horz Position	0 ~ 100				
	Vert Position	0 ~ 100				
	Digital Horz Zoom	100% to 200%	0 ~ 10			0
	Digital Vert Zoom	100% to 200%	0 ~ 10			0
	Digital Horz Shift		0 ~ 100			50
	Digital Vert Shift		0 ~ 100			50
	Ceiling Mount	Off				Auto
		On				
		Auto				
	Rear Projection	Off				Off
		On				
	Geometric Correction	H. Keystone	0~40			20
		V. Keystone	0~40			20
		4 Corners	Top Left Horz Adjust			
			Top Left Vert Adjust			
			Top Right Horz Adjust			
			Top Right Vert Adjust			
			Bottom Left Horz Adjust			
			Bottom Left Vert Adjust			
			Bottom Right Horz Adjust			
			Bottom Right Vert Adjust			

Level 1	Level 2	Level 3 (Or List)	Level 4 (Or List)	Level 5 (Or List)	Level 6 (Or List)	Default
Screen	Geometric Correction	Grid Color	Purple			Green
			Green			
		Reset	Yes			
			No			
		PC Mode	Off			
			On			
	PIP-PBP Settings	Function	Off			Off
			PBP			
			PIP			
		Main Source	VGA			Current Source.
			HDMI-1			
			HDMI-2			
			DVI			
			HDBaseT			
		Sub Source	VGA			Depends on current source.
			HDMI-1			
			HDMI-2			
			DVI			
			HDBaseT			
		Main Layout	Top Left			Top Left
			Top Right			
			Bottom Left			
			Bottom Right			
		Size	Small			Medium
			Medium			
			Large			
		Swap				
	Input key	Change Sources				
		List all Sources				
		Auto Source				
	Auto Image	Normal				Wide
		Wide				

Level 1	Level 2	Level 3 (Or List)	Level 4 (Or List)	Level 5 (Or List)	Level 6 (Or List)	Default
Screen	Source Info	Active Source				
		Signal Format				
		Aspect Ratio				
		Resolution				
		Vert Refresh				
		Horz Refresh				
		Pixel Clock				
		Sync Type				
		Color Space				
		PIP/PBP (When PIP/PBP active)				
Settings	Language	English				English
		Simplified Chinese				
		French				
		German				
		Italian				
		Japanese				
		Korean				
		Russian				
		Spanish				
	Menu Location	Left Top				Left Top
		Right Top				
		Center				
		Left Bottom				
		Right Bottom				
	LAN (Standby)	0.5W mode				Communication
		Communication mode				
	Test Pattern	None				None
		Grid				
		White				
		Black				
		Checkerboard				
		Color Bars				

Level 1	Level 2	Level 3 (Or List)	Level 4 (Or List)	Level 5 (Or List)	Level 6 (Or List)	Default
Settings	Direct Power On	On				Off
		Off				
	Hot-Key settings	Blank Screen				Blank Screen
		Size Presets				
		Freeze Screen				
		Projector Info				
	Reset to Default	Yes				
		No				
	Service					
Light source	Light Source Mode	Constant Power				Constant Power
		Constant Intensity				
		ECO 1 (80%)				
		ECO 2 (50%)				
	Constant Power	0 to 99 (30% to 100%)				99
	Light Source Info	LD Hours				
Options	Splash Screen Setup	Factory Logo				Factory Logo
		Blue				
		Black				
		White				
	Auto shutdown	0~120 (one step: 5 mins)				0
	Sleep Timer	0~990 (one step: 10 mins)				0
	Lens settings	Focus	Command			
		Zoom	Command			
		Lens Shift	Command			
		Lock Lens Motors	Allow			Allow
			Locked			
		Lens Calibration	Yes			
			No			
	High Altitude	On				Off
		Off				

Level 1	Level 2	Level 3 (Or List)	Level 4 (Or List)	Level 5 (Or List)	Level 6 (Or List)	Default
Options	PIN Protect	Security	On			Off
			Off			
		Change Password				
	Remote Settings	Top	Off			On
			On			
		Front	Off			On
			On			
		HDBaseT	Off			On
			On			
		Projector Address	0 ~ 9			0
	Information Hide	On				Off
		Off				
	Backlight Preferences	Keypad Backlight	Always On			Always On
			Always Off			
		Status LED	Always On			Always On
			Always Off			
			Warning/Errors only			
	Information	Model Name				
		Serial Number				
		Native Resolution				
		FW Version				
		MCU FW				
		DDP FW				
		M9813 FW				
		Motor FW				
		PW808 FW				
		Main Input				
		Main Signal Format				
		Main Pixel Clock				
		Main Sync Type				
		Main Horz Refresh				

Level 1	Level 2	Level 3 (Or List)	Level 4 (Or List)	Level 5 (Or List)	Level 6 (Or List)	Default
Options	Information	Main Vert Refresh				
		PIP/PBP Input				
		PIP/PBP Signal Format				
		PIP/PBP Pixel Clock				
		PIP/PBP Sync Type				
		PIP/PBP Horz Refresh				
		PIP/PBP Vert Refresh				
		Light Source Power				
		Total Projector Hours				
		Light Source Hours				
		Standby Mode				
		Lens Lock Settings				
		IP Address				
		DHCP				
		System Temperature				
3D	3D	On				Auto
		Auto				
	3D Invert	On				Off
		Off				
	3D Format	Frame Packing				Depends on input signal. If an HDMI source with AVINFO data existed then display 3D mode automatically.
		Side-by-Side (Half)				
		Top and Bottom				
		Frame Sequential				
	1080p @ 24	96Hz				144Hz
		144Hz				

Level 1	Level 2	Level 3 (Or List)	Level 4 (Or List)	Level 5 (Or List)	Level 6 (Or List)	Default
3D	3D Sync Out	To emitter				To Emitter
		To Next Projector				
	Frame Delay	1 ~ 200				
	L/R Reference	1st Frame				
		Field GPIO				
Communications	LAN	DHCP				By set
		IP Address				
		Subnet Mask				
		Default Gateway				
		MAC Address				
		Apply	Command			
	Network	Projector Name				By set
		Show Network Messages				
		Restart Network...				
		Network Factory Reset...				
	Serial Port Baud Rate	1200				115200
		2400				
		4800				
		9600				
		14400				
		19200				
		38400				
		57600				
		115200				
	Serial Port Echo	Off				Off
		On				
	Serial Port Path	RS232				RS232
		HDBaseT				

Corporate offices

Christie Digital Systems USA, Inc.
Cypress
ph: 714 236 8610

Christie Digital Systems Canada Inc.
Kitchener
ph: 519 744 8005

Worldwide offices

Australia
ph: +61 (0) 7 3624 4888

Brazil
ph: +55 (11) 2548 4753

China (Beijing)
ph: +86 10 6561 0240

China (Shanghai)
ph: +86 21 6278 7708

France
ph: +33 (0) 1 41 21 44 04

Germany
ph: +49 2161 664540

India
ph: +91 (080) 6708 9999

Japan (Tokyo)
ph: 81 3 3599 7481

Korea (Seoul)
ph: +82 2 702 1601

Mexico
ph: +52 55 4744 1790

Republic of South Africa
ph: +27 (0)11 510 0094

Russian Federation
and Eastern Europe
ph: +36 (0) 1 47 48 100

Singapore
ph: +65 6877 8737

Spain
ph: +34 91 633 9990

United Arab Emirates
ph: +971 4 3206688

United Kingdom
ph: +44 (0) 118 977 8000

United States (Arizona)
ph: 602 943 5700

United States (New York)
ph: 646 779 2014

Independant sales consultant offices

Italy
ph: +39 (0) 2 9902 1161



For the most current technical documentation, visit www.christiedigital.com.

