

# E Series

USER MANUAL

020-000287-01

**CHRISTIE®**



## NOTICES

### COPYRIGHT AND TRADEMARKS

© 2011 Christie Digital Systems USA, Inc. All rights reserved.

All brand names and product names are trademarks, registered trademarks or trade names of their respective holders.

### REGULATORY

The product has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the product is operated in a commercial environment. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of the product in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the user's own expense.

**WARNING!** Changes or modifications not expressly approved by Christie could void the user's authority to operate the product.

FOR COMMERCIAL USE ONLY - POUR USAGE COMMERCIAL UNIQUEMENT

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING 2 CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING ANY INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS A DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.

CET APPAREIL NUMÉRIQUE DE CLASSE A EST CONFORME AUX NORMES DÉFINIES DANS LES RÉGLEMENTATIONS CANADIENNES SUR LES APPAREILS CAUSANT DES INTERFÉRENCES RADIO (CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS, ICES-003, CLASS A).

声明 此为A级产品，在生活环境中，该产品可能会造成无线干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

이 기기는 업무용(A급)으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이점을 주의 하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

---

## GENERAL

Every effort has been made to ensure accuracy, however in some cases changes in the products or availability could occur which may not be reflected in this document. Christie reserves the right to make changes to specifications at any time without notice. Performance specifications are typical, but may vary depending on conditions beyond Christie's control such as maintenance of the product in proper working conditions. Performance specifications are based on information available at the time of printing. Christie makes no warranty of any kind with regard to this material, including, but not limited to, implied warranties of fitness for a particular purpose. Christie will not be liable for errors contained herein or for incidental or consequential damages in connection with the performance or use of this material.

The product is designed and manufactured with high-quality materials and components that can be recycled and reused. This symbol  means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from regular waste. Please dispose of the product appropriately and according to local regulations. In the European Union, there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

Canadian manufacturing facility is ISO 9001 and 14001 certified.

## GENERAL WARRANTY STATEMENTS

For complete information about Christie's limited warranty, please contact your Christie dealer. In addition to the other limitations that may be specified in Christie's limited warranty, the warranty does not cover:

- a. Damage occurring during shipment, in either direction.
- b. Projector lamps (See Christie's separate lamp program policy).
- c. Damage caused by use of a projector lamp beyond the recommended lamp life, or use of a lamp supplied by a supplier other than Christie.
- d. Problems caused by combination of the product with non-Christie equipment, such as distribution systems, cameras, video tape recorders, etc., or use of the product with any non-Christie interface device.
- e. Damage caused by misuse, improper power source, accident, fire, flood, lightning, earthquake or other natural disaster.
- f. Damage caused by improper installation/alignment, or by product modification, if by other than a Christie authorized repair service provider.
- g. For LCD projectors, the warranty period specified applies only where the LCD projector is in "normal use." "Normal use" means the LCD projector is not used more than 8 hours a day, 5 days a week. For any LCD projector where "normal use" is exceeded, warranty coverage under this warranty terminates after 6000 hours of operation.
- h. Failure due to normal wear and tear.

## PREVENTATIVE MAINTENANCE

Preventative maintenance is an important part of the continued and proper operation of your product. Please see the Maintenance section for specific maintenance items as they relate to your product. Failure to perform maintenance as required, and in accordance with the maintenance schedule specified by Christie, will void the warranty.

---

1. SAFETY	
1.1 Precautions.....	1-1
1.2 Do .....	1-2
1.3 Do not.....	1-2
2. INTRODUCTION	
2.1 Projector Overview .....	2-1
2.1.1 Main Unit.....	2-1
2.1.2 Built-in Keypad.....	2-3
2.1.3 Input/Output (I/O) Panel.....	2-4
2.1.4 Remote Control.....	2-5
2.1.5 LED Indication Chart.....	2-7
2.2 Key Features .....	2-9
2.3 List of Components.....	2-10
3. INSTALLATION	
3.1 Connecting to Computer.....	3-1
3.2 Connecting to Video Equipment.....	3-2
3.3 Powering the Projector ON.....	3-3
3.4 Powering the Projector OFF.....	3-3
3.5 Adjusting the Projector Position.....	3-4
3.6 Lamp Installation .....	3-9
3.7 Lens Installation.....	3-10
3.8 Ceiling Mount Installation .....	3-11
4. OPERATION	
4.1 Using the On-Screen Display Menus .....	4-1
4.2 Size & Position Menu .....	4-2
4.3 Image Settings Menu.....	4-4
4.4 Configuration Menu .....	4-6
4.5 Lamp Menu.....	4-9
4.6 Status Menu .....	4-10
4.7 Input Switching & PIP Menu .....	4-11
4.8 Language.....	4-13
4.9 Test Pattern .....	4-13
5. APPENDICES	
5.1 Troubleshooting.....	5-1
5.2 Input Specification .....	5-4
5.3 PIP/PBP Compatibility .....	5-5
5.4 Declaration of Conformity for EU Countries .....	5-6
5.5 Federal Communications Commission (FCC) Warning.....	5-6



# 1. SAFETY

## 1.1 Precautions

Installers, service trained operators and all other users must maintain a safe operating environment at all times. Read through this document in its entirety and understand all warnings and precautions before attempting to operate this projector.

### **⚠ WARNING**

- Do not look into the projector lens when the lamp is on. The bright light may result in permanent eye damage.
- To reduce the risk of fire or electric shock, do not expose this projector to rain or moisture.
- Do not open or disassemble the projector as this may cause electric shock.
- When replacing the lamp, allow the unit to cool down, and follow all replacement instructions.
- This projector will detect the life of the lamp. Make sure the lamp is changed when a warning message is displayed.
- When you switch the projector OFF, ensure that the cooling cycle is complete before disconnecting the power. Allow 90 seconds for the projector to cool down.
- Cooling of the lamp during the ignition phase should be avoided. This may lead to ignition failures. After a successful lamp ignition, keep the lamp burning for at least 15 minutes to maintain lamp life.
- When the lamp is approaching the end of its life, the message "Lamp is approaching the end of its useful life in full power operation" appears on the screen. Contact your local reseller or service center to change the lamp as soon as possible.
- All installation and maintenance procedures must be performed by a Christie accredited service technician.
- FIRE HAZARD. Keep hands, clothes and all combustible material away from the concentrated light beam of the projector. Position all cables where they cannot contact hot surfaces or be pulled or tripped over.

### 1.2 Do

- Always power down the projector and disconnect all power sources before servicing or cleaning.
- Use a soft cloth moistened with a mild detergent to clean the display housing.
- Disconnect the power plug from the AC outlet if the product is not being used for an extended period of time.
- Operate the projector under the following conditions:
  - Operating temperature range: 5°C to 35°C
  - Storage temperature range: -10°C to 60°C
  - Humidity range: 5% to 80 % RH (Max.), non condensing
  - Operating altitude: 10,000 ft. maximum
- Use only the AC power cord supplied. Do not attempt operation if the AC supply and cord are not within the specified voltage and power range.
- Remove the lens plug from the lens opening in the projector before installing the lens. Retain the lens plug for projector transportation to protect the optical components from dust and debris.

### 1.3 Do not



- Do not block the ventilation slots and openings on the unit.
- Do not use abrasive cleaners, waxes or solvents to clean the unit.
- Do not look into the lens.
- Do not allow anything to rest on the power cord.
- Do not attempt to access the lamp while the lamp is ON. After turning the lamp OFF, it is critical that you wait at least 10 minutes before handling the lamp. This provides sufficient time for the lamp cooling fans to properly cool the lamp.

## 2. INTRODUCTION

### 2.1 Projector Overview


The product specified in this document is a high brightness, high-resolution video/graphics 1-chip mercury lamp based projector. The projector is available in HD and WUXGA resolutions. The projector utilizes Digital Light Processing (DLP®) technology from Texas Instruments. It is primarily designed for fixed installation markets.

#### 2.1.1 Main Unit

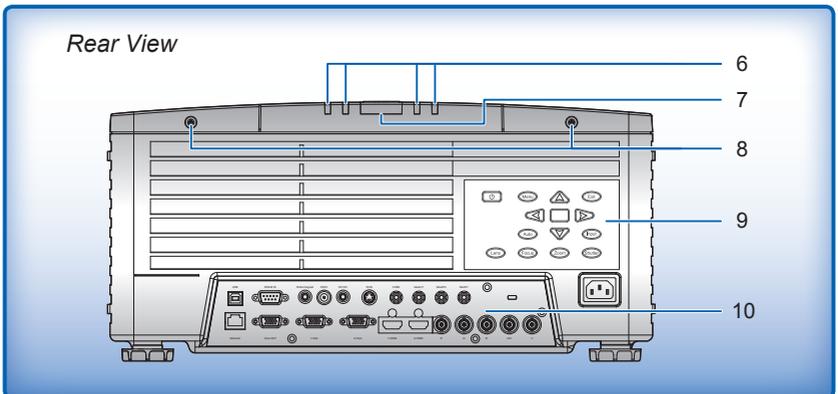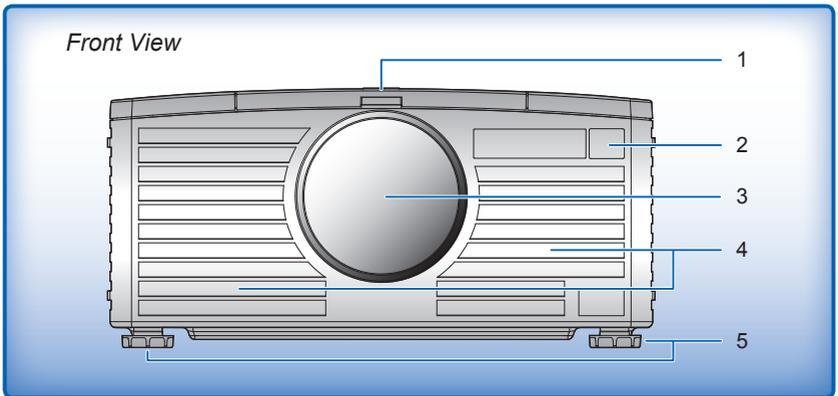


Ind.	Part Name	Description
1	Lens door	The lens door is located on the top-front of the projector, which provides easy access to the lens module for replacement.
2	Front IR Sensor	The front IR sensor, located next to the nameplate, is used to receive signals from the IR remote. It is important to keep the signal path to the sensor unobstructed for uninterrupted communication with the projector.
3	Projection Lens	The projector includes a motorized lens mount that allows automated lens control and adjustment: vertical and horizontal offsets, zoom and focus.
4	Cooling Air Vents	There are numerous air vents located around the projector. It is important these vents remain unobstructed. Adequate airflow through the projector will prevent it from overheating.
5	Adjustable Feet	Four adjustable feet are located on the underside of the projector. Raise or lower these feet when positioning the projector to ensure it is level on all sides so the displayed image appears rectangular without any keystone.
6	LED Status Indicators	The LED status indicators are located on the rear of the projector. They are (from left to right): LAMP 1, LAMP 2, STATUS, SHUTTER.
7	Rear IR Sensor	The rear IR sensor, located on the rear of the projector between the LED status indicators, receives signals from the IR remote. It is important to keep the signal path to the sensor unobstructed for uninterrupted communication with the projector.
8	Lamp Door (Screws)	The lamp door is located on the top-rear of the projector, which provides easy access to the lamp module for replacement.
9	Built-in Keypad	The built-in keypad is located on the rear of the projector. Use it similarly to the IR remote to control the projector.
10	Input/Output (I/O) Panel	All source connections are made to the I/O panel located on the rear of the projector.

**2.1.2 Built-in Keypad**

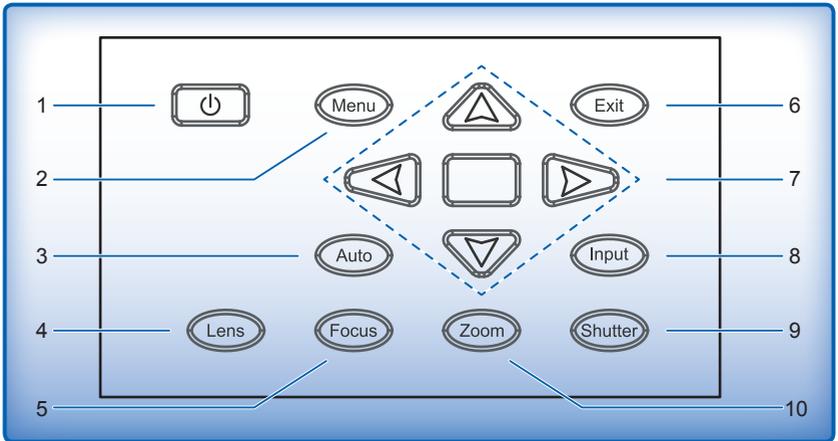


Ind.	Key Name	Description
1	Power	Turn projector ON/OFF
2	Menu	Display menus
3	Auto	Automatically optimize image
4	Lens	Adjust the lens setting
5	Focus	Adjust focus
6	Exit	Return to previous level or exit menus if at top level
7	Arrow Keys	<ul style="list-style-type: none"> <li>Adjust a setting UP or DOWN</li> <li>Navigate within a menu</li> </ul>
8	Input	Select an input for the main or PIP/PBP image
9	Shutter	OPEN or CLOSE the shutter
10	Zoom	Adjust zoom

### 2.1.3 Input/Output (I/O) Panel

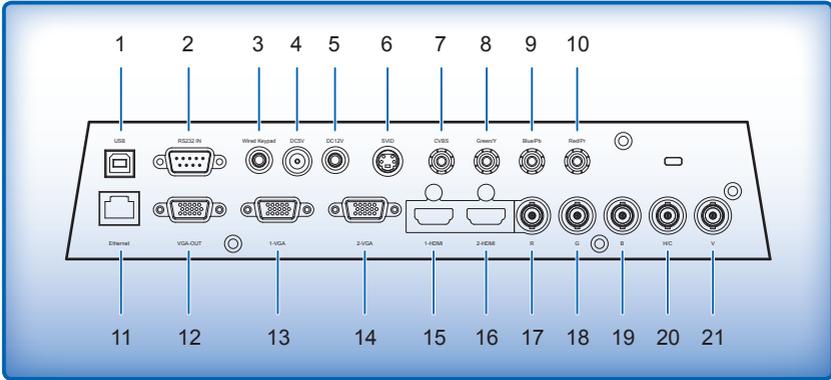

Ind.	Connector Name	Ind.	Connector Name	Ind.	Connector Name
1	USB	2	RS232 IN	3	Wired Keypad
4	DC5V	5	DC12V	6	SVID
7	CVBS	8	Green/Y	9	Blue/Pb
10	Red/Pr	11	Ethernet	12	VGA-OUT
13	1-VGA	14	2-VGA	15	1-HDMI
16	2-HDMI	17	R	18	G
19	B	20	H/C	21	V

**2.1.4 Remote Control**

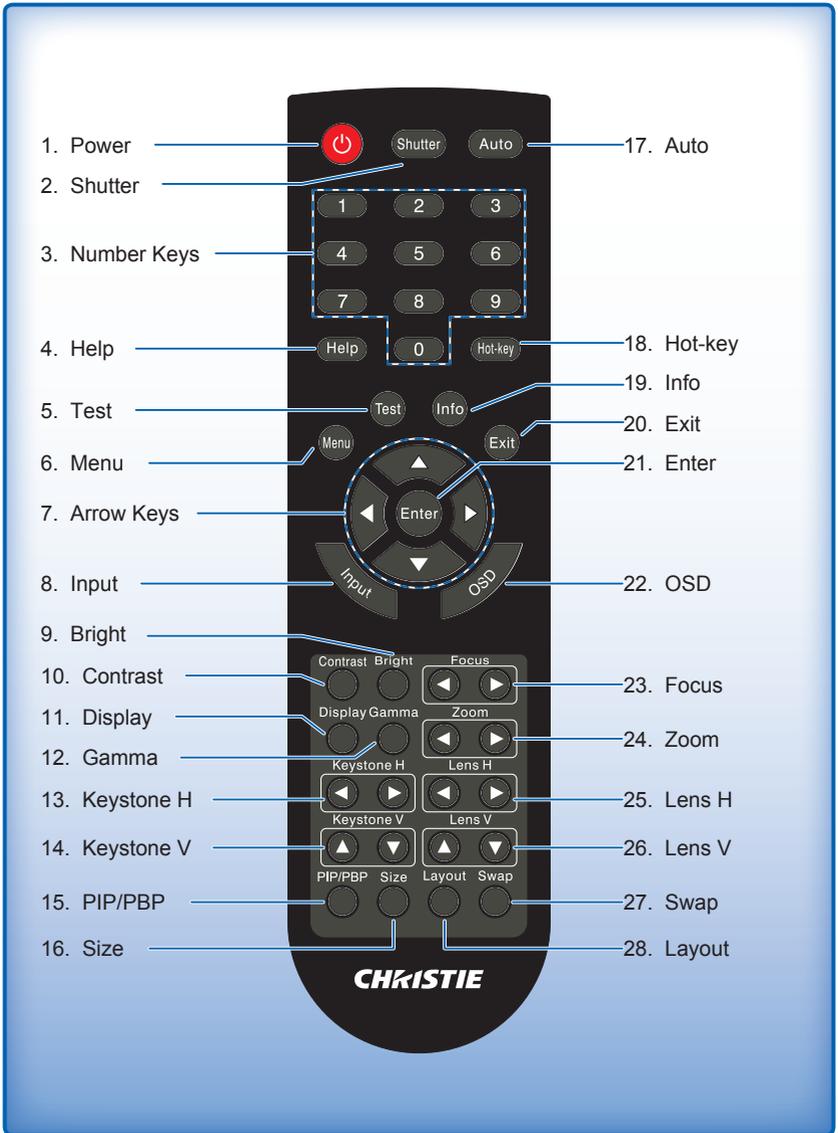

Ind.	Key Name	Description
1	Power	Turn projector ON/OFF
2	Shutter	OPEN or CLOSE the shutter
3	Number Keys	Enter a number, such as a channel, value, etc.
4	Help	Display context-sensitive help
5	Test	Display a test pattern
6	Menu	Display menus
7	Arrow Keys	<ul style="list-style-type: none"> <li>Adjust a setting UP or DOWN</li> <li>Navigate within a menu</li> </ul>
8	Input	Select an input for the main or PIP/PBP image
9	Bright	Adjust amount of light in the image
10	Contrast	Adjust difference between dark and light
11	Display	Select image preset
12	Gamma	Adjust mid-range levels
13	Keystone H	Adjust the horizontal keystone
14	Keystone V	Adjust the vertical keystone
15	PIP/PBP	Turn PIP/PBP ON/OFF
16	Size	Adjust the PIP/PBP size
17	Auto	Automatically optimize image
18	Hot-key	Select your preset keys quickly
19	Info	Display source image information
20	Exit	Return to previous level or exit menus if at top level
21	Enter	<ul style="list-style-type: none"> <li>Select a highlighted menu item</li> <li>Change or accept a value</li> </ul>
22	OSD	Use to hide or show menus
23	Focus	Adjust focus to improve image clarity as desired
24	Zoom	Adjust zoom to achieve a desired image size
25	Lens H	Adjust the lens H to position the image horizontally
26	Lens V	Adjust the lens V to position the image vertically
27	Swap	Swap the main and PIP/PBP images
28	Layout	Adjust the PIP/PBP layout

### 2.1.5 LED Indication Chart

The LED status indicators are located on the rear of the projector. Each LED is defined below.

- LAMP 1 LED

Projector State	LED Status
<ul style="list-style-type: none"> <li>Failed to strike lamp after 5 attempts (strike attempts will stop).</li> <li>Lamp has unexpectedly shut down (system goes into cool down state).</li> </ul>	Red (short blink)
Lamp time has expired and lamp should be replaced. (projector also begins to display the replace lamp OSD message at startup).	Yellow (no blink)
Lamp 1 turn ON ok	Green (no blink)
Projector is switching to Lamp 1 (Lamp 2 is off) (selected by OSD menu "Current Lamp": 1/ 2/ Both )	Green (short blink)
Lamp is off	Off

- LAMP 2 LED

Projector State	LED Status
<ul style="list-style-type: none"> <li>Failed to strike lamp after 5 attempts (strike attempts will stop).</li> <li>Lamp has unexpectedly shut down (system goes into cool down state).</li> </ul>	Red (short blink)
Lamp time has expired and lamp should be replaced. (projector also begins to display the replace lamp OSD message at startup).	Yellow (no blink)
Lamp 2 turn ON ok	Green (no blink)
Projector is switching to Lamp 2 (Lamp 1 is off) (selected by OSD menu "Current Lamp": 1/ 2/ Both )	Green (short blink)
Lamp is off	Off

- STATUS LED

Projector State	LED Status
Projector is in OFF state (without AC plug in)	Off
Projector is in standby mode (AC plug in)	Yellow (no blink)
Projector is in startup state	Yellow long blink
Projector is in cool down state	Yellow long blink
Projector is in flash update state	Flashing Green/ Yellow
Fan failure	Red (short blink)
Over-temperature	Red (no blink)
Projector communications (Read/Write EEPROM)	Green (blink very quickly)
All other states	Green (no blink)

- SHUTTER LED

Projector State	LED Status
Shutter is Open	Green
Shutter is Closed	Yellow (no blink)

## 2.2 Key Features

- HD 0.65" 1920 × 1080 resolution or WUXGA 0.67" 1920 × 1200 resolution
- Projection lens compatibility (except 0.8:1 Fixed Lens):
  - Horizontal offset ranges: +/-20%
  - Vertical offset ranges: +120%/-40% (WUXGA) and +134%/-40% (HD)

**NOTE:**

❖ *Measurements are based on industry standards where offset is calculated as a ratio of the number of pixels shifted up/down to half the image size.*

- Dynamic aperture enabled (full white to full dark contrast ratio): 5000:1 (Nominal)
- Dual mercury lamp illumination with 330W
- 10-bit image processor electronics with modular design
- All video formats can be resized to full screen either horizontally or vertically while maintaining aspect ratio
- User control via Ethernet (Web GUI), OSD (On-Screen Display), or remote control (either in IR or wired mode)
- Weight:
  - Maximum product weight (with lens removed): 19.5kg (43lb.)
  - Maximum shipping weight (includes packaging): 28kg (62lb.)

### 2.3 List of Components

This projector comes with all the items shown below. Check to make sure your package is complete. Contact your dealer if anything is missing.


- Projector with built-in keypad
- IR remote control
- Power cord x 3
  - UK
  - USA
  - Europe
- DVI to HDMI dongle
- Lamp module with installed lamps
- User manual (CD)
- Ceiling mount (optional accessory)
- Fixed Lens (optional accessory):
  - Lens 0.8:1 Fixed Short (Zero offset)
- Zoom Lenses x 4 (optional accessory):
  - Lens 1.2-1.5:1 Fixed Short
  - Lens 1.5-2.0:1 Zoom
  - Lens 2.0-4.0:1 Zoom
  - Lens 4.0-7.0:1 Long Zoom

**NOTE:**

❖ *Due to the difference in applications for each country, some regions may have different accessories.*

### 3. INSTALLATION

#### 3.1 Connecting to Computer

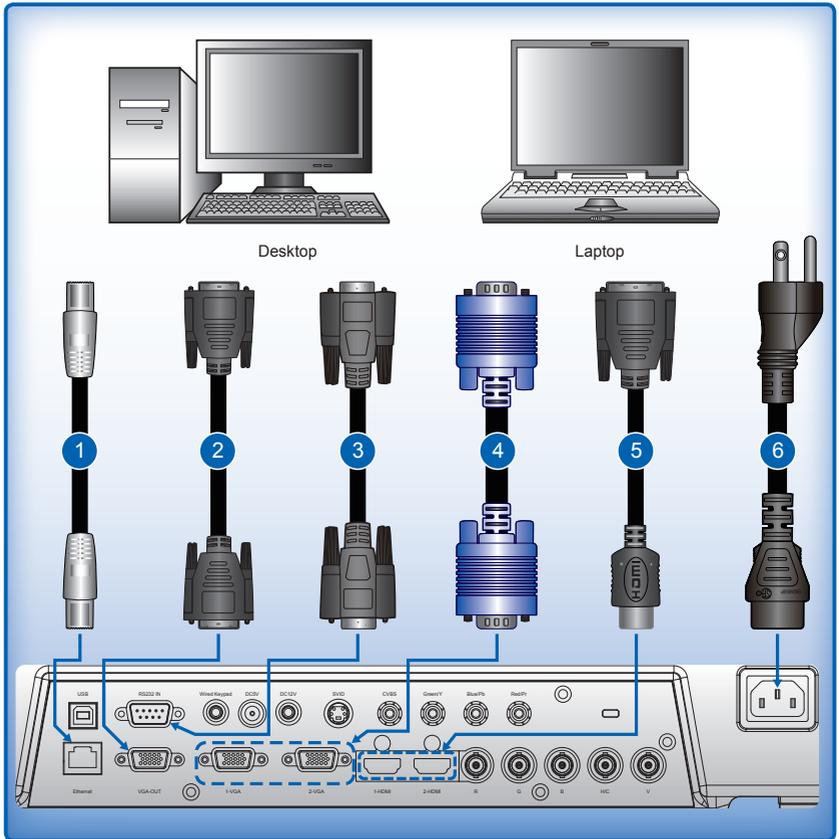


Ind.	Connector Name	Ind.	Connector Name	Ind.	Connector Name
1	Network Cable	2	VGA out Cable	3	RS232 Cable
4	VGA in Cable	5	HDMI to DVI Cable	6	Power Cord

**NOTE:**

- ❖ The diagram shows the cables/connectors that may be used to connect to various devices.
- ❖ Due to the difference in applications for each country, the accessories required in some regions may be different from those shown.
- ❖ This diagram is for illustrative purposes only, and does NOT indicate that these accessories are supplied with the projector.

### 3.2 Connecting to Video Equipment

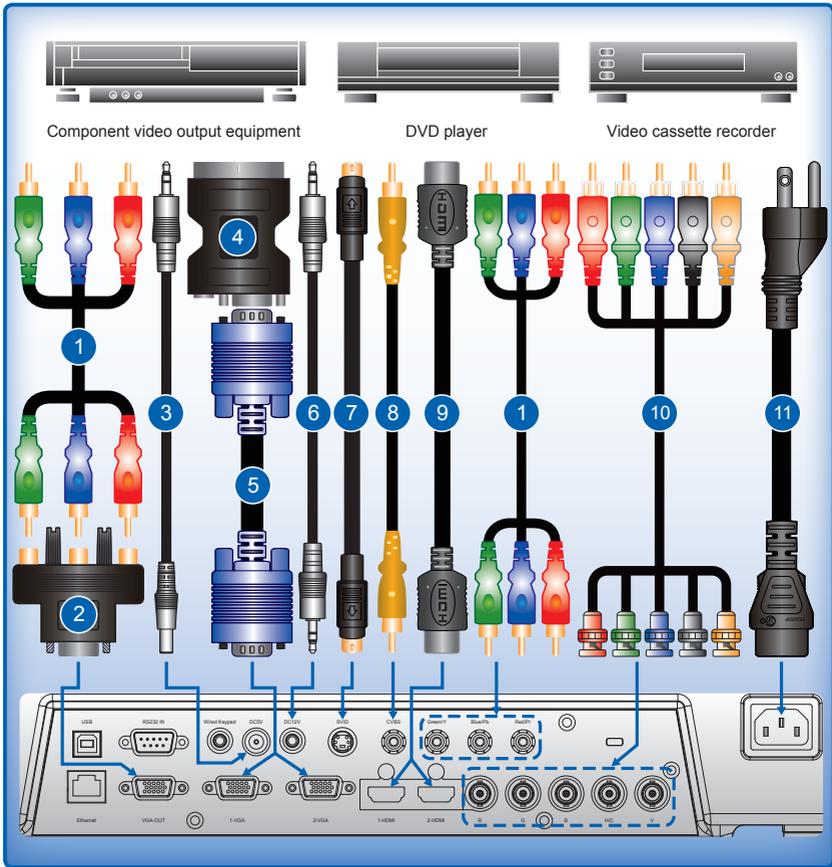

Ind.	Connector Name	Ind.	Connector Name	Ind.	Connector Name
1	3 RCA Component Cable	2	15-Pin to 3 RCA Component/HDTV Adaptor	3	Female 2.5mm (ID) x 5.5mm (OD) plug to Standard 3.5mm Stereo Plug
4	VGA to RGB SCART	5	VGA in Cable	6	Standard 3.5mm Stereo Cable
7	S-Video Cable	8	Composite Video Cable	9	HDMI Cable
10	RCA-BNC Cable	11	Power Cord		

**NOTE:**


- ❖ The diagram shows the cables/connectors that may be used to connect to various devices.
- ❖ Due to the difference in applications for each country, the accessories required in some regions may be different from those shown.
- ❖ This diagram is for illustrative purposes only, and does NOT indicate that these accessories are supplied with the projector.
- ❖ 5V Port: provides a constant 5 Volt, 2 Amp DC output when the projector is powered on.
- ❖ 12V Port: provides a 12 Volt, 0.25 Amp DC output when the projector is on. This can be disabled in the menu.



### 3.5 Adjusting the Projector Position


To determine where to position the projector, consider the size and shape of your screen, the location of your power outlets, and the distance between the projector and the rest of your equipment. Here are some general guidelines:



- Position the projector on a flat surface at a right angle to the screen. The projector (with the standard lens) must be at least 3 feet (0.9m) from the projection screen.
- Position the projector to the desired distance from the screen. The distance from the lens of the projector to the screen, the zoom setting, and the video format determine the size of the projected image.
- For the fixed short lens, the image exits at a default angle. However, the lens shift feature makes the image offset variable.
- Lens throw ratio:
  - Lens 0.8:1 Fixed Short (Zero offset)
  - Lens 1.2-1.5:1 Fixed Short
  - Lens 1.5-2.0:1 Zoom
  - Lens 2.0-4.0:1 Zoom
  - Lens 4.0-7.0:1 Long Zoom
- Do not roll the projector more than 20 degrees from side to side.
- Do not put the projector on either side to project an image.

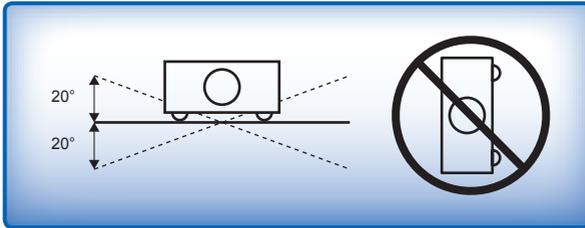



- The vertical image offset (shift) ranges for the projector are +120%/-40% (WUXGA) and +134%/-40% (HD). Offset is +720 pixels for both WUXGA and HD. The horizontal image offset is +/-20% (+/- 192 pixels).
- The method for calculating lens offset complies with Industry standards. Example for Vertical lens offset:
  - At 0% offset (or on axis), the center of the image is on the lens center, so that half of the image appears above and half appears below the lens center.
  - At +100% offset, all (or 100%) of the image will appear above the lens center.
  - The % offset is calculated as the ratio of the number of pixels shifted up/down to half the image size. Examples for WUXGA:
    - ▶ Shifting up 600 pixels gives offset of  $600/600 * 100\% = 100\%$
    - ▶ Shifting down 600 pixels gives offset of  $-600/600 * 100\% = -100\%$
    - ▶ Shifting up 720 pixels gives offset of  $720/600 * 100\% = 120\%$
    - ▶ Shifting up 240 pixels gives offset of  $240/600 * 100\% = 40\%$



WUXGA Projectors:

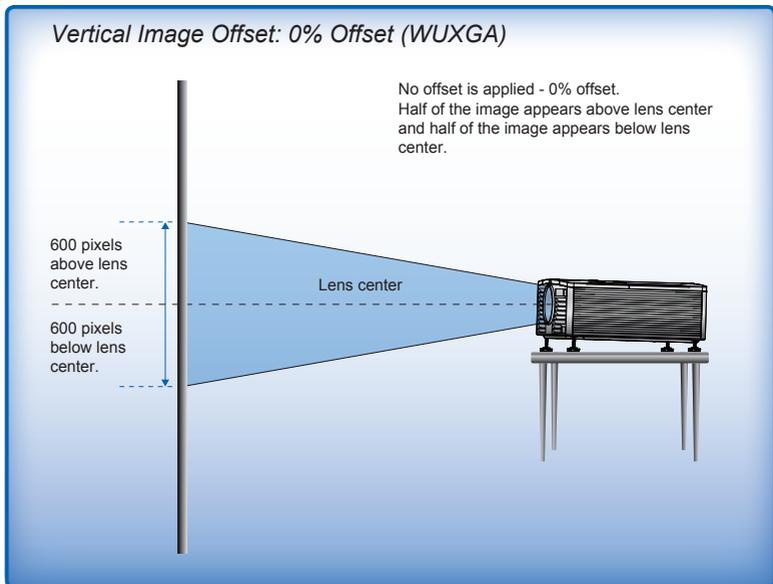

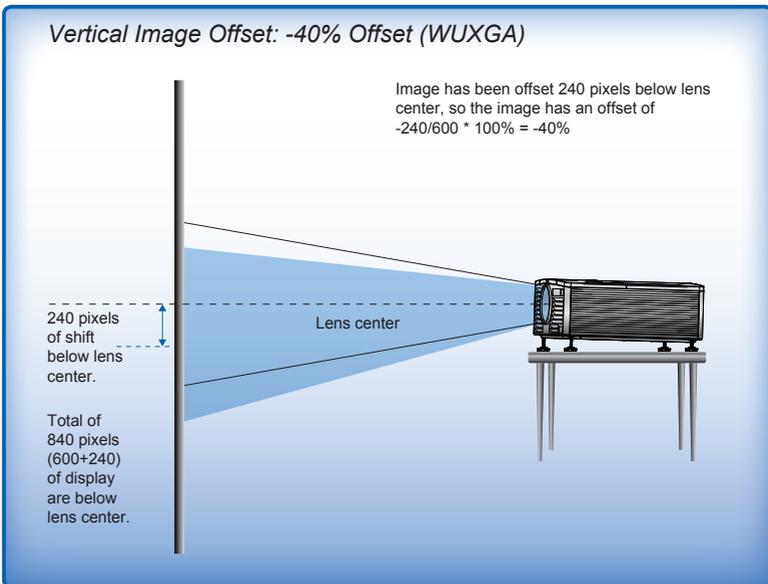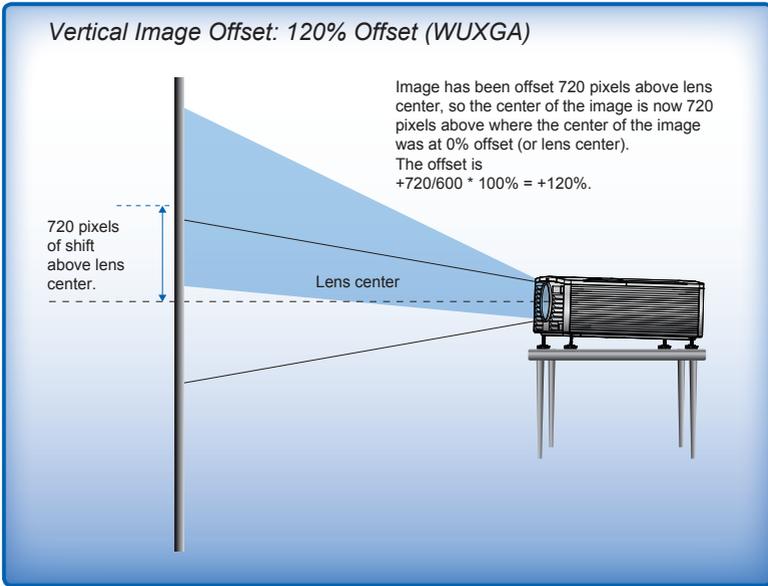

HD Projectors:

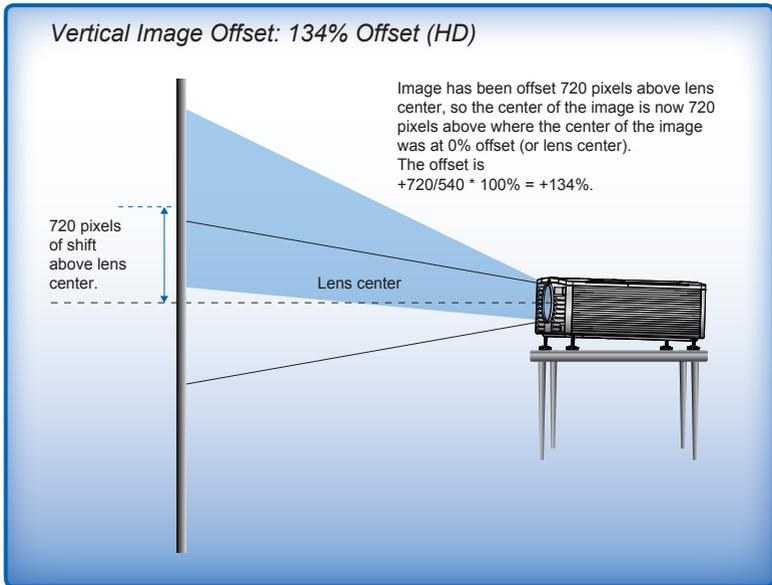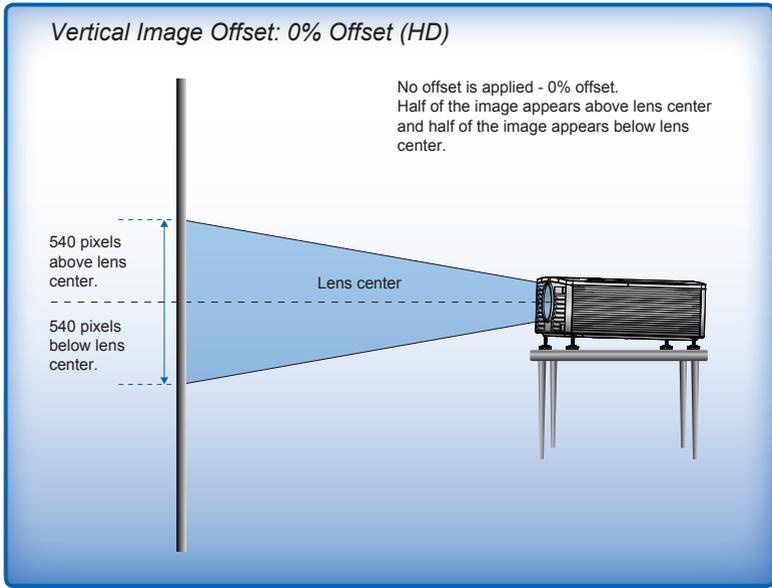

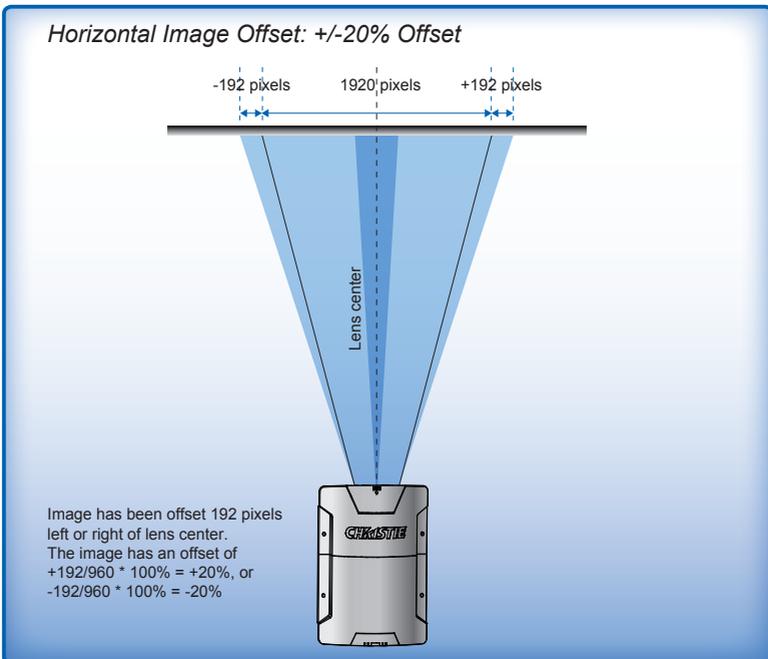
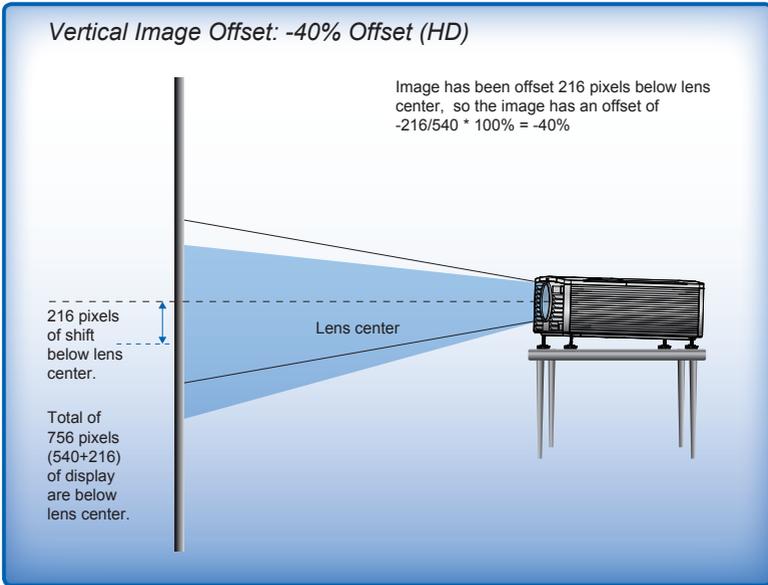


### 3.6 Lamp Installation

The projector automatically detects the lamp life. When the lamp life is nearing the end of use, you will receive a warning message. When you see this message, please contact your local reseller or service center to change the lamp as soon as possible. Make sure the projector has been cooled down for at least 30 minutes before changing the lamp.

#### Installation Steps:

1. **Turn off the lamp:**  
 Note the number of the lamp that needs to be replaced on the “Current Lamp” menu.  
 Turn the projector OFF and disconnect the power cord.
2. **Wait for lamp cool down:**  
 Allow the projector to cool down for at least 30 minutes.
3. **Open the lamp door:**  
 Unscrew the two screws on the lamp door.  
 Open the lamp door located on the top-rear of the projector.
4. **Remove the old lamp:**  
 Loosen the two captive screws securing the lamp.  
 Lift up the lamp by grasping handle and remove the lamp module slowly and carefully.
5. **Install the new lamp:**  
 Replace the lamp with a new one and tighten two screws. Make sure the lamp is set properly and secure.
6. **Close the lamp door:**  
 Put the Lamp Door back and tighten two screws.
7. **Reset the lamp hours:**  
 Turn the projector ON and use “Reset Lamp Hours” **after** the lamp module is replaced.



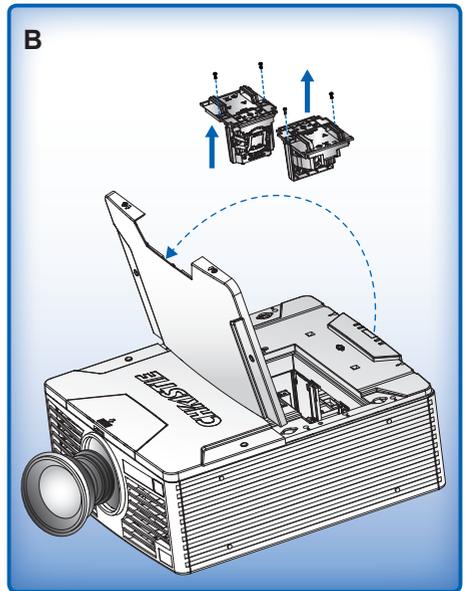
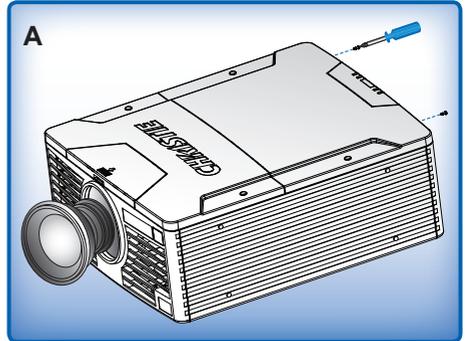


## 3.7 Lens Installation

Lens installation and replacement should be completed by Christie accredited service personnel only. When handling the projector after lens installation, make sure the front lens cap is placed on the lens to protect the lens surface from potential damage. When carrying or moving the projector, do not handle by the lens. This may damage the lens, the chassis or other mechanical parts within the projector.

### Installation Steps:

- Center the lens:**  
 Ensure that the lens is at or near its center position. Attempting to remove the lens when at a large offset may cause damage to the lens assembly. Center the lens while the projector is switched on by pressing the lens horizontal or vertical button and then pressing Enter.
- Turn off the projector:**  
 Turn the projector OFF and disconnect the power cord.
- Wait for projector cool down:**  
 Allow the projector to cool down for at least 1 minute before replacing the lens.
- Open the lens door:**  
 Push and open the lens door located on the top-front of the projector.
- Remove the lens:**  
 Push the release lever up to release the lock. (Figure C-1) Remove the lens through the front of the projector.
- Remove the lens cap (1):**  
 Remove the rear lens cap from the lens. Keep the front lens cap on the lens to protect it during installation.
- Install the new lens:**  
 Align the lens interface plate with the lens mount. Fully insert the assembly straight into the lens mount without turning. Push the release lever down to lock the lens in place. (Figure C-2)
- Close the lens door:**  
 Lower the Lens Door and slide back into the secured position.
- Remove the lens cap (2):** Remove the front lens cap.

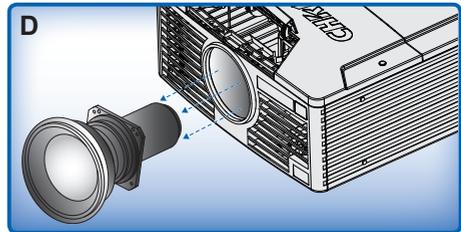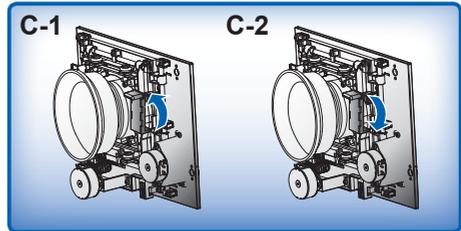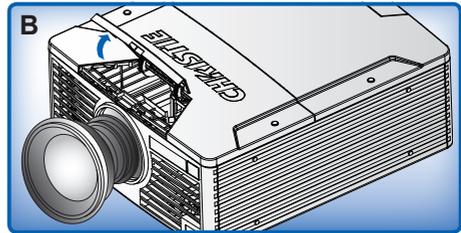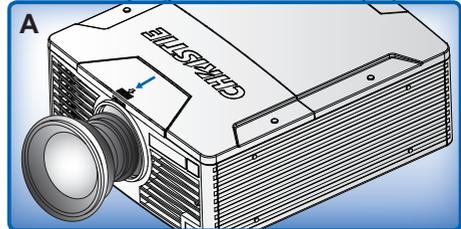

### 3.8 Ceiling Mount Installation

The projector can be inverted and suspended from the ceiling using a specially designed ceiling mount fixture. This mounting is recommended for those that want the projector out of plain view or have limited amount of space for the projector. For more information, contact your dealer.

**▲ WARNING**

- Use only the Christie approved ceiling mount kit designed for your projector.
- When not mounted properly, the projector may fall, causing hazards or injury. The warranty on this projector does not cover any damage caused by the use of any non-recommended ceiling mount kit or installation of the ceiling mount kit in an improper location.
- Refer to the installation instructions and safety guidelines provided in the kit.




## 4. OPERATION


### 4.1 Using the On-Screen Display Menus

The projector has multilingual On-Screen Display (OSD) menus that allow you to make image adjustments and change a variety of settings.

1. Most of the projector controls are accessed from within the projector menu system. There are several groups of related functions, with each group selectable from the Main menu as shown below. Press the MENU button on the remote control or on the built-in keypad on the rear of the projector to display the main menu.
2. Use the arrow keys to navigate within the menu and adjust a setting up or down.
3. Press ENTER to select a highlighted menu item or use it to change or accept a value.
4. Select the next item that you want to adjust in the menu and adjust it as described above.
5. Press EXIT to return to the previous menu or exit menus if at top level.

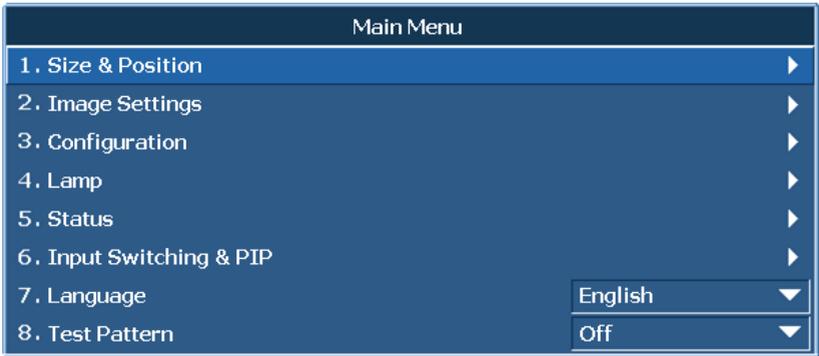

## 4.2 Size & Position Menu

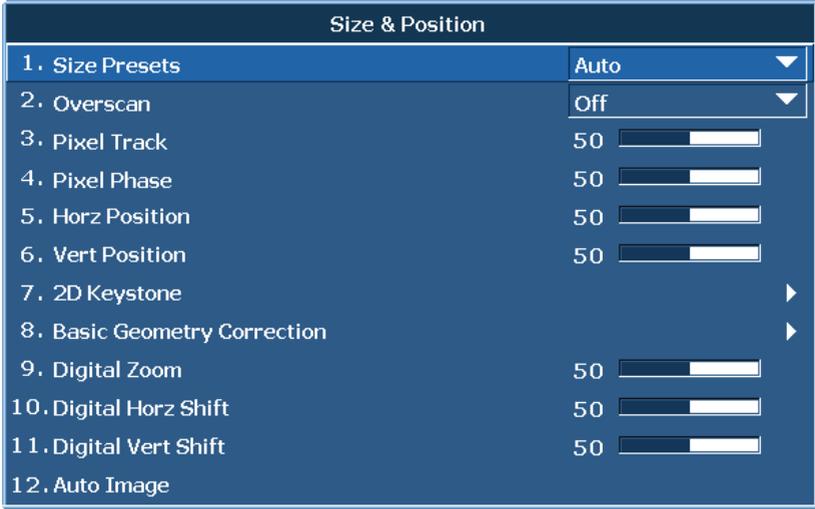

### Size Presets

Display an image with the detected size, or resize the image by maximizing either the height, width or both, or resize to the maximum size possible while keeping the original aspect ratio.

- Auto: Display with the detected size.
- Native: Display in its native resolution.
- 4:3: Retain 4:3 aspect ratio.
- Letterbox: Display with the black borders on the top and bottom.
- Full Size: Fill the screen (regardless of the source).
- Full Width: Fill display width and keep aspect ratio.
- Full Height: Fill display height and keep aspect ratio.

### Overscan

Remove noise around the image.

### Pixel Track

Steady flickering or several soft vertical stripes or bands across the entire image indicates poor pixel tracking. Proper pixel tracking ensures that the image quality is consistent across the screen, the aspect ratio is maintained, and that the pixel phase can be optimized.

### Pixel Phase

Adjust pixel phase when the image still shows shimmer or noise after pixel tracking is optimized. Pixel phase can adjust the phase of the pixel-sampling clock relative to the incoming signal.

### Horz Position

Move the image right or left within the area of available pixels.

### Vert Position

Move the image up or down within the area of available pixels.

### 2D Keystone

- Horz Keystone: Adjust the keystone horizontally and make a more square image.
- Vert Keystone: Adjust the keystone vertically and make a more square image.

### Basic Geometry Correction

- Horz Pincushion: Adjust the pincushion horizontally and make a more square image.
- Vert Pincushion: Adjust the pincushion vertically and make a more square image.

### Digital Zoom

Change the size of projector's display area. If the display area has been resized by this setting, it can be moved by changing the Digital Horz Shift and Digital Vert Shift settings.

### Digital Horz Shift

Move the display area horizontally if its size has been changed by the Digital Zoom setting.


### Digital Vert Shift

Move the display area vertically if its size has been changed by the Digital Zoom setting.

### Auto Image

Force the projector to reacquire and lock to the input signal. This is useful when signal quality is marginal.

### 4.3 Image Settings Menu

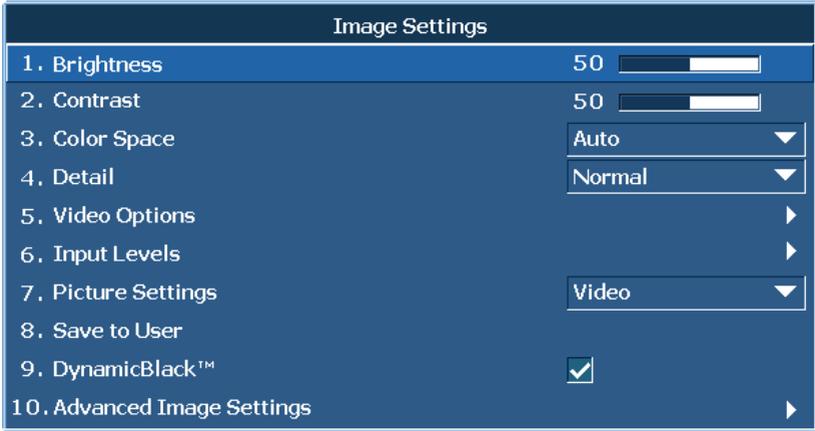

#### Brightness

Adjust the intensity of the image.

#### Contrast

Adjust the degree of difference between the lightest and darkest parts of the picture and change the amount of black and white in the image.

#### Color Space

Select a color space that has been specifically tuned for the input signal. Useful only for analog signals and certain digital sources.

#### Detail

Select the edge clarity of the image.

#### Video Options

This function is used with video sources only.

- **Color:** Adjust a video image from black and white to fully saturated color. The color setting applies to video sources only.
- **Tint:** Adjust the red-green color balance in the image of NTSC video images. The tint setting applies to NTSC video sources only.
- **Noise Reduction:** Reduce temporal or spatial noise in the image.
- **Flesh Tone Correction:** Control the amount of flesh tone correction applied to the image.

- Video Black Level: Analyze the current input image and calculate an offset value which is then added to the analog to digital converter black level value. This ensures optimum black level for each analog source.
- Detect Film: Control film mode detection and determine whether the original source of the input video was film or video.
- Closed Captions: Control closed caption display while audio is not muted. If this setting is not off, audio is not muted, the source is NTSC and contains captions on the selected channel, then the projector must display caption text overlaid on the image.

### Input Levels

- Adjust the gain of the red, green, or blue channel of the image.
- Adjust the offset of the red, green, or blue channel of the image.
- Sync Threshold: (progressive signals only) If a hardware device, such as a DVD player, is not syncing properly with the projector, select this option to help it to sync when connected to the projector.

### Picture Settings

Optimize the projector for displaying images under certain conditions, such as presentation, video, bright, whiteboard, blackboard, beige wall and user-definable preset.

### Save to User

Adjust the image settings and select Save to User as a picture setting. You can recall these settings in the future by selecting the User in the Picture Settings menu.


### DynamicBlack™

Select the check box to constantly adjust the aperture based on the amount of black in the current scene.

### Advanced Image Settings

- Gamma: Select the appropriate gamma from Video, Film, Bright, and CRT.
- BrilliantColor™: Produce an expanded on-screen color spectrum that delivers enhanced color saturation for bright, true-to-life images.
- White Peaking: (video source only) Increase the brightness of whites that are near 100%.
- Color Temperature: Change the intensity of the colors. Select a listed relative warmth value.
- Edge Enhancement: Apply the edge enhancement process.

## 4.4 Configuration Menu

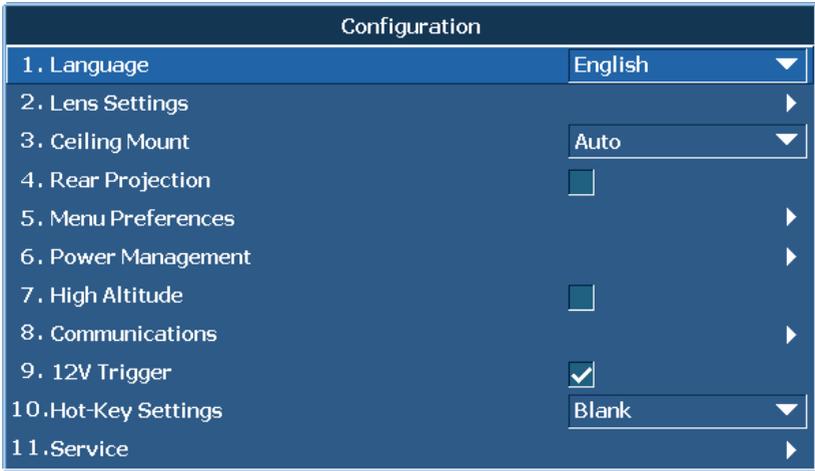

### Language

Allows you to select an available language for the OSD display.

### Lens Settings

- Focus and Zoom: Adjust the focus and zoom the image in or out.
- Lens Shift: Shift the lens up and down or left and right.
- Lock Lens Motors: Select this function to prevent all lens motors from moving. It will disable the Zoom, Focus, Horizontal and Vertical Position settings, effectively locking out any changes and overriding all other lens features. This is particularly useful to prevent accidental lens position changes in multi-projector installations.
- Lens Calibration: Calibrate the lens center

### Ceiling Mount

Turn the image upside down for ceiling-mounted projection.

### Rear Projection

Reverse the image so you can project from behind a translucent screen.

### Menu Preferences

- Menu Horz Position: Change the horizontal position of the OSD items.
- Menu Vert Position: Change the vertical position of the OSD items.
- Show Messages: Display status messages on the screen.
- Menu Transparency: Change OSD menu background to be transparent.

**NOTE:**

❖ *As the value increases, more of the image behind the menu is visible.*

- Splash Screen: Choose which splash screen is to be used.
- PIN Protect: The PIN (personal identification number) feature allows you to password protect your projector. Once you enable the PIN feature, you must enter the PIN before you can project an image.
- Change PIN: Allows you to change the PIN.

### Power Management

- Standby Mode: The projector is in standby mode when connected to AC power.
- AC Power On: The projector automatically turns on when electrical power is connected.
- Auto Shutdown: Automatically turns the projector off after no signals are detected for a preset number of minutes. If an active signal is received before the projector powers down, the image will be displayed.
- Sleep Timer: Allows the projector to automatically power off after it has been on for a specified amount of time.

### High Altitude

Set high altitude mode ON/OFF.

### Communications

- Network: Allow you to setup network settings.
  - DHCP: Turn the DHCP ON/OFF.
  - IP Address: Assign Network IP Address.
  - Subnet Mask: Assign Network Subnet Mask.
  - Default Gateway: Assign Network Default Gateway.
  - Host Name: Display the host name.
  - MAC Address: Displays network MAC Address value.
  - Show Network Messages: Turn network messages ON/OFF.
  - Restart Network: Restart the network.
  - Network Factory Reset: Perform factory reset.
- Baud Rate: Select the serial port and baud rate.
- Serial Port Echo: Control whether the serial port echoes characters.

### 12V Trigger

Set 12V trigger ON/OFF. The 12V trigger is an interface that is used for electrical projector screens. The projector screen is lowered or raised automatically when the projector is switched ON/OFF.

### Hot-Key Settings

Assign a different function to the hot-key by highlighting the function in the list and pressing ENTER. Choose a function that does not already have a dedicated button, and assign the hot-key to that function, allowing you to quickly and easily use the chosen function.

### Service

- Projector Info: Display current projector settings (read-only).
- Factory Reset: Restore all settings to their default value.
- Test Pattern: Choose the desired internal test pattern to display, or select OFF to turn off a test pattern.

**4.5 Lamp Menu**

Lamp	
1. Lamp Power	330 <input type="text"/>
2. Current Lamp	Both ▼
3. Whisper Mode	Off ▼
4. Lamp Auto Switch	After 500 Hours ▼
5. Lamp Auto Switch Time	500
6. Lamp Info	▶
7. Lamp Life Settings	1500
8. Reset Lamp Hours	▶

Lamp Power

Set the lamp power in Watts. The Power setting represents the amount of lamp(s) power.

Current Lamp

Select which lamp(s) is in use.

Whisper Mode

Set whisper mode ON, OFF, Auto or assign a lamp to whisper mode.

Lamp Auto Switch

Control when the projector switches lamps. Options include: on failure only, at power-up, or after a set number of hours.

Lamp Auto Switch Time

Set a number of hours for Lamp Auto Switch.

Lamp Info

Display current lamp(s) settings (read-only).

Lamp Life Settings

Set a number of hours for lamp life.

Reset Lamp Hours


Reset the lamp used hours counter to zero. Do this after changing the lamp.

## 4.6 Status Menu

The read-only Status menu lists a variety of details about the standard and optional components currently detected in the projector.

Status	
Model Name	DWU670-E
Serial Number	UC102000001
Native Resolution	1920 x 1200
Main Input	VGA 1
Main Signal Format	720p
Main Pixel Clock	74.256MHz
Main Sync Type	Sync on Green
Main Horz Refresh	45.10kHz
Main Vert Refresh	60.0Hz
PIP/PBP Input	-
PIP/PBP Signal Format	-
PIP/PBP Pixel Clock	-
PIP/PBP Sync Type	-
PIP/PBP Horz Refresh	-
PIP/PBP Vert Refresh	-
Lamp Power	330 W
Current Lamp	Both
Lamp 1 Hours	70
Lamp 2 Hours	70
Standby Mode	1W Mode
Lens Lock Setting	Allow
IP Address	192.168.0.100
DHCP	<input type="checkbox"/>
Intake Temperature	38°C

## 4.7 Input Switching & PIP Menu

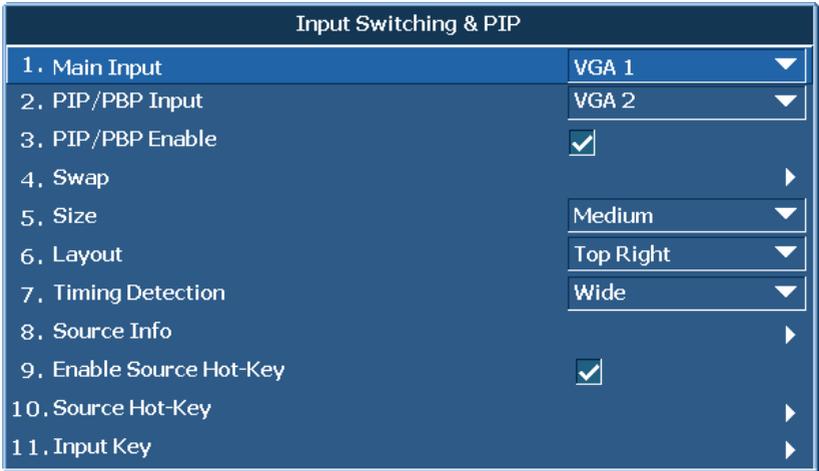

### Main Input

From the list of active inputs, select one to be used as the main image.

### PIP/PBP Input

From the list of active inputs, select one to be used as the PIP/PBP.

### PIP/PBP Enable

Toggle between displaying two sources at once (Main and PIP/PBP images) or one source only. The check box turns the PIP/PBP source ON and OFF.

### Swap

Change the main image to PIP/PBP, and the PIP/PBP to main image. Swapping is available only when PIP/PBP is enabled.

### Size

Select the PIP/PBP size to small, medium or large.

### Layout

Set the location of the PIP/PBP image on the screen.

**NOTE:**

- ❖ PIP/PBP layout and size table as described below.
- ❖ P : indicates primary source region (lighter color).
- ❖ \* : Both source regions are the same size.

PIP/PBP Layout	PIP/PBP Size		
	Small	Medium	Large
PBP, Bigger Left			
Over-Under, Bigger Upper			
PBP, Bigger Right			
Over-Under, Bigger Lower			
PIP-Bottom Right			
PIP-Bottom Left			
PIP-Top Left			
PIP-Top Right			

Timing Detection

Select timing detection mode to wide or normal.

Source Info

Display current source settings (read-only).

Enable Source Hot-Key

Toggle the check box to enable or disable the main source hot-key.

Source Hot-Key

Allows you to assign a different source to the hot-key. Highlight an input and press ENTER to choose a different one.

Input Key

Use it to list all of the sources or change the sources.

## 4.8 Language

Allows you to select an available language for the OSD display.



## 4.9 Test Pattern

Choose the desired internal test pattern to display, or select OFF to turn off a test pattern.

- OFF
- Black
- White
- Checkerboard
- Grid
- Color Bars



## 5. APPENDICES

### 5.1 Troubleshooting

If you experience a problem with your projector, please refer to the following information. If a problem persists, please contact your local reseller or service center.

- No image appears on-screen
  - Make sure all the cables and power connections are correctly and securely connected as described in the “Installation” section.
  - Check if the projection lamp has been securely installed.
  - Make sure you have removed the lens cap and the projector is switched ON.
- Partial, scrolling or incorrectly displayed image
  - Press “AUTO” on control panel or on remote control.
  - If you are using a PC (for Windows 95, 98, 2000, XP, Windows 7):
    - ▶ Open the “My Computer” icon, the “Control Panel” folder, and then double click on the “Display” icon.
    - ▶ Select the “Settings” tab.
    - ▶ Verify that your display resolution setting is lower than or equal to WUXGA (1920 × 1200).
    - ▶ Click on the “Advanced Properties” button. If the projector is still not projecting the whole image, you will also need to change the monitor display you are using. Refer to the following steps:
      - \* Verify the resolution setting is lower than or equal to WUXGA (1920 × 1200).
      - \* Select the “Change” button under the “Monitor” tab.
      - \* Click on “Show all devices”. Next, select “Standard monitor types” under the SP box; choose the resolution mode you need under the “Models” box.
      - \* Verify that the resolution setting of the monitor display is lower than or equal to WUXGA (1920 × 1200).

- If you are using a Notebook:
  - ▶ First, follow the steps above to adjust resolution of the computer.
  - ▶ Press the appropriate keys listed below for your notebook manufacturer to send signal out from notebook to projector.  
Example: [Fn]+[F4]

Notebook Brand	Function Keys
Acer	[Fn]+[F5]
Asus	[Fn]+[F8]
Dell	[Fn]+[F8]
Gateway	[Fn]+[F4]
IBM/Lenovo	[Fn]+[F7]
HP/Compaq	[Fn]+[F4]
NEC	[Fn]+[F3]
Toshiba	[Fn]+[F5]
Mac Apple	System Preference ⇒ Display ⇒ Arrangement ⇒ Mirror display

- If you experience difficulty changing resolutions or your monitor freezes, restart all equipment including the projector.
- The screen of the Notebook or PowerBook computer is not displaying your presentation
  - If you are using a Notebook PC  
Some Notebook PCs may deactivate their own screens when a second display device is in use. Each of them has a different method of reactivation. Please refer to your computer manual for detailed information.
- Image is unstable or flickering
  - Use “Pixel Track” and “Pixel Phase” to correct it.
  - Change the monitor color setting on your computer.
- Image has vertical flickering bar
  - Use “Auto Image” to make an adjustment.
  - Check and reconfigure the display mode of your graphic card to make it compatible with the projector.

- Image is out of focus
  - Make sure the lens cap is removed.
  - Adjust lens focus to fit.
  - Make sure the projection screen is between the required distance.
- The image is stretched when displaying 16:9 DVD title
  - When you play anamorphic DVD or 16:9 DVD, the projector will show the best image when the projector display mode is set to 16:9 in the OSD.
  - If you play 4:3 format DVD titles, please change the format to 4:3 in the projector OSD.
  - If the image is still stretched, you will also need to adjust the aspect ratio by setting the display format as 16:9 (wide) aspect ratio type on your DVD player.
- Image is too small or too large
  - Adjust lens zoom to fit.
  - If it does not fill the screen properly, verify that the correct lens is in use or change the position of the projector.
- Image has slanted sides
  - Reposition the projector so that it is perpendicular to the screen.
- Lamp burns out or makes a popping sound
  - When the lamp reaches its end of life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn on until the lamp module has been replaced.

## 5.2 Input Specification

Signal Type	Resolution	Frame Rate (Hz)	HDMI 1	HDMI 2	VGA 1	VGA 2	BNC	Component	S- video	CVBS
PC	640x480	60	•	•	•	•	•			
	640x480	75	•	•	•	•	•			
	640x480	85	•	•	•	•	•			
	800x600	60	•	•	•	•	•			
	800x600	75	•	•	•	•	•			
	800x600	85	•	•	•	•	•			
	1024x768	60	•	•	•	•	•			
	1024x768	75	•	•	•	•	•			
	1024x768	85	•	•	•	•	•			
	1280x768	60	•	•	•	•	•			
	1280x800	50	•	•	•	•	•			
	1280x800	60	•	•	•	•	•			
	1280x1024	60	•	•	•	•	•			
	1280x1024	75	•	•	•	•	•			
	1280x1024	85	•	•	•	•	•			
	1400x1050	60	•	•	•	•	•			
	1600x1200	60	•	•	•	•	•			
	1680x1050	60			•	•	•			
	1920x1200RB	60	•	•	•	•	•			
	1920x1200RB	50	•	•	•	•	•			
NTSC	NTSC (M, 4.43)	60						•	•	•
PAL	PAL (B,G,H,I)	50						•	•	•
	PAL (N)	50						•	•	•
	PAL (M)	60						•	•	•
SECAM	SECAM (M)	50						•	•	•

Signal Type	Resolution	Frame Rate (Hz)	HDMI 1	HDMI 2	VGA 1	VGA 2	BNC	Component	S-video	CVBS
SDTV	480i	60	•	•	•	•	•			
	576i	50	•	•	•	•	•			
EDTV	480p	60	•	•	•	•	•	•		
	576p	50	•	•	•	•	•			
HDTV	1080i	60	•	•	•	•	•	•		
	720p	50	•	•	•	•	•	•		
	720p	60	•	•	•	•	•	•		
	1080p	24	•	•	•	•	•	•		
	1080p	25	•	•	•	•	•	•		
	1080p	30	•	•	•	•	•	•		
	1080p	50	•	•	•	•	•	•		
	1080p	60	•	•	•	•	•	•		

### 5.3 PIP/PBP Compatibility

Main PIP/PBP	HDMI 1	HDMI 2	VGA 1	VGA 2	BNC	Component	S-video	Composite
HDMI 1		•	-	•	-	•	-	-
HDMI 2	•		•	-	•	-	•	•
VGA 1	-	•		•	-	•	-	-
VGA 2	•	-	•		•	-	•	•
BNC	-	•	-	•		•	-	-
Component	•	-	•	-	•		•	•
S-video	-	•	-	•	-	•		-
Composite	-	•	-	•	-	•	-	

- : PIP/PBP combinations are enabled
- : PIP/PBP combinations are disabled

## 5.4 Declaration of Conformity for EU Countries

- EMC Directive 2004/108/EC (including amendments)
- Low Voltage Directive 2006/95/EC
- Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC

## 5.5 Federal Communications Commission (FCC) Warning

### **⚠ WARNING**

- A shielded-type power cord is required in order to meet FCC emission limits and also to prevent interference to the nearby radio and television reception. It is essential that only the supplied power cord be used.
- Use only shielded signal cables to connect I/O devices to this equipment.



## Corporate offices

USA – Cypress

ph: 714-236-8610

Canada – Kitchener

ph: 519-744-8005

## Worldwide offices

United Kingdom

ph: +44 118 977 8000

Germany

ph: +49 2161 664540

France

ph: +33 (0) 1 41 21 44 04

Hungary/Eastern Europe

ph: +36 (0) 1 47 48 100

Singapore

ph: +65 6877 8737

Shanghai

ph: +86 21 6278 7708

Beijing

ph: +86 10 6561 0240

Korea

ph: +82 2 702 1601

Japan

ph: +81 3 3599 7481

ISO 9001



ISO 14001



For the most current technical documentation,  
please visit [www.christiedigital.com](http://www.christiedigital.com)

**CHRISTIE®**