



User Guide
020-103363-01

DWU7062-GS, DWU8902-GS, and DWU1082-GS

Auto Warp

CHRISTIE®

NOTICES

COPYRIGHT AND TRADEMARKS

Copyright © 2020 Christie Digital Systems USA Inc. All rights reserved.

All brand names and product names are trademarks, registered trademarks or trade names of their respective holders.

GENERAL

Every effort has been made to ensure accuracy, however in some cases changes in the products or availability could occur which may not be reflected in this document. Christie reserves the right to make changes to specifications at any time without notice. Performance specifications are typical, but may vary depending on conditions beyond Christie's control such as maintenance of the product in proper working conditions. Performance specifications are based on information available at the time of printing. Christie makes no warranty of any kind with regard to this material, including, but not limited to, implied warranties of fitness for a particular purpose. Christie will not be liable for errors contained herein or for incidental or consequential damages in connection with the performance or use of this material. Manufacturing facilities in Canada and China are ISO 9001 certified. Manufacturing facilities in Canada are also ISO 14001 certified.

WARRANTY

Products are warranted under Christie's standard limited warranty, the complete details of which are available by contacting your Christie dealer or Christie. In addition to the other limitations that may be specified in Christie's standard limited warranty and, to the extent relevant or applicable to your product, the warranty does not cover:

- a. Problems or damage occurring during shipment, in either direction.
- b. Problems or damage caused by combination of a product with non-Christie equipment, such as distribution systems, cameras, DVD players, etc., or use of a product with any non-Christie interface device.
- c. Problems or damage caused by misuse, improper power source, accident, fire, flood, lightning, earthquake, or other natural disaster.
- d. Problems or damage caused by improper installation/alignment, or by equipment modification, if by other than Christie service personnel or a Christie authorized repair service provider.
- e. Use of third party product enclosures for environmental protection during outside use must be approved by Christie.
- f. Problems or damage caused by use of a product on a motion platform or other movable device where such product has not been designed, modified or approved by Christie for such use.
- g. Except where the product is designed for outdoor use, problems or damage caused by use of the product outdoors unless such product is protected from precipitation or other adverse weather or environmental conditions and the ambient temperature is within the recommended ambient temperature set forth in the specifications for such product.
- h. Defects caused by normal wear and tear or otherwise due to normal aging of a product.

The warranty does not apply to any product where the serial number has been removed or obliterated. The warranty also does not apply to any product sold by a reseller to an end user outside of the country where the reseller is located unless (i) Christie has an office in the country where the end user is located or (ii) the required international warranty fee has been paid.

The warranty does not obligate Christie to provide any on site warranty service at the product site location.

PREVENTATIVE MAINTENANCE

Preventative maintenance is an important part of the continued and proper operation of your product. Failure to perform maintenance as required, and in accordance with the maintenance schedule specified by Christie, will void the warranty.


REGULATORY

The product has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the product is operated in a commercial environment. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of the product in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the user's own expense. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

CAN ICES-3 (A) / NMB-3 (A)

이 기기는 업무용(A급)으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

ENVIRONMENTAL

The product is designed and manufactured with high-quality materials and components that can be recycled and reused. This symbol  means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from regular waste. Please dispose of the product appropriately and according to local regulations. In the European Union, there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

Content

- Auto Warp application installation. 4**
 - Affected products. 4
 - Auto Warp system layout. 4
 - Auto Warp application overview. 5
 - Installing the webcam driver. 5
 - Installing the Auto Warp application. 5
 - Reverting all settings. 6
 - Restoring previously saved warping settings. 6
 - Adjusting the brightness of the blending zone. 6

- Stacking solution. 7**
 - Configuring the stacking solution. 7
 - Setting up the camera. 7
 - Setting the boundaries of the projected image. 8
 - Calibrating the image. 8

- Auto blending solution. 9**
 - Configuring the auto blending solution. 9
 - Setting up the camera. 9
 - Setting the boundaries of the projected image. 10
 - Calibrating the image. 10

- Auto blending and stacking solution. 12**
 - Configuring the auto blending and stacking solution. 12
 - Setting up the camera. 12
 - Setting the boundaries of the projected image. 13
 - Calibrating the image. 13

Auto Warp application installation

Learn how to install the webcam driver and Auto Warp application.


Affected products

The following products can use the Blending and Warping application.

- DWU7062-GS
- DWU8902-GS
- DWU1082-GS

Auto Warp system layout

The following diagram illustrates the system layout required to use the Auto Warp application.

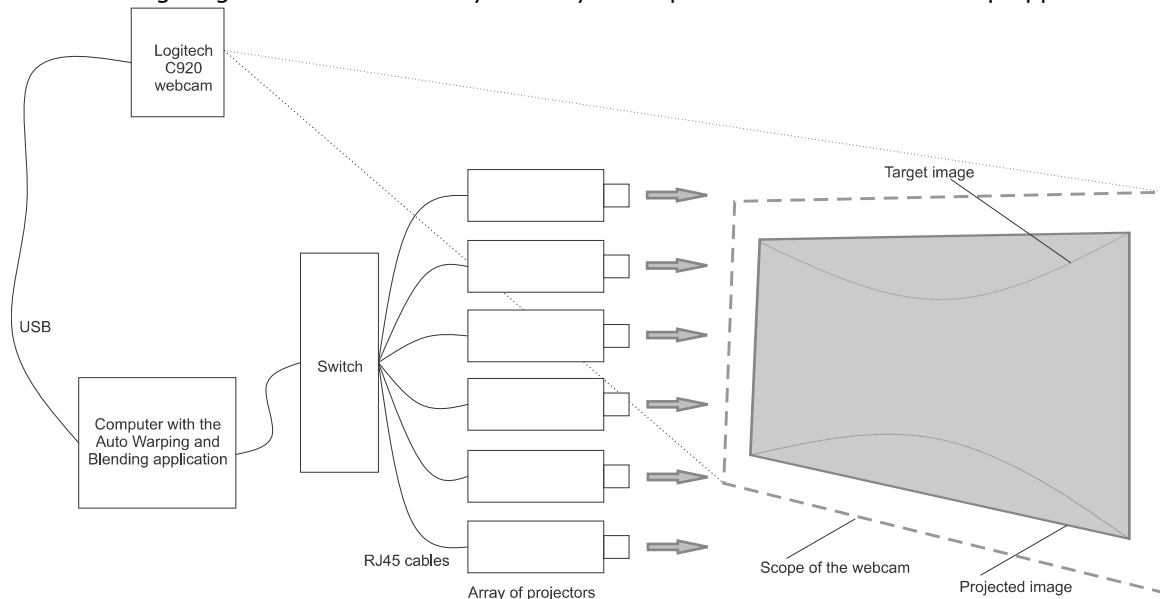

Auto Warp application overview

The Auto Warp application uses a webcam to provide easy configuration of warping, blending, and stacking for projectors.

Using the Auto Warp application you can control up to six units simultaneously with various layouts for warping, blending, and stacking.

Blending	Stacking	Maximum units
1x1	1 to 6	6
1x2	1 to 3	6
2x1	1 to 3	6
1x3	1 to 2	6
3x1	1 to 2	6
2x2	1	4
2x3	1	6
3x2	1	6

Installing the webcam driver

Installing the Logitech HD Pro Webcam C920 driver makes sure the Auto Warp application functions as expected.

1. Navigate to the Logitech website for the Logitech HD Pro Webcam C920:
<http://www.logitech.com/en-us/support/hd-pro-webcam-c920?section=downloads&bit=64&osid=14&softwareFile=on>
2. Click **Downloads**.
3. Under Windows, select the appropriate operating system.
The Auto Warp application supports Windows XP, Windows 7 (32-bit or 64-bit), and Windows 8.
4. Click **Download**.
5. In the Opening dialog, click **Save File**.
6. Navigate to where you downloaded the file and double-click **lws251.exe**.
7. Click Run.
8. To complete the installation, follow the **Logitech Webcam Software Installation** wizard.

Installing the Auto Warp application

Install the Auto Warp application on a computer running Windows XP, Windows 7 (32-bit or 64-bit), or Windows 8.

To install the Auto Warp application, run **Auto AP Setup.exe**.

The Auto Warp application shortcut is installed on the desktop.

Reverting all settings

At any time, you can revert all settings back to their default settings.

From the Auto Warp homepage, click **Reset**.

Restoring previously saved warping settings

If the currently set warping settings are not correct or as expected, you can apply the previous geometry correction.

From the Auto Warp homepage, click **Resync**.

Adjusting the brightness of the blending zone

Adjust the brightness of the gradient by increasing or decreasing the gamma of the blend zone.

1. From the Auto Warp homepage, click **Others**.
2. In the Edge Blending Settings dialog, adjust the Gamma slider to the brightness required. The brightness can be adjusted from 0 to 10.
3. To close the dialog, in the right-hand corner of the dialog, click **X**.

Stacking solution

When the user needs brighter luminance output for the display, use the stacking function to stack several projection images onto the same shape.

Follow these steps to configure the stacking solution.

1. *Set Stacking as the solution you want to configure* (on page 7).
2. *Set up the camera* (on page 7) so it appears clearly in the target image area.
3. *Set the boundaries* (on page 8) of the projected image.
4. *Perform calibration* (on page 8) so the image clearly fills the target area.

Configuring the stacking solution

Select stacking as the solution you want to configure several projection images onto the same shape for brighter output.

1. To open a new project, from the Auto Warp homepage, click **New**.
2. From the Solution Mode screen, select **Stacking**.
3. Click **Next**.
4. From the Resolution Mode list, select the required resolution.
5. From the Layout list, select the required layout.
6. In the Stack No field, enter the stack number.
7. Under Network, double-click the IP address and modify the IP address as required.
8. Click **OK**.
9. To close the window, click **Exit**.

Setting up the camera

Set up the camera so the image appears clearly within the target image area.

1. To open the camera, from the Auto Warp homepage, click **Camera**.
2. From the Camera list, select **Logitech HD Pro Webcam C920**.
3. Click **Open Camera**.
4. To increase or decrease the magnification of the image so it fits within the image box, adjust the **Zoom** slider.
5. To move the image, use the **T+/-** or **P+/-** controls .
6. To focus the image, adjust the **Focus** slider.
Christie recommends the default (minimum value) for focus.
7. Select **Advance**.

8. To make the image solid white, press **Auto Tune**.
If Auto Tune cannot find the best value, adjust the **Exposure, Brightness, Gain, and Contrast** parameters to make the image clear.
9. To close the window when the image is clear, click **Exit**.

Setting the boundaries of the projected image

Set the boundaries of the projected image so the image is displayed within the limits of the webcam projection.

1. To open the Boundary Setting page, from the Auto Warp homepage, click **Boundary**.
2. To set the grid number, adjust the **Grid Number** slider.
Christie recommends setting the grid to 2 x 2.
3. Select the warping mode: **Curve** or **Linear**.
4. Move the cursor to the blue circle on the image and click.
The point turns to a yellow circle.
5. Drag the boundary to the required location, making sure the two solid yellow lines are within the overlap area.
6. To fine tune the boundary, adjust the grid number slider to a larger number.
7. Repeat steps 4 and 5.
8. Under Pattern, choose a suitable pattern.
9. Magnify the image by scrolling the mouse or adjusting the **Zoom** setting.
10. To close the window, click **Exit**.
To reset to the default boundary configuration, click **Reset Boundary**.

Calibrating the image

Calibrate the image so it clearly fills the defined area.

1. To open the calibration page, from the Auto Warp homepage, click **Calibration**.
Calibration starts.
2. If the image is fine, close the application.
3. If the image is not as expected, to recalibrate the image, click **Re-calibration**.
 - a) Adjust the sharpness value until the white area is a full solid area.
 - b) When the image is as expected, click **Next**.
 - c) Adjust the sharpness value again until the white area is a full solid area.
 - d) Click **Done**.
Auto correction starts.
 - e) If the image is as expected, *return to the Boundary page* (on page 8) to compare the image.
 - f) If the image is still not as expected, repeat step 3 to retry recalibrating the image again.To save time, recalibrate the image with photos stored on the computer.

Auto blending solution

When the user needs to project large content on the wall, crop the content into X number of parts, project them by X units, and use the blending function to blend all projection images into a complete image.

Follow these steps to configure the auto blending solution.

1. *Set Blending as the solution you want to configure* (on page 9).
2. *Set up the camera* (on page 7) so it appears clearly in the target image area.
3. *Set the boundaries* (on page 8) of the projected image.
4. *Perform calibration* (on page 8) so the image clearly fills the target area.

Configuring the auto blending solution

Select the auto blending solution when you want to project large content on the wall.

1. To open a new project, from the Auto Warp homepage, click **New**.
2. From the Solution mode screen, select **Blending**.
3. Click **Next**.
4. From the Resolution Mode list, select the required resolution.
5. In the Layout field, select the type of blending.
 - Horizontal blending = 1 Row x 2 Column
6. Under Network, double-click the IP address and modify the IP address as required.
7. Click **Next**.
8. Click **Preview** and check the image.

The blue line from the right image must exceed the yellow line from the left image. The yellow line from the left image must exceed the blue line from the right image.
9. When the overlap area is correct, click **OK**.

Setting up the camera

Set up the camera so the image appears clearly within the target image area.

1. To open the camera, from the Auto Warp homepage, click **Camera**.
2. From the Camera list, select **Logitech HD Pro Webcam C920**.
3. Click **Open Camera**.
4. To increase or decrease the magnification of the image so it fits within the image box, adjust the **Zoom** slider.
5. To move the image, use the **T+/-** or **P+/-** controls .
6. To focus the image, adjust the **Focus** slider.

Christie recommends the default (minimum value) for focus.

7. Select **Advance**.
8. To make the image solid white, press **Auto Tune**.
If Auto Tune cannot find the best value, adjust the **Exposure, Brightness, Gain, and Contrast** parameters to make the image clear.
9. To close the window when the image is clear, click **Exit**.

Setting the boundaries of the projected image

Set the boundaries of the projected image so the image is displayed within the limits of the webcam projection.

1. To open the Boundary Setting page, from the Auto Warp homepage, click **Boundary**.
2. To set the grid number, adjust the **Grid Number** slider.
Christie recommends setting the grid to 2 x 2.
3. Select the warping mode: **Curve** or **Linear**.
4. Move the cursor to the blue circle on the image and click.
The point turns to a yellow circle.
5. Drag the boundary to the required location, making sure the two solid yellow lines are within the overlap area.
6. To fine tune the boundary, adjust the grid number slider to a larger number.
7. Repeat steps 4 and 5.
8. Under Pattern, choose a suitable pattern.
9. Magnify the image by scrolling the mouse or adjusting the **Zoom** setting.
10. To close the window, click **Exit**.
To reset to the default boundary configuration, click **Reset Boundary**.

Calibrating the image

Calibrate the image so it clearly fills the defined area.

1. To open the calibration page, from the Auto Warp homepage, click **Calibration**.
Calibration starts.
2. If the image is fine, close the application.
3. If the image is not as expected, to recalibrate the image, click **Re-calibration**.
 - a) Adjust the sharpness value until the white area is a full solid area.
 - b) When the image is as expected, click **Next**.
 - c) Adjust the sharpness value again until the white area is a full solid area.
 - d) Click **Done**.
Auto correction starts.
 - e) If the image is as expected, *return to the Boundary page* (on page 8) to compare the image.

- f) If the image is still not as expected, repeat step 3 to retry recalibrating the image again. To save time, recalibrate the image with photos stored on the computer.

Auto blending and stacking solution

When a user needs to project large content on the wall with sufficient output brightness, crop the content into X number of parts, project them by Y units ($Y > X$), and use the blending function to blend all of the projected images into a complete image.

Follow these steps to configure the stacking solution.

1. *Set Stacking as the solution you want to configure* (on page 12).
2. *Set up the camera* (on page 7) so it appears clearly in the target image area.
3. *Set the boundaries* (on page 8) of the projected image.
4. *Perform calibration* (on page 8) so the image clearly fills the target area.

Configuring the auto blending and stacking solution

Select the auto blending and stacking solution when you want to project large content on the wall with sufficient output brightness.

1. To open a new project, from the Auto Warp homepage, click **New**.
2. From the Solution mode screen, select **Stacking & Blending**.
3. Click **Next**.
4. Select the required resolution.
5. In the Layout field, select the type of blending.
 - Horizontal blending = 1 Row x 2 Column
6. In the Stack No field, enter 2 for the stack number.
7. Under Network, double-click the IP address and modify the IP address as required.
8. Click **Next**.
9. Click **Preview** and check the image.

The blue line from the right image must exceed the yellow line from the left image. The yellow line from the left image must exceed the blue line from the right image.
10. When the overlap area is correct, click **OK**.

Setting up the camera

Set up the camera so the image appears clearly within the target image area.

1. To open the camera, from the Auto Warp homepage, click **Camera**.

2. From the Camera list, select **Logitech HD Pro Webcam C920**.
3. Click **Open Camera**.
4. To increase or decrease the magnification of the image so it fits within the image box, adjust the **Zoom** slider.
5. To move the image, use the **T+/-** or **P+/-** controls .
6. To focus the image, adjust the **Focus** slider.
Christie recommends the default (minimum value) for focus.
7. Select **Advance**.
8. To make the image solid white, press **Auto Tune**.
If Auto Tune cannot find the best value, adjust the **Exposure**, **Brightness**, **Gain**, and **Contrast** parameters to make the image clear.
9. To close the window when the image is clear, click **Exit**.

Setting the boundaries of the projected image

Set the boundaries of the projected image so the image is displayed within the limits of the webcam projection.

1. To open the Boundary Setting page, from the Auto Warp homepage, click **Boundary**.
2. To set the grid number, adjust the **Grid Number** slider.
Christie recommends setting the grid to 2 x 2.
3. Select the warping mode: **Curve** or **Linear**.
4. Move the cursor to the blue circle on the image and click.
The point turns to a yellow circle.
5. Drag the boundary to the required location, making sure the two solid yellow lines are within the overlap area.
6. To fine tune the boundary, adjust the grid number slider to a larger number.
7. Repeat steps 4 and 5.
8. Under Pattern, choose a suitable pattern.
9. Magnify the image by scrolling the mouse or adjusting the **Zoom** setting.
10. To close the window, click **Exit**.
To reset to the default boundary configuration, click **Reset Boundary**.

Calibrating the image

Calibrate the image so it clearly fills the defined area.

1. To open the calibration page, from the Auto Warp homepage, click **Calibration**.
Calibration starts.
2. If the image is fine, close the application.
3. If the image is not as expected, to recalibrate the image, click **Re-calibration**.
 - a) Adjust the sharpness value until the white area is a full solid area.

- b) When the image is as expected, click **Next**.
 - c) Adjust the sharpness value again until the white area is a full solid area.
 - d) Click **Done**.
Auto correction starts.
 - e) If the image is as expected, *return to the Boundary page* (on page 8) to compare the image.
 - f) If the image is still not as expected, repeat step 3 to retry recalibrating the image again.
- To save time, recalibrate the image with photos stored on the computer.

Corporate offices

Christie Digital Systems USA, Inc.
ph: 714 236 8610

Christie Digital Systems Canada Inc.
ph: 519 744 8005

Worldwide offices

Africa
ph: +27 (0)11 510 0094

Australia
ph: +61 (0) 7 3624 4888

Brazil
ph: +55 (11) 2548 4753

China (Beijing)
ph: +86 10 6561 0240

China (Shanghai)
ph: +86 21 6030 0500

Columbia
ph: +57 (318) 447 3179

France
ph: +33 (0) 1 41 21 44 04

Germany
ph: +49 (0) 221 99512 0

India
ph: +91 (080) 6708 9999

Japan (Tokyo)
ph: 81 3 3599 7481

Korea (Seoul)
ph: +82 2 702 1601

Mexico
ph: +52 55 4744 1790

Singapore
ph: +65 6877 8737

Spain
ph: +34 91 633 9990

Middle East
ph: +971 (0) 503 6800

United Kingdom
ph: +44 (0) 118 977 8000

United States (Arizona)
ph: 602 943 5700

Independent sales consultant offices

Italy
ph: +39 (0) 2 9902 1161

Russia
ph: +36 (0) 1 47 48 100



For the most current technical documentation, visit www.christiedigital.com.

