

CP42LH

Installation Guide

020-101373-02

CP42LH

Installation Guide

020-101373-02

NOTICES

COPYRIGHT AND TRADEMARKS

Copyright © 2015 Christie Digital Systems USA Inc. All rights reserved.

All brand names and product names are trademarks, registered trademarks or trade names of their respective holders.

GENERAL

Every effort has been made to ensure accuracy, however in some cases changes in the products or availability could occur which may not be reflected in this document. Christie reserves the right to make changes to specifications at any time without notice. Performance specifications are typical, but may vary depending on conditions beyond Christie's control such as maintenance of the product in proper working conditions. Performance specifications are based on information available at the time of printing. Christie makes no warranty of any kind with regard to this material, including, but not limited to, implied warranties of fitness for a particular purpose. Christie will not be liable for errors contained herein or for incidental or consequential damages in connection with the performance or use of this material. Canadian manufacturing facility is ISO 9001 and 14001 certified.

WARRANTY

Products are warranted under Christie's standard limited warranty, the complete details of which are available by contacting your Christie dealer or Christie. In addition to the other limitations that may be specified in Christie's standard limited warranty and, to the extent relevant or applicable to your product, the warranty does not cover:

- a. Problems or damage occurring during shipment, in either direction.
- b. Projector lamps (See Christie's separate lamp program policy).
- c. Problems or damage caused by use of a projector lamp beyond the recommended lamp life, or use of a lamp other than a Christie lamp supplied by Christie or an authorized distributor of Christie lamps.
- d. Problems or damage caused by combination of a product with non-Christie equipment, such as distribution systems, cameras, DVD players, etc., or use of a product with any non-Christie interface device.
- e. Problems or damage caused by the use of any lamp, replacement part or component purchased or obtained from an unauthorized distributor of Christie lamps, replacement parts or components including, without limitation, any distributor offering Christie lamps, replacement parts or components through the internet (confirmation of authorized distributors may be obtained from Christie).
- f. Problems or damage caused by misuse, improper power source, accident, fire, flood, lightning, earthquake or other natural disaster.
- g. Problems or damage caused by improper installation/alignment, or by equipment modification, if by other than Christie service personnel or a Christie authorized repair service provider.
- h. Problems or damage caused by use of a product on a motion platform or other movable device where such product has not been designed, modified or approved by Christie for such use.
- i. Problems or damage caused by use of a projector in the presence of an oil-based fog machine or laser-based lighting that is unrelated to the projector.
- j. For LCD projectors, the warranty period specified in the warranty applies only where the LCD projector is in "normal use" which means the LCD projector is not used more than 8 hours a day, 5 days a week.
- k. Except where the product is designed for outdoor use, problems or damage caused by use of the product outdoors unless such product is protected from precipitation or other adverse weather or environmental conditions and the ambient temperature is within the recommended ambient temperature set forth in the specifications for such product.
- l. Image retention on LCD flat panels.
- m. Defects caused by normal wear and tear or otherwise due to normal aging of a product.

The warranty does not apply to any product where the serial number has been removed or obliterated. The warranty also does not apply to any product sold by a reseller to an end user outside of the country where the reseller is located unless (i) Christie has an office in the country where the end user is located or (ii) the required international warranty fee has been paid.

The warranty does not obligate Christie to provide any on site warranty service at the product site location.

PREVENTATIVE MAINTENANCE

Preventative maintenance is an important part of the continued and proper operation of your product. Please see the Maintenance section for specific maintenance items as they relate to your product. Failure to perform maintenance as required, and in accordance with the maintenance schedule specified by Christie, will void the warranty.

REGULATORY

The product has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the product is operated in a commercial environment. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of the product in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the user's own expense.

CAN ICES-3 (A) / NMB-3 (A)

이 기기는 업무용 (A 급) 으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

Environmental


The product is designed and manufactured with high-quality materials and components that can be recycled and reused. **This symbol**  means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from regular waste. Please dispose of the product appropriately and according to local regulations. In the European Union, there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!

Table of Contents

Introduction	11
Christie Laser Projection System components	12
General safety precautions	13
AC power precautions	13
Laser Safety Precautions	14
Laser module laser safety labels	15
LM Rack (Full/Half) laser safety labels	17
Projector laser safety labels	18
Laser module status lights	21
LM Rack safety features	22
Projector safety features	23
Nominal ocular hazard distance	24
Installation	26
Prepare the installation site	26
Tools required	26
Site requirements	27
Physical environment	27
External ducting	27
LM Rack (Full/Half) power requirements	28
Projector power requirements	28
Minimum clearance requirements	29
Position and set up the laser rack	30
Connect external ducting	31
Install rectifiers and breakers	31
Connect power to the laser system network switch	32
Install laser modules	32
Connect the interlock cables to the laser modules	34
Connect the power cables	35
Connect Ethernet cables to the laser modules	35
Connect fiber optic cables to the laser modules	35
Connect the laser bank manager	37
Position the projector	38
Level the projector	38

Install the foot extension rods	39
Install the touch panel controller	39
Install the lens	41
Connect fiber optic cables to the projector	45
Connect the interlock to the projector	47
Connect the laser rack harness	47
Connect the Ethernet cable to the projector	47
Projector connections and status LEDs	48
Connect the projector to a computer	50
Connect devices to the GPIO port	50
Connect devices to the SCCI port	51
Connect devices to the 3D terminal	52
Complete the installation checklist	52

Adjust the Image 53

Turn the system on	53
Test the interlocks	54
Test the key switch	54
Test the Laser Rack emergency stop	54
Test the projector emergency stop	54
Add the laser modules to the system	54
Disconnect all but one laser modules	55
Image adjustments performed with low white light	55
Orient the screen image	55
Adjust the image to fit the screen	55
Adjust the offset	56
Adjust the offset with an Intelligent Lens System (ILS)	56
Rotate the integrator rod	56
Align the fold mirror	56
Adjust horizontal boresight	57
Adjust vertical boresight	58
Adjust vertical boresight with an ILS	59
Image adjustments with full light	61
Turn on all laser modules	61
Calibrate lens motors	61
Adjust DMD convergence	61
Obtain the white point and brightness	67
Save the laser settings	68
Dual-projection	68

- Add the projector to a network68
- Connect sources69
- Calibrate color69
- Create channels69
- Turn system off70
 - Turn system off in an emergency70
- Troubleshooting 71**
 - Check the laser module status71
 - Missing focus/zoom warning72
- Projector Specifications 73**
 - Power requirements73
 - Physical specifications73
 - Operating position74
 - Operating environment74
 - Non-operating environment74
 - Projection lens compatibility75
 - Accessories75
 - Standard75
 - Optional76
 - Third-party accessories76
 - Replacement air filters76
- Laser Module Specifications 77**
 - Power requirements.77
 - Physical specifications77
 - Operating environment77
 - Non-operating environment78
 - Accessories78
 - Included78
 - Additional78
 - Optional78
- LM Rack Specifications 79**
 - Power requirements79
 - Physical specifications80
 - LM Rack (Full)80
 - LM Rack (Half)80
 - Operating environment81
 - Non-operating environment81

Regulatory 82

- Safety82
 - Laser safety82
- Electro-magnetic compatibility82
- Environmental82
- Certification83

Christie Laser Projection System Installation Checklist 84

Introduction


This manual describes how to install and setup the Christie Laser Projection System.

 **WARNING**

Failure to comply with the following could result in death or serious injury.

- The components of the Christie Laser Projection System are designed and certified to work together as a unit. Christie components should never be used with third-party components. Use of non-Christie components with Christie systems may pose safety concerns and void your warranty.
- Only Christie qualified installers who are knowledgeable about the hazards associated with laser use, high-voltage and high temperatures generated by the projector are authorized to assemble, install, and service the Christie Laser Projection System.

Christie Laser Projection System components

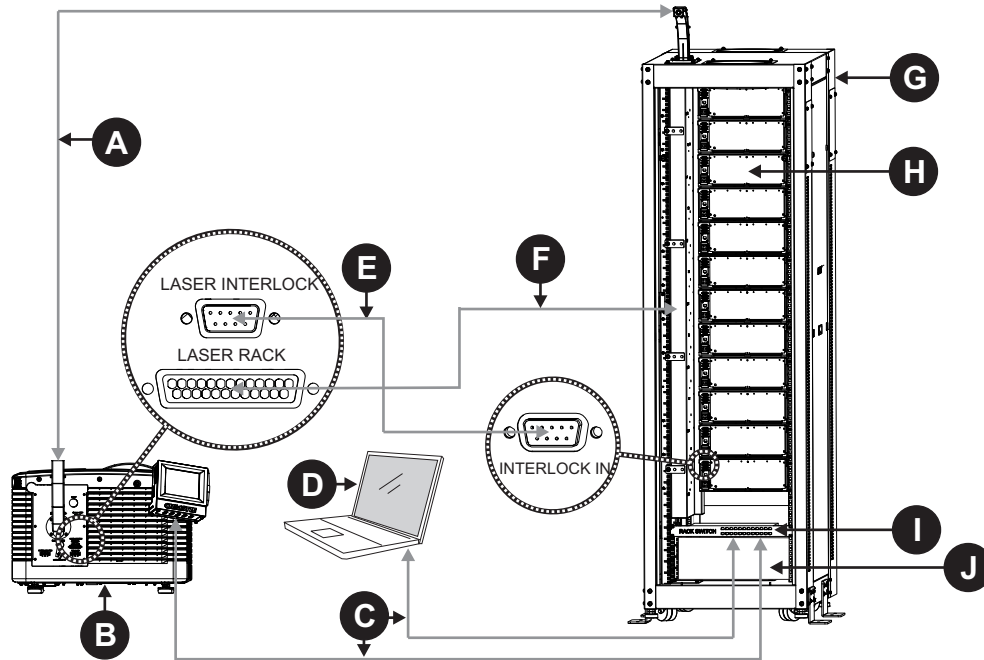

A	Fiber optic bundle Transmits the collected laser light to the projector.
B	Projector Modulates light from the laser modules and passes it through a projection lens to produce the image on the screen.
C	Ethernet cables Connects the laser bank manager and the projector to the network.
D	Laser bank manager Runs the laser bank control application that manages the laser modules.
E	Interlock cable (9-pin) Carries the signal for the emergency stop, key switch, and laser modules to verify a safe connection between the laser modules and the projector.
F	Interlock cable (25-pin) Carries the signal for the Manual Reset button to the projector.
G	LM Rack (Full/Half) (rear side shown) A full and a half rack are available. The LM Rack Full (shown) accommodates up to 12 laser modules, the power distribution unit, and the Laser system network switch and equipped with a key switch and an emergency stop for safety. The LM Rack Half accommodates up to 7 laser modules.
H	Laser module Generates laser light for the projector.
I	Laser system network switch Provides Ethernet connection to laser modules, laser bank manager, and projector.
J	Power distribution unit Contains rectifiers and breakers to provide DC power to laser modules.

General safety precautions

DANGER

Failure to comply with the following results in death or serious injury.

- An incorrect power setup provides a fire and shock hazard. Do not operate the system unless certified connections, providing the recommended voltage, are used. Do not attempt operation unless the power cord, power socket, and power plug meet the appropriate local rating standards.
- Live power is a shock hazard. Only qualified service technicians are permitted to open a projector enclosure, and only if the AC is fully disconnected.

WARNING

Failure to comply with the following could result in death or serious injury.

- A qualified technician is required for all installations.
- The projection head must use Christie laser modules and laser rack.
- Use of the rear safety strap on the projector is mandatory to prevent the projector from tipping. Secure the strap between the projector and the optional rack stand or another structure.
- Four or more people are required to safely lift and install the projector.
- Two or more people are required to safely lift and install a laser module.
- The extremely high brightness of the projector can cause permanent eye damage. For protection from harmful radiation, keep all projector housings intact during operation.
- Never look directly into the projector lens.
- Concentrated light is a fire hazard. Keep hands, clothes, and all combustible material away from the concentrated light beam of the projector.

CAUTION

Failure to comply with the following could result in minor or moderate injury.

- Wear protective footwear when installing the rack.
- Position all cables where they cannot contact hot surfaces or be pulled or tripped over.

NOTICE

The laser modules and the projector must be operated in an environment that meets the operating range specification. For the laser modules, see *Operating environment* on page 80; for the projector, see *Operating environment* on page 77. Failure to comply may result in equipment damage.

AC power precautions

WARNING

Failure to comply with the following could result in death or serious injury.

- Loose cables provide a trip or fire hazard. Position all cables where they cannot contact hot surfaces, be pulled, or be tripped over.
- Damaged cables provide a fire hazard. Do not allow anything to rest on the power cord. Never operate the projector if a cable appears damaged.
- Overloaded power outlets and extension cords provide a fire and shock hazard. Do not overload power outlets or extension cords.
- Some attachments and accessories provide a fire, shock, or personal injury hazard. Only use attachments and accessories that are recommended by Christie.

CAUTION

Only qualified service technicians are permitted to open projector enclosures and only if the projector is disconnected from AC power. Failure to comply could result in minor or moderate injury.

Laser Safety Precautions

The Christie Laser Projection System components have laser classifications, as outlined by the International Electrotechnical Commission (IEC), ranging from Class 1 to Class 4. Immediate skin hazard and eye hazard can occur from exposure to either the direct or specular reflected beam. This may pose a fire hazard or a diffuse reflection hazard.

- Wavelength: 435 nm to 660 nm
- Beam divergence: 0.1 rad to 0.96 rad, lens dependent
- Pulse pattern: Continuous Wave (CW).
- Maximum output: < 10 W

 DANGER

Failure to comply with the following results in death or serious injury.

- This product must be installed within a restricted access location which is normally inaccessible by the general public, including workers, visitors, and residents in the immediate vicinity, by means of engineering or administrative control measures but is accessible to authorized personnel that have had specific safety training.
- The installation setup must prevent access to the nominal ocular hazard area. See [Projection lens compatibility](#) on page 77.

 WARNING

Failure to comply with the following could result in death or serious injury.

- A qualified technician is required for all installations.
- Never look into the end of a fiber optic cable while the device is operational. Laser radiation can be harmful to the human eye and injury may occur.
- Invisible infrared LED radiation might be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.
- Lasers contain a high energy density. These can be dangerous for skin tissue as well as pose an electrical, chemical, and non-ionizing radiation hazard.
- Do not operate the Christie Laser Projection System with the laser rack access panels removed.


 CAUTION

Failure to comply with the following could result in minor or moderate injury.

- Turn the laser module breakers off before inspecting the fiber optic cable.
- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Laser module laser safety labels

This diagram shows the laser safety labels on the right side of the laser module.

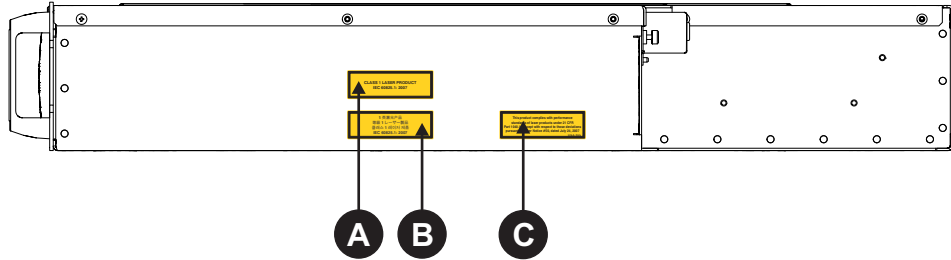


<p>A</p>		<p>CLASS 1 LASER PRODUCT IEC630825-1: 2007</p>
<p>B</p>		<p>Translation of label A in French, Chinese, Japanese, and Korean</p>
<p>C</p>		<p>Christie Digital Systems Canada Inc. 809 Wellington Street North Kitchener, ON N2G 4Y7 Canada</p> <p>This product complies with performance standards of laser products under 21 CFR Part 1040.10 except with those deviations pursuant to Laser Notice #50, dated July 24, 2007 U.S.A. Only</p>

This diagram shows labels below the laser module cover.



Do not remove the laser module cover for maintenance or service. The laser module must be repaired at a Christie Digital Factory. Removing the cover voids the warranty. Failure to comply could result in death or serious injury.

- Wavelength: 435 nm to 660 nm
- Beam divergence: 10 mrad
- Pulse Pattern: Continuous Wave
- Maximum power: 64 W

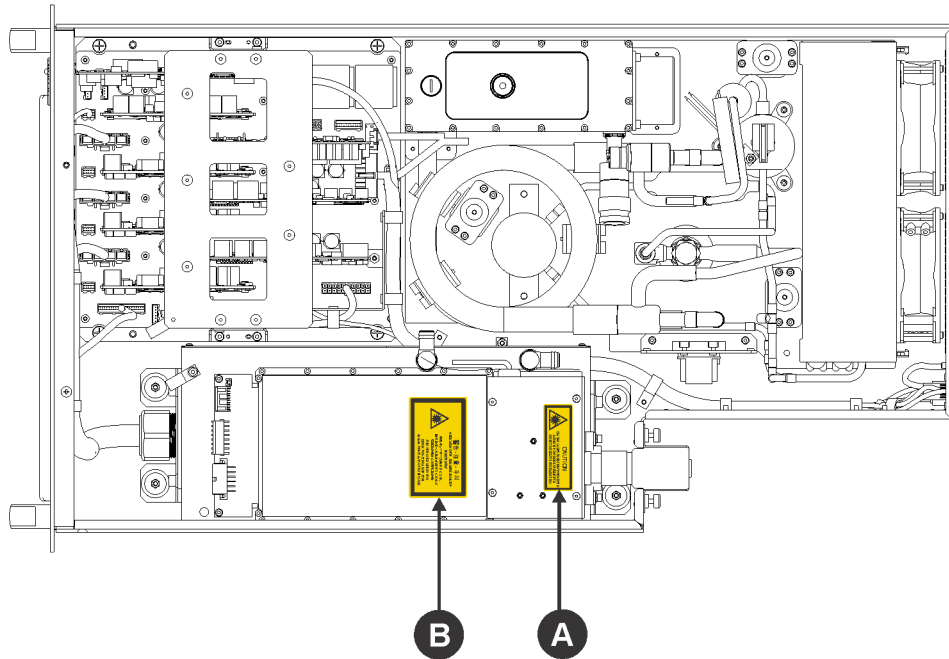

A		<p>CAUTION CLASS 4 LASER RADIATION WHEN OPEN AVOID EYE OR SKIN EXPOSURE TO DIRECT OR SCATTERED RADIATION</p>
B		<p>Translation of label A in French, Chinese, Japanese, and Korean</p>


LM Rack (Full/Half) laser safety labels

This diagram identifies laser safety labels on the laser rack underneath the operator side door.



The laser rack contains a Class 3B laser product. Do not disassemble components in the laser rack. Disassembling components voids the warranty. Failure to comply result in death or serious injury.


- Wavelength: 435 nm to 660 nm
- Beam divergence: 260 mrad
- Pulse Pattern: Continuous Wave
- Maximum power: 100 mW

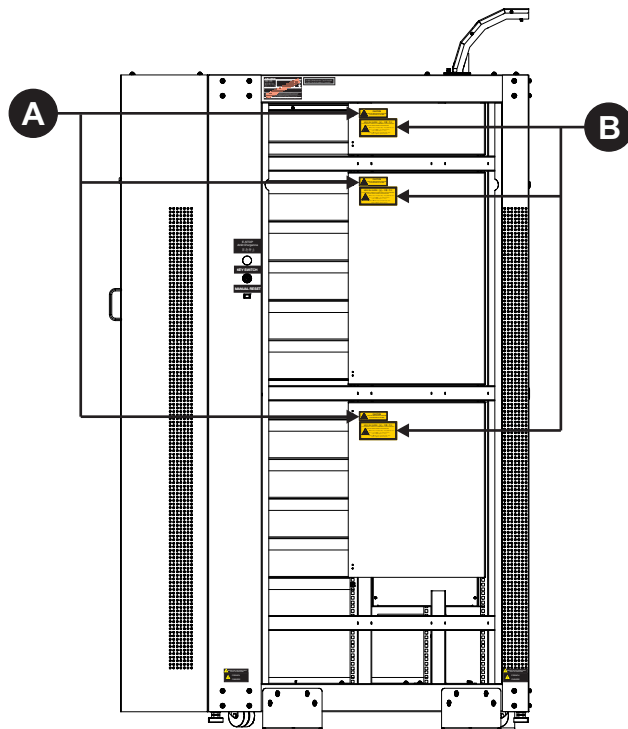



<p>A</p>		<p>CAUTION CLASS 3B LASER RADIATION WHEN OPEN AVOID EXPOSURE TO BEAM</p>
<p>B</p>		<p>Translation of label A in French, Chinese, Japanese, and Korean</p>


Projector laser safety labels

This diagram shows the laser safety labels on the operator side of the projector.

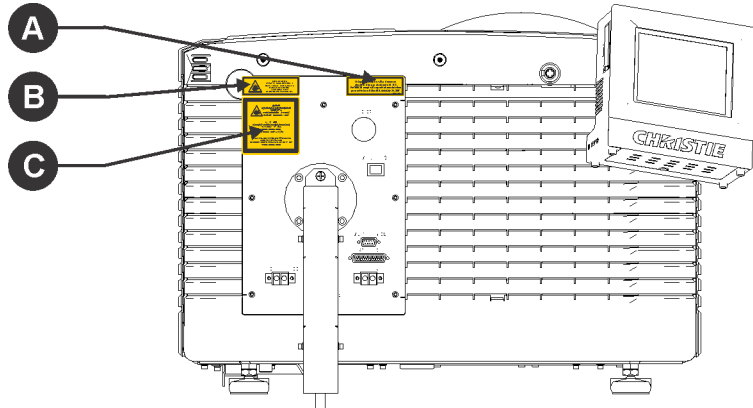
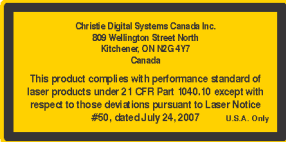
<p>A</p>	 <p>Christie Digital Systems Canada Inc. 809 Wellington Street North Kitchener, ON N2G 4Y7 Canada</p> <p>This product complies with performance standard of laser products under 21 CFR Part 1040.10 except with respect to those deviations pursuant to Laser Notice #50, dated July 24, 2007 U.S.A. Only</p>	<p>Christie Digital Systems Canada Inc. 809 Wellington Street North Kitchener, ON N2G 4Y7 Canada</p> <p>This product complies with performance standards of laser products under 21 CFR Part 1040.10 except with respect to those characteristics authorized by Variance number <number> effective <date> and deviations pursuant to Laser Notice #50, dated July 24, 2007</p> <p>U.S.A. Only</p>
<p>B</p>	 <p>LASER RADIATION AVOID EYE OR SKIN EXPOSURE TO DIRECT OR SCATTERED RADIATION CLASS 4 LASER PRODUCT 435nm-660nm <10W CLASSIFIED PER IEC 60825-1 2007</p>	<p>LASER RADIATION AVOID EYE OR SKIN EXPOSURE TO DIRECT OR SCATTERED RADIATIONS CLASS 4 LASER PRODUCT 435nm-660nm <10W CLASSIFIED PER IEC 60825-1 2007</p>
<p>C</p>	 <p>激光辐射 避免眼睛或皮肤受到直射或散射辐射 直接或散射 435 纳米至 660 纳米 小于 10 瓦 认证标准: IEC 60825-1 2007</p> <p>レーザー照射 または皮膚への直接または散乱光の暴露回避 クラス4のレーザー製品 435nm-660nm<10W IEC 60825-1 2007 にて分類</p> <p>눈이나 피부가 레이저 광선의 직접 혹은 산란광에 노출되는 것을 피하십시오 IEC 60825-1 2007의 अनुसार (अनुसूचि) लेजर प्रदीप 435nm-660nm<10W</p>	<p>Translation of label B in French, Chinese, Japanese, and Korean</p>

This diagram shows the laser safety labels on the lens side of the projector.

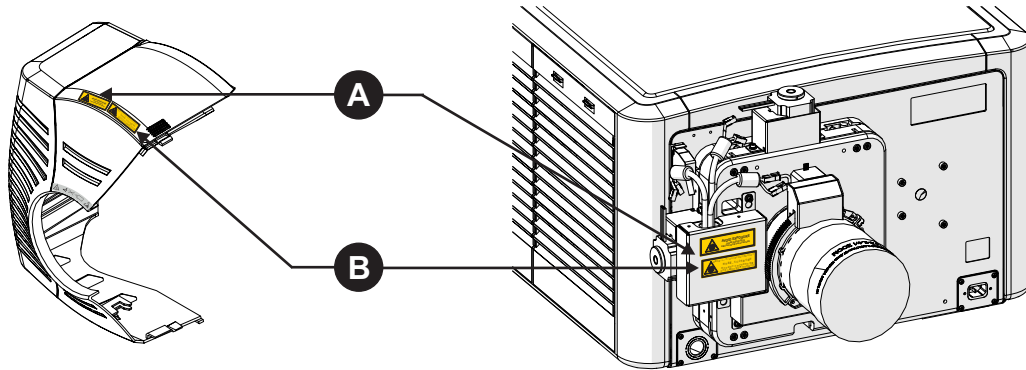


A		<p>AVOID EXPOSURE LASER RADIATION IS EMITTED FROM THIS APERTURE</p>
B		<p>Translation of label A in French, Chinese, Japanese, and Korean</p>

This diagram shows the laser safety labels that appear on the fiber bundle relay optics.



WARNING Do not remove the protective housing. Failure to comply could result in death or serious injury.


- Wavelength: 435 nm to 660 nm
- Beam divergence: 260 mrad
- Pulse Pattern: Continuous Wave
- Maximum power: 775 W

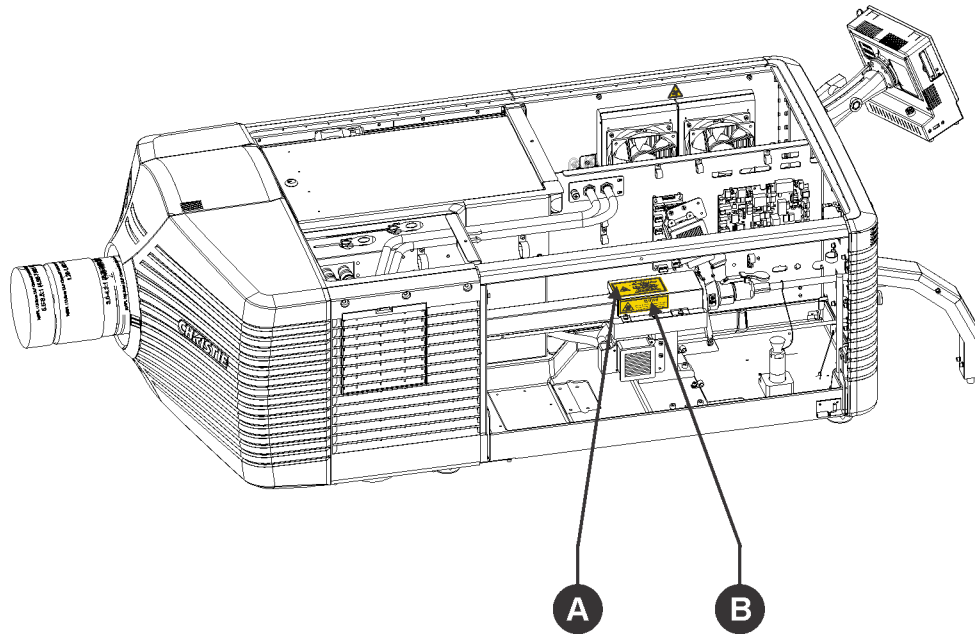

A		<p>CAUTION CLASS 4 LASER RADIATION WHEN OPEN AVOID EYE OR SKIN EXPOSURE TO DIRECT OR SCATTERED RADIATION</p>
B		<p>Translation of label A in French, Chinese, Japanese, and Korean</p>

Laser module status lights


This diagram shows the location of the laser module LED status lights. The laser module is off when the Power LEDs are off.

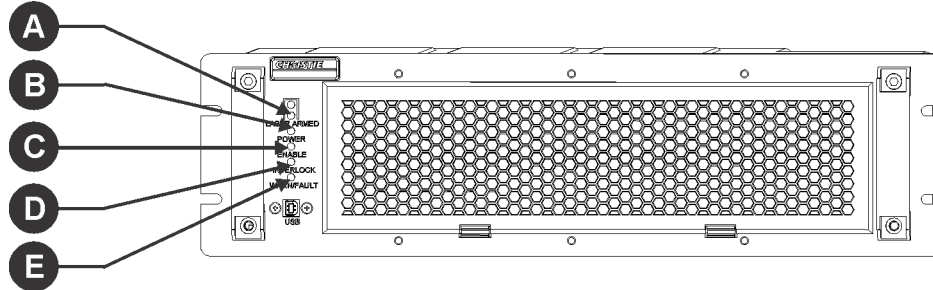

LED	Red	Green	Amber	White
A LASER ARMED				Armed (Interlocks OK, lasers are charged; may or may not be emitting)
B POWER		On (lasers are active and emitting)	Standby (Chiller and fans running)	
C ENABLE				Lasers are active and emitting
D INTERLOCK	Not blinking: external interlock failure Blinking: IR interlock failure	OK		
E WARN/FAULT	Fault (laser module does not turn on or has turned off)	No fault	Warning (laser module is on but a laser temperature or voltage is above the warning threshold)	

LM Rack safety features


This diagram shows the laser safety features on the operator side of the laser rack.

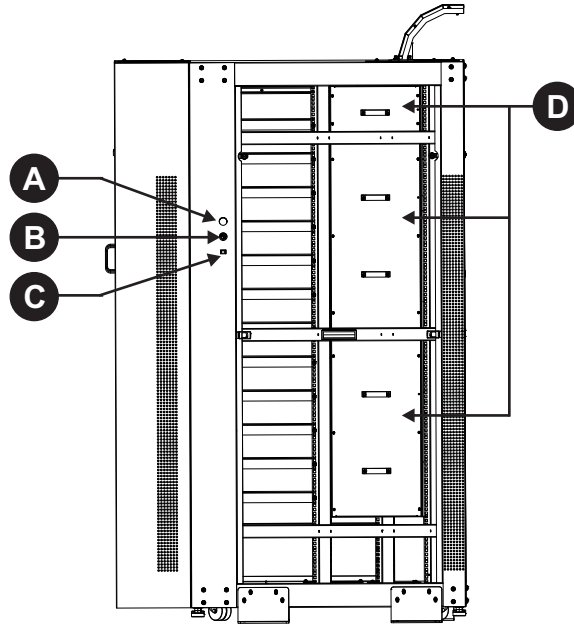

A	Emergency stop To shut down the laser modules in an emergency, press E-stop .
B	Key switch Key must be present for the system to run. Laser radiation is not accessible when the key is removed.
C	Manual reset Press Reset following a system restart.
D	Fiber carrier panel When any panel is removed, the laser interlock opens and the lasers cannot be armed.

Projector safety features

This diagram shows the location of the laser safety features on the projector.

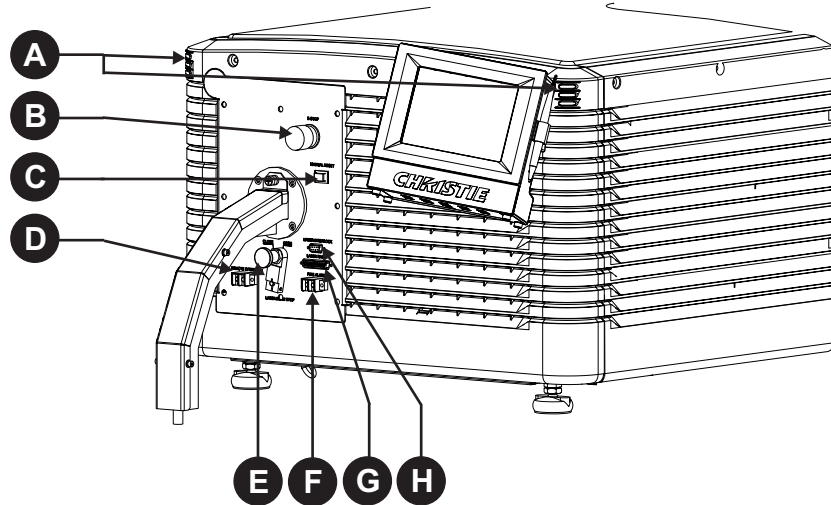


A	<p>Laser emission indicator lights</p> <p>Bottom two LEDs on both sides emit white light when the lasers are armed. They are off when the lasers are not armed.</p>
B	<p>Emergency stop</p> <p>Turns off the laser modules off in an emergency.</p>
C	<p>Manual reset</p> <p>Re-arms the system after a system shutdown. Pressing Manual Reset indicates it is safe to arm the lasers.</p>
D	<p>Remote interlock</p> <p>Enables remote shutdown of the projector (optional).</p>
E	<p>Laser beam stop</p> <p>Blocks the laser light path. Rotate the beam stop to Closed when performing service or maintenance on the projector. The laser projector system cannot be armed when the laser beam stop is closed.</p>
F	<p>Fire alarm</p> <p>Enables the projector to be connected to the facility fire alarm system (optional). When the alarm is activated, the laser modules turn off.</p>
G	<p>LM Rack (Full/Half) (interlock)</p> <p>Connects the projector to the laser rack.</p>
H	<p>Laser interlock</p> <p>Connects the projector to the laser modules. When the interlock is tripped, accessible radiation is reduced below the maximum permissible exposure (MPE) level.</p>

Nominal ocular hazard distance



The installation setup must prevent access to the nominal ocular hazard area. Failure to comply results in death or serious injury.

The nominal ocular hazard distance (NOHD) is the distance from the projector where the light exceeds the maximum permissible exposure (MPE) on the eye and eye injuries can occur. The Skin Nominal Hazard Zone (SNHZ) is the area where skin burns are possible. This diagram illustrates the typical SNHZ (A), the NOHD (A + B), and the area (C) that is within permissible limits:

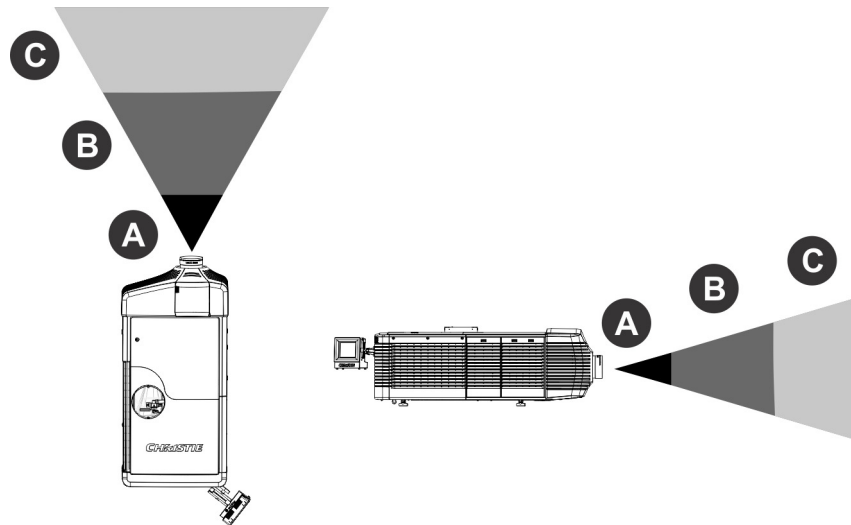

Hazard calculations are dependent on the number of light modules and the lens installed. This table lists hazard distances for Christie projector lenses with the zoom adjusted to its most hazardous position. Contact Christie support for assistance calculating hazard distances specific to your installation.

Light Modules	Projection Lens	4K Throw Ratio	Extended Source NOHD (m)	Skin NHZ (m)
7	1.25-1.45 DLPCine HB Zoom Lens (108-274101-01)	1.31:1	1.65	0.50
12	1.25-1.45 DLPCine HB Zoom Lens (108-274101-01)	1.31:1	2.8	0.65
7	1.25-1.83 DLPCine HB Zoom Lens (108-342100-01)	1.66:1	2.05	0.60
12	1.25-1.83 DLPCine HB Zoom Lens (108-342100-01)	1.66:1	3.50	0.80
7	1.45-2.05 DLPCine HB Zoom Lens (108-335102-01)	1.86:1	2.30	0.70
12	1.45-2.05 DLPCine HB Zoom Lens (108-335102-01)	1.86:1	3.90	0.80
7	1.6-2.4 DLPCine HB Zoom Lens (108-336103-01)	2.17:1	2.65	0.75
12	1.6-2.4 DLPCine HB Zoom Lens (108-336103-01)	2.17:1	4.55	1.05
7	1.8-3.0 DLPCine HB Zoom Lens (108-337104-01)	2.71:1	3.30	0.80

Light Modules	Projection Lens	4K Throw Ratio	Extended Source NOHD (m)	Skin NHZ (m)
12	1.8-3.0 DLPCine HB Zoom Lens (108-337104-01)	2.71:1	5.65	1.30
7	2.15-3.6 DLPCine HB Zoom Lens (108-338105-01)	3.26:1	3.95	1.20
12	2.15-3.6 DLPCine HB Zoom Lens (108-338105-01)	3.26:1	6.80	1.55
7	3.0-4.3 DLPCine HB Zoom Lens (108-278101-01)	3.89:1	4.70	1.40
12	3.0-4.3 DLPCine HB Zoom Lens (108-278101-01)	3.89:1	8.05	1.85
7	4.3-6.0 DLPCine HB Zoom Lens (108-279101-01)	5.43:1	6.55	2.00
12	4.3-6.0 DLPCine HB Zoom Lens (108-279101-01)	5.43:1	11.25	2.60
7	5.5-8.0 DLPCine HB Zoom Lens (108-280101-01)	7.24:1	8.75	2.65
12	5.5-8.0 DLPCine HB Zoom Lens (108-280101-01)	7.24:1	14.95	3.45

This table lists hazard distances for Christie projector high contrast lenses with the zoom adjusted to its most hazardous position.

Light Modules	High Contrast Projection Lens	4K Throw Ratio	Extended Source NOHD (m)	Skin NHZ (m)
7	1.13-1.66:1 DLPCine HC Zoom Lens (108-400105-01)	1.66:1	2.25	0.60
12	1.13-1.66:1 DLPCine HC Zoom Lens (108-400105-01)	1.66:1	3.85	0.80
7	1.31-1.85:1 DLPCine HC Zoom Lens (108-401106-01)	1.86:1	2.50	0.70
12	1.31-1.85:1 DLPCine HC Zoom Lens (108-401106-01)	1.86:1	4.30	0.90
7	1.45-2.17:1 DLPCine HC Zoom Lens (108-402107-01)	2.17:1	2.95	0.80
12	1.45-2.17:1 DLPCine HC Zoom Lens (108-402107-01)	2.17:1	5.00	1.05
7	1.63-2.71:1 DLPCine HC Zoom Lens (108-403108-01)	2.71:1	3.65	1.00
12	1.63-2.71:1 DLPCine HC Zoom Lens (108-403108-01)	2.71:1	6.25	1.30
7	1.95-3.26:1 DLPCine HC Zoom Lens (108-404109-01)	3.26:1	4.35	1.20
12	1.95-3.26:1 DLPCine HC Zoom Lens (108-404109-01)	3.26:1	7.50	1.55

Installation



Failure to comply with the following results in death or serious injury.

- This product must be installed within a restricted access location which is normally inaccessible by the general public, including workers, visitors and residents in the immediate vicinity, by means of engineering or administrative control measures but is accessible to authorized personnel that may not have specific safety training.
- The installation setup must prevent access to the nominal ocular hazard area. See [Projection lens compatibility](#) on page 77.

Prepare the installation site

1. Clear the installation area.
2. Post laser hazard warning signs at all entry doors.
3. Place each component near its installation location.

Tools required

- 12 in. screwdrivers: Phillips #2 (magnetic) and flat
- 2.5mm, 3mm, and 5mm hex drivers
- Adjustable wrench
- Step stool
- Powder-free N-DEX gloves
- Clean dry air (CDA)
- Isopropyl alcohol
- cotton swabs
- Fiber optic microscope (for example, THORLABS FS200)

Site requirements

This section lists the requirements for a successful installation.

Physical environment

NOTICE

Do not install any portion of the fiber bundle next to a heat source. Failure to comply may result in equipment damage.

These requirements apply to all Christie Laser Projection System components.

- Maximum ambient temperature (operating): 25 °C (95 °F)
- Minimum ambient temperature (operating): 10 °C (50 °F)
- Humidity: 20% to 80% maximum
- Altitude: 0 to 2000 meters (0 to 6562 feet)

External ducting

Sufficient ventilation is required around the laser rack to regulate the temperature of the laser modules. See the following chart for airflow and heat load requirements. If necessary, air intake and exhaust HVAC ducts can be installed. See [Connect external ducting](#) on page 31.

NOTICE

Add 15% more CFM to the airflow values in the chart for every 1000M above sea level. Failure to comply may result in equipment damage.

Number of Laser Modules	Airflow (CFM) 0 - 1000 m elevation*	Heat Load (kw)
2	260	2.4
3	390	3.6
4	520	4.8
5	650	6.0
6	780	7.2
7	910	8.4
8	1040	9.6
9	1170	10.8
10	1300	12.0
11	1430	13.2
12	1560	14.4

LM Rack (Full/Half) power requirements

A certified electrician must complete these and any other electrical installations.

- One single phase (100 - 240) VAC, 15 A, (50 - 60) Hz or other suitably rated branch circuit for the rack switch.
- One to four single phase (for the LM Rack Full) or one to three single phase (for the LM Rack Half) (200 - 240) VAC, 30 A, (50 - 60) Hz circuits for the power distribution unit, as specified in the following table. To protect from overcurrents, short circuits, and earth faults, a 30 A circuit breaker for each circuit, which must be part of the building installation. The disconnect device must be readily accessible in the same room as the laser rack.
 - Use wires suitable for at least 90 degrees Celsius for AC supply connections.
 - Use appropriately rated IEC 60309 plugs and receptacles as part of the AC power cord connections.
 - Connect the AC feed to the AC terminals on the back of the power distribution unit.
 - Separate safety earth terminals are located at the back of the power distribution unit.
 - Keep the ground wire in the laser rack connected.
 - Ensure that all AC power connections comply with local and national electrical codes.

The electrical installation is subject to the approval of all local authorities having jurisdiction.

Number of laser modules	2000 W Rectifiers Required for N + 1 Redundancy	Number of (200 - 240) VAC, 30 A Circuits Required
2	3	2
3	3	2
4	4	2
5	4	2
6	5	3
7	5	3
8	6	3
9	6	3
10	7	4
11	7	4
12	8	4




Four circuits is the preferred configuration. If you install fewer circuits, remove the rectifiers that are not connected to the AC power. Rectifiers not connect to AC power emit an audible signal.

Projector power requirements

- One (100 - 240) VAC, 10 A, (50 - 60) Hz wall outlet.

Minimum clearance requirements

This diagram indicates the minimum clearance requirements for the laser rack and the projector.

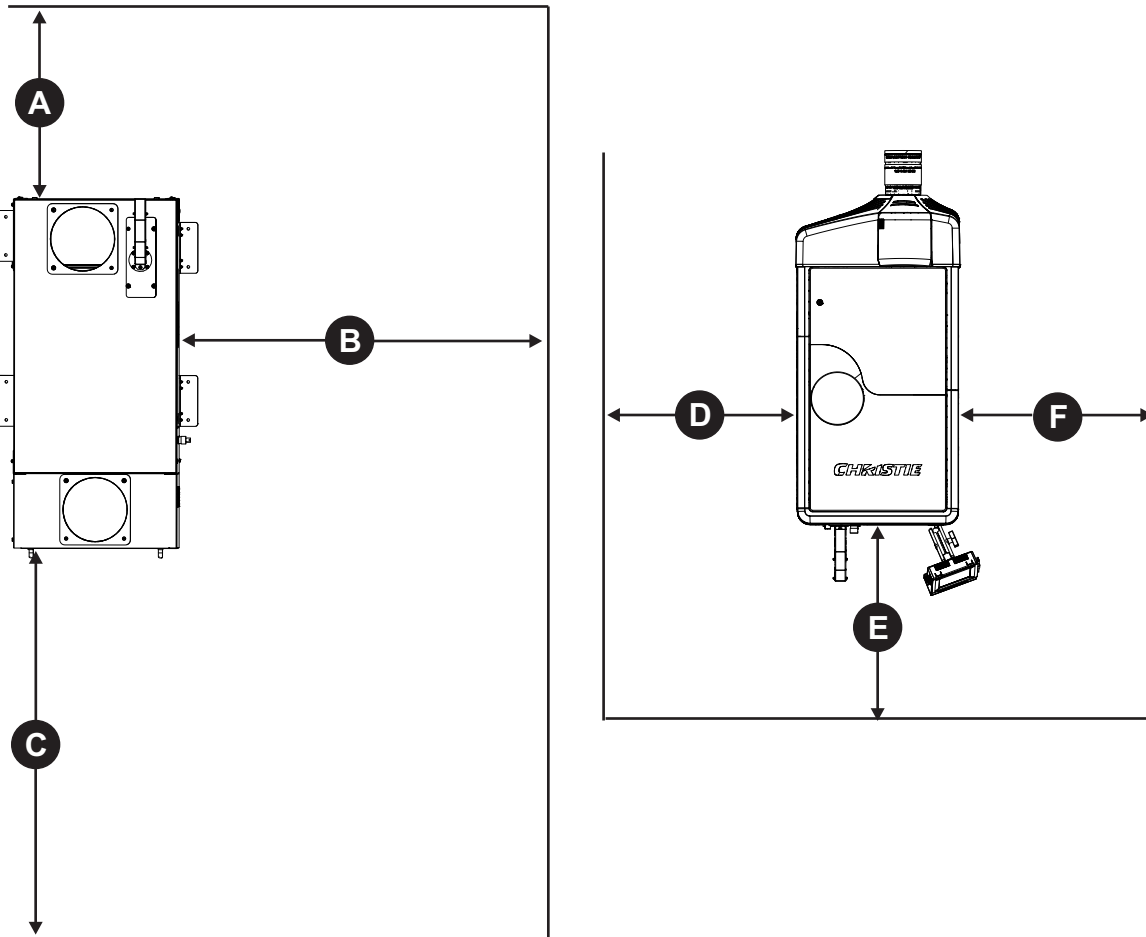

A	500 mm for cable routing at back of the laser rack.
B	900 mm for fiber routing on operator side of the laser rack.
C	1000 mm for removal of the laser modules.
D	500 mm for maintenance access.
E	500 mm for fiber safety and touch pad controller access.
F	500 mm for card cage access.

Position and set up the laser rack


⚠ WARNING

Failure to comply with the following could result in death or serious injury.

- Two people are required to set up the laser rack.
 - Always load the laser modules into the laser rack from the bottom up.
 - LM Rack (Full/Half) must be positioned with the front completely visible and with the operator side (right side when facing the front) accessible.
1. Remove the laser rack from the packaging and stand it upright so the front, back, and operator side are accessible.
 2. Move the adjustable feet up and down until the laser rack is level, then lock the feet in position.
 3. If required for local building and safety regulations, secure the laser rack to the floor with mounting brackets.
 4. Unlock the front and rear access doors with the two security keys provided.
 5. Remove each door by tilting it toward you and lifting high enough to clear the locating pins at the bottom of the rack, then set them aside.
 6. Remove the three fiber carrier panels on the operator side and set them aside.
 7. If you route the fiber optic overhead, remove the four M4 screws securing the top access cover.
 8. If you route the fiber optic cable on the floor, remove the four M4 screws securing the bottom access cover.

Connect external ducting

This illustration shows the three recommended cooling configurations.

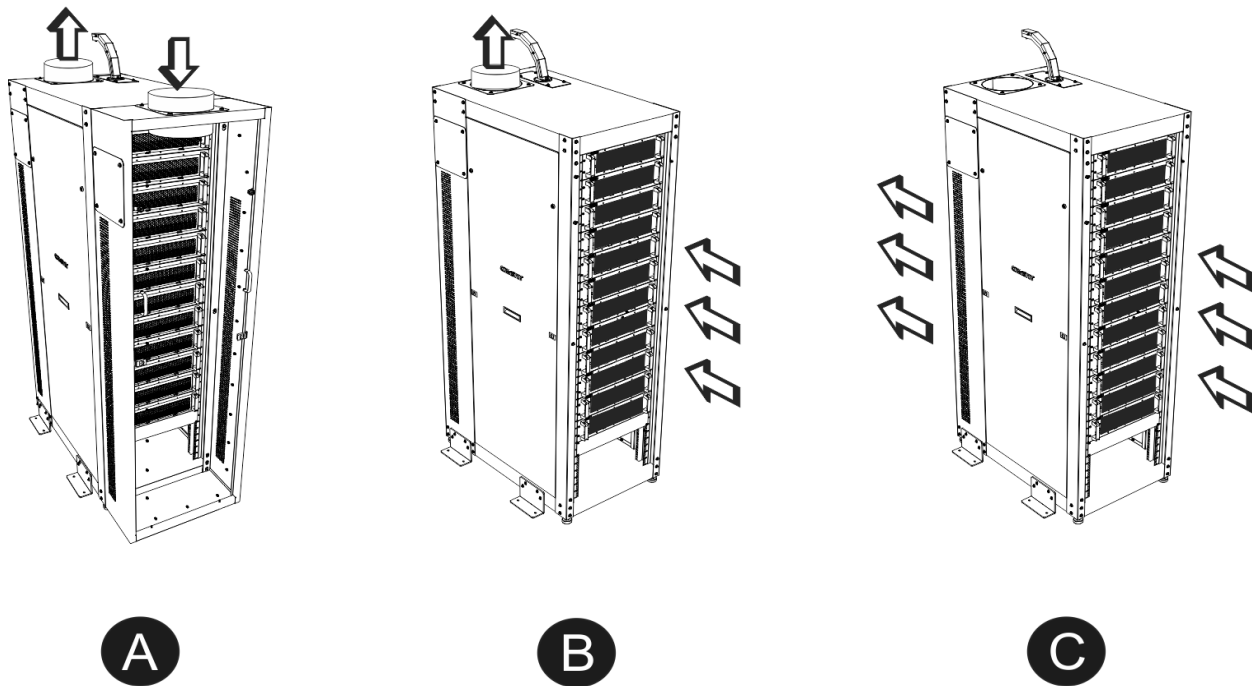

A	Front plenum installed with air intake and exhaust using heating, ventilation, and air conditioning (HVAC) ducts. Any combination of the top and side ducts can be used.
B	Front plenum removed with air intake from room and exhaust using HVAC duct. Top or side exhaust duct can be used.
C	Front plenum and rear door removed with free air flow. One meter of air space behind the laser rack is required. No HVAC system is required.

Install rectifiers and breakers

A qualified electrician is required to install the single phase (200 - 240) VAC, 30 A, (50 - 60) Hz power lines to the power distribution unit and the wall outlet for the laser system network switch. See *LM Rack (Full/Half) power requirements* on page 28.

1. At the wall circuit breaker, turn off the power to the laser rack.
2. Insert the rectifiers in the lower section of power distribution unit at the bottom of the laser rack.
3. Turn the breakers to the off position and insert them in the upper section of the power distribution unit.

Each laser module has one breaker.

4. Turn on the power to power distribution unit at the wall breaker.

Do not turn on the breakers in the power distribution unit until after the laser modules are installed.

5. Verify the rectifier and power distribution unit status lights are on.

Connect power to the laser system network switch



Turn the laser system network switch on before turning the laser modules on, so that the system can find the laser modules.

1. Connect the 15 A power line from the wall outlet to the laser system network switch.


Install laser modules

WARNING


Failure to comply with the following could result in death or serious injury.

- Do not service the laser module; the inner compartment contains Class 4 laser light. Maximum power: 64 W, Wavelength: 435 nm–660 nm, Pulse Pattern: Continuous Wave (CW).
- Place each laser module in the lowest available slot to maintain stability of the laser rack. If lower slots are skipped, the laser rack becomes top-heavy and could fall.
- Two or more people are required to safely lift a laser module.
- The laser module is not serviceable. Do not remove covers, use a replacement module instead.

1. Remove the four screws securing the front panel on the bottom slot in the laser rack.

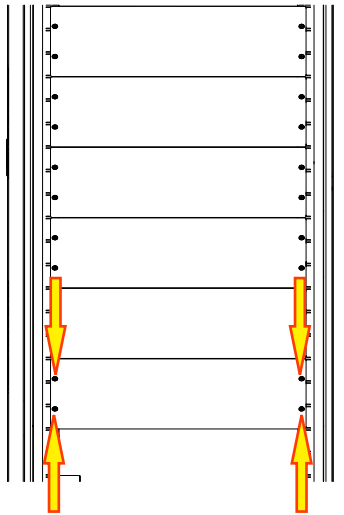

2. Remove the panel and place it in the base of the laser rack.

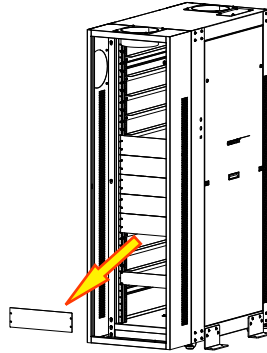

The panels must be kept with the laser rack.


3. Continue removing adjacent panels until there is an open slot for each laser module.
Do not remove more panels than required because they ensure proper airflow throughout the laser rack.
4. Lower the SMA covers for the laser modules:
 - a. Loosen the two screws securing the SMA cover with a 3mm allen key driver.
 - b. Slide the SMA cover down.
 - c. Tighten the screws to secure the SMA cover in position.
5. Keeping the laser module level, lift it out of the box.
6. Check the laser module for any possible damage that may have occurred during shipping.
Do not use a damaged laser module.
7. Slide the narrow end of the laser module into the lowest slot position of the laser rack.
Always add laser modules from the bottom up. Do not skip slots.
8. Secure the laser module to the laser rack with the four screws you removed in step 1.
9. Repeat steps 4 to 8 for the remaining laser modules.

Connect the interlock cables to the laser modules



The power cables are not connected to the laser modules yet.

The Interlock cables are a straight through RS422 connection through D-Sub 9-pin connectors.

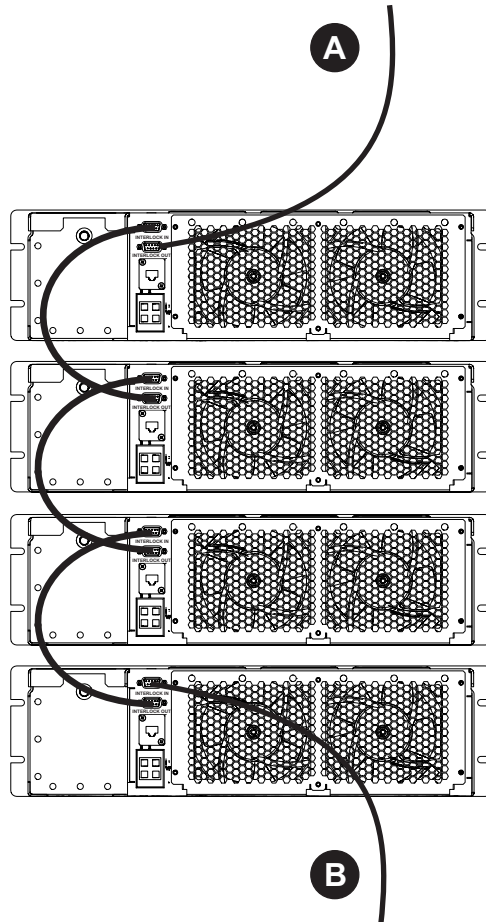


1. Attach the longest cable to the **Interlock IN** connector on the bottom laser module.
2. Connect the other end (B) to the projector **Laser Interlock** connector. See [Connect the interlock to the projector](#) on page 47.
3. Attach one end of a 30-centimeter (one-foot) interlock cable (supplied with the laser rack) to the **Interlock OUT** connector on the bottom laser module.
4. Attach the other end of the cable to the **Interlock IN** connector on the laser module directly above.
5. Repeat steps 3 and 4 to connect the remaining laser modules in a daisy chain.
6. Attach the 9-pin wire harness from the laser rack to the **Interlock OUT** connection on the top laser module.
7. Ensure every interlock connection is populated.

Connect the power cables

CAUTION

Turn off the breakers in the power distribution unit to reduce the shock hazard. Failure to comply could result in minor or moderate injury.


1. Turn off the breakers in the power distribution unit at the bottom of the laser rack.
2. Attach a power cable from the power distribution unit to each laser module in the laser rack, starting at the bottom.

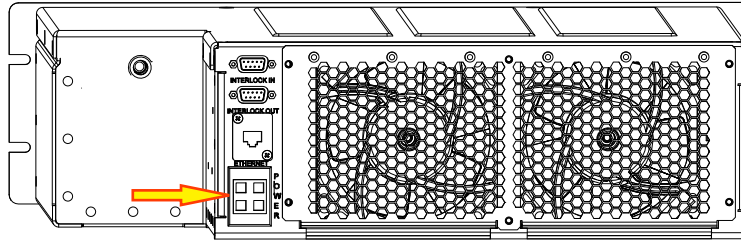

3. Attach a power cable from the wall socket to the laser system network switch.

Connect Ethernet cables to the laser modules

1. Attach a shielded Ethernet cable from the laser system network switch to the Ethernet connector on the back of each laser module.

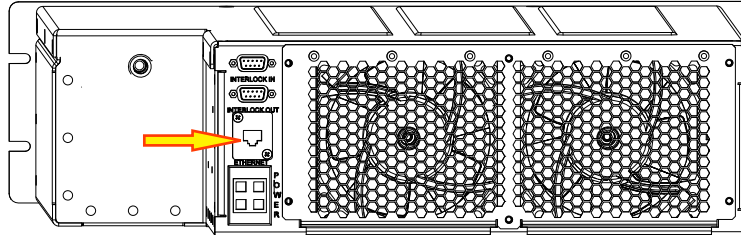

Connect fiber optic cables to the laser modules

This procedure requires a fiberscope.

WARNING


Failure to comply with the following could result in death or serious injury.

- Invisible infrared LED radiation might be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.
- The laser module breakers must be turned off when installing or inspecting fiber optic cables.
- The key from the laser rack key switch must be removed to install the fiber optic cables.
- The fiber optic cable must be threaded completely. Incorrectly attached cables may result in hazardous radiation exposure.

NOTICE

Failure to comply with the following may result in equipment damage.


- Always keep a protective cap on disconnected fiber optic cables.
- Dispose of any used fiber optic cleaning material after use.
- Never touch or blow air from your mouth into the end of a fiber optic cable as it can become contaminated and damaged.
- Bending the cable more than the minimum bend radius of 200 mm (7 ⁷/₈ inches) may cause internal breaks.

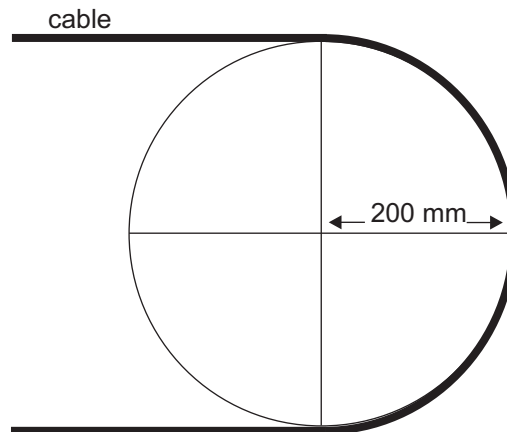

Oil deposits and dust particles on the surface of a fiber optic can cause loss of light or a degraded signal. These contaminants may also transfer into the barrel of the connector they are inserted into. Therefore, you must inspect the fiber optic cables prior to connecting them.

1. Turn off the breakers for the laser modules.
2. Remove the key from the laser rack key switch.
3. Remove the four screws securing the fiber optic strain relief cover and set the screws and cover aside.
4. Remove the four screws securing the breakout ferrule and set the screws and ferrule aside.
5. Thread the projector end of the fiber bundle through the fiber optic strain relief from inside of the laser rack to outside, being mindful of the minimum bend radius.
6. Replace the breakout ferrule in the center of the fiber optic strain relief with the four screws removed in step 4.
7. Replace the cover of the fiber optic strain relief with the four screws removed in step 3.
8. Carefully untangle the individual fiber optic cables.
9. Remove the circular, black cap protecting the laser module SMA termination point on the rear of the top laser module.
10. Remove the tethered end cap from the fiber optic SMA connector.
11. Using a fiberscope, inspect the end of the fiber optic connector.
12. Clean the SMA connector on the laser module following the recommended cleaning procedures.
13. If it is dirty, blow the surface with a stream of clean dry air (CDA) to dislodge larger, loose, particles.

14. Re-inspect the fiber optic cable.
15. If the fiber end face still appears contaminated, apply some isopropyl alcohol to the tip of a cotton swab and gently wipe the surface.
16. Repeat steps 12 to 14 until the face is clean or the contaminant cannot be removed.
17. If the contaminant cannot be removed replace the fiber optic cable with the spare.
18. If there is no clean spare fiber, contact Christie for possible repair.
19. Route the fiber to the right of the stud, ensuring there is no tight bend of force against the fiber. If the bend is too tight, place the fiber above the stud.
20. Remove the red, protective end cap from the laser module SMA termination point.
21. Taking care not to touch the glass end of the fiber optic cable to anything, gently slide the connector all the way into the laser module SMA termination point until it stops.

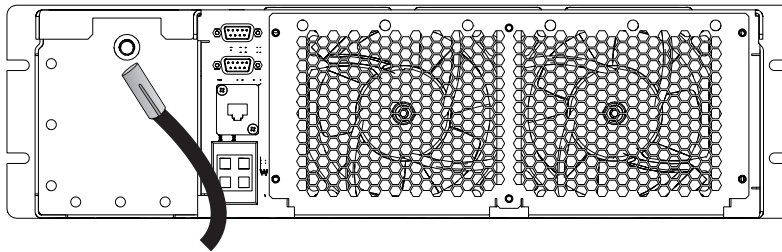

22. Finger-tighten the coupler to secure the fiber optic connection.
23. Attach the red end cap from the laser module to the tethered fiber cable end cap.
24. Repeat steps 9 to 22 for each laser module.
25. Raise each lowered LOS cover and tighten the two screws securing it.
26. Replace the three fiber carrier panels.
27. Replace the operator side door by placing the bottom of the door on the locating pins and push it until it is vertical and the two tabs on the sides slide into place.
28. Replace the key in the laser rack key switch.

Connect the laser bank manager

The laser bank manager is normally a laptop with Windows 7 operating system or later. It runs the laser bank control application that controls the light levels in each laser module.

1. Connect one end of a shielded Ethernet cable (provided) to any open port on the laser system network switch.
2. Connect the other end of the Ethernet cable to the laser bank manager.
3. Attach one end of the power cable to the wall socket and the other to the laser bank manager socket.

Position the projector

⚠ WARNING

Four or more people are required to safely lift and install the projector. Failure to comply could result in death or serious injury.



Keep the projector lens as parallel to the screen as possible, even if significantly above the screen center. When a particularly short throw distance combines with a wide screen, you may have to forfeit some aim and stay more parallel to the screen. In such cases, some lens offset can reduce the keystone distortion.

1. If installing the projector in the optional rack stand (P/N 108-282101-02), follow the instructions provided with the rack stand to install it.
2. Position the projector at an appropriate throw distance, centered and parallel with the theater screen. If not possible, aim the projector slightly off-center and use lens offset to center the image on the screen.
3. Secure one end of the rear safety strap to the projector.
4. Secure the other end to the strap to the optional rack stand or another structure.
5. Attach one end of the power cable to the wall socket and the other to the projector socket.

Level the projector

⚠ WARNING

Use of the rear safety strap on the projector is mandatory to prevent the projector from tipping. Secure the strap between the projector and the optional rack stand or another structure. Failure to comply could result in death or serious injury.

NOTICE


The front-to-back and side-to-side tilt of the projector must not exceed 15 degrees. See *Operating position* on page 76. This limit ensures the proper positioning of the liquid cooling reservoir. Failure to comply may result in equipment or property damage.

1. Loosen the projector feet lock nuts using an adjustable wrench.
2. Adjust the vertical tilt of the projector by raising or lowering the lens-side feet in tandem and by raising or lowering the operator-side feet in tandem.

Turn the adjustable feet on the bottom of the projector clockwise or counter-clockwise 1/8th of a turn at a time to extend or retract them.

When two or more feet are adjusted at once, always adjust them the same amount. This keeps equal weight distribution on all feet for stability.

3. Adjust the horizontal tilt of the projector by raising and lowering the left-side feet in tandem and the by raising or lowering the right-side feet in tandem.
4. Verify that the image is centered and parallel with the top of the screen. If additional adjustments are required, repeat steps 1 and 2.

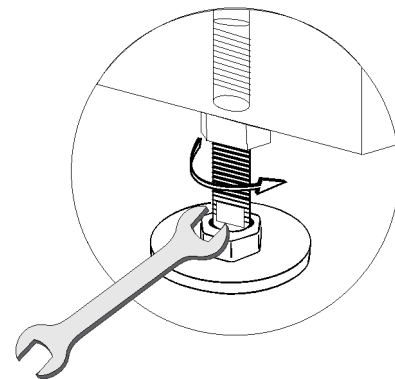

5. If you need to adjust the vertical or horizontal position more than the feet allow, install the foot extension rods. See *Install the foot extension rods* on page 39.
6. Tighten the projector feet lock nuts.

Adjust lens offset, rather than extra projector tilt, if vignetting is not observed.

Install the foot extension rods

WARNING


Failure to comply with the following could result in death or serious injury.

- Use of the rear safety strap on the projector is mandatory to prevent the projector from tipping. Secure the strap between the projector and the optional rack stand or another structure.
- Two people are needed to safely perform this procedure.

If you need to adjust the vertical or horizontal position of the projector beyond what the standard feet allow, install the foot extension rods.

1. Prop up the rear of the projector to access the two rear feet.
2. Remove the feet by loosening the lock nut and rotating the each foot out of the projector.
3. Add the extension rods to the standard feet.
4. Thread the extended feet into the projector's baseplate.
5. Adjust the feet until the required tilt is achieved.


Lock the feet in place by turning each lock nut until it fits tight against the projector.

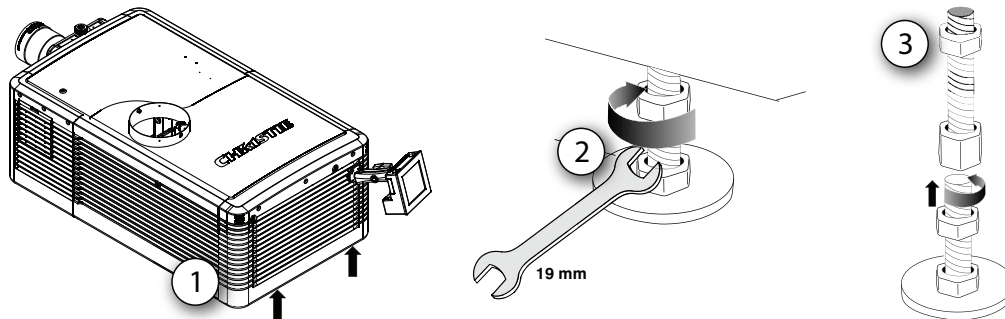


Install the touch panel controller

Note that the touch panel controller (TPC) supplied with the Christie Laser Projection System is different from the TPC for lamp-based projectors.


1. Loosen the mounting arm on the TPC.

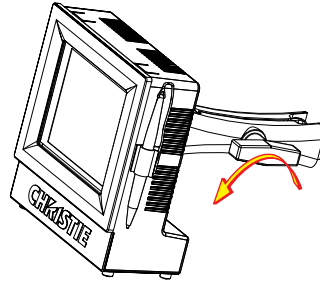

2. Place the base of the TPC mounting arm over the ball joint (A) located on the rear panel of the projector.

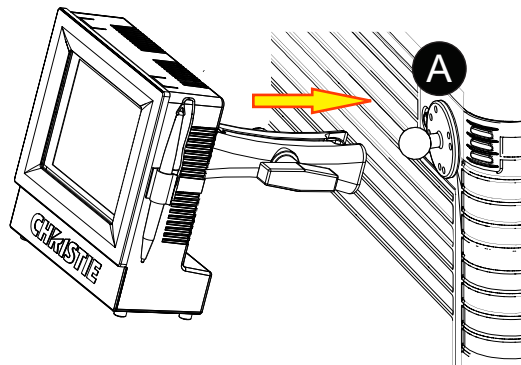

3. Tighten the mounting arm until it fits snugly on the ball joint.

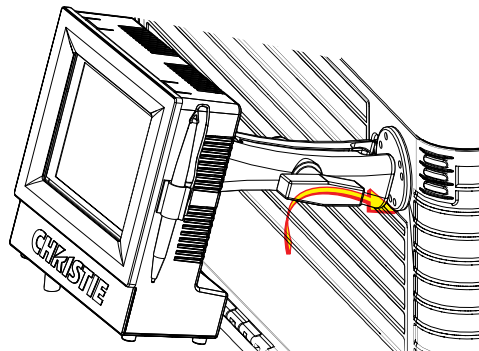

4. Connect the cable from the TPC to the connector on the rear panel of the projector.
5. Tilt the TPC to adjust the viewing angle.

Install the lens

CAUTION


Keep fingers and other body parts away from the moving parts in the projector. Motors and fans may start without warning. Tie back long hair, remove jewelry and loose clothing before manually adjusting the projector. Failure to comply could result in minor or moderate injury.

NOTICE


Failure to comply may result in equipment damage.

- The lens seals the projection head, preventing contaminants from entering the main electronics area. Do not operate the projector without a lens installed. Attach a lens plug when installing or transporting the projector.
- Lens caps must be removed for operation or they can melt and damage the lens.


1. Unpack the zoom motor kit.
2. Use a flathead screwdriver to install the zoom motor mount onto the lens with a screw clamp (A).

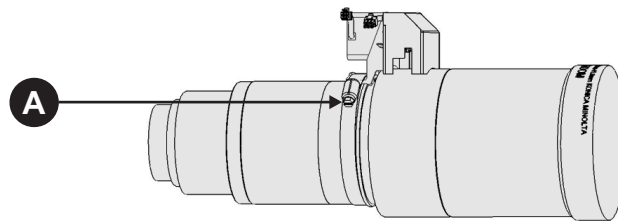

3. Remove the cover from the zoom motor mount with a #2 Phillips screwdriver.
Keep the hardware and cover.

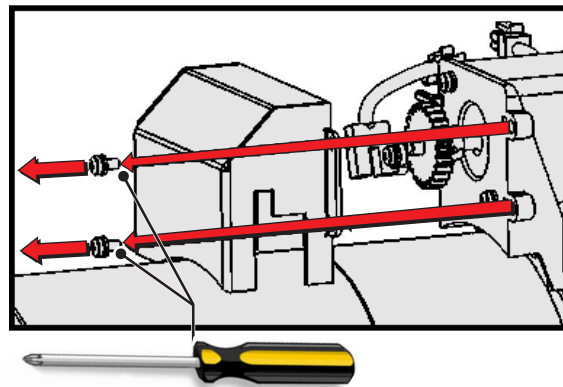


4. Install zoom gear ring and adapter onto the lens.

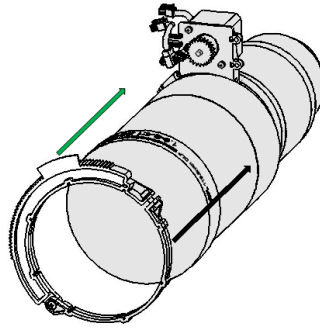


- Use a small adapter for lens 1.8–3.0 (2K) / 1.63–2.71 (4K).
- Use a large adapter for lens 1.45–2.05 (2K) / 1.31–1.85 (4K), 2.15–3.6 (2K) / 1.95–3.26 (4K), 1.25–1.83.1 (2K) / 1.13–1.66 (2K)
- All other lenses do not need an adapter.

5. Verify the placement of the following is correct.


- a. The flag is centered in the sensor (A).
- b. There is full travel of the gear ring (B).
- c. A gap between the gears prevents binding; if necessary, loosen the screws to adjust the gap, then tighten the screws to secure (B).

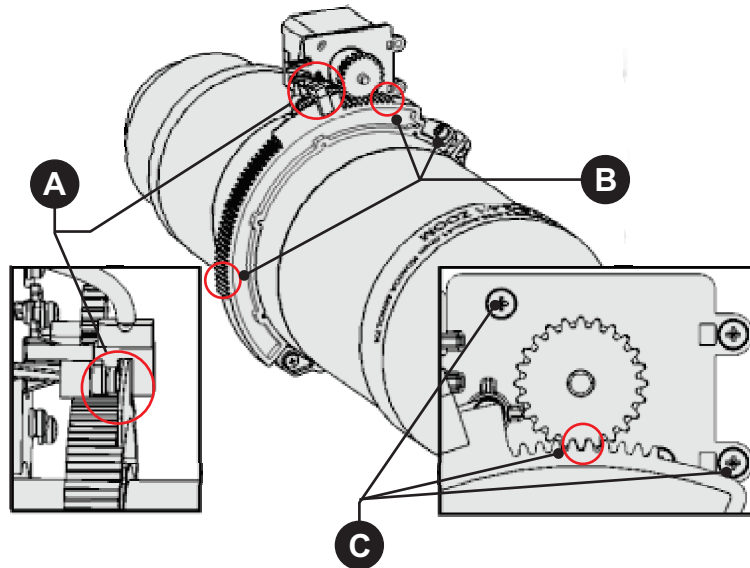


6. Turn the lens clamp to the open position on the MLM (A).

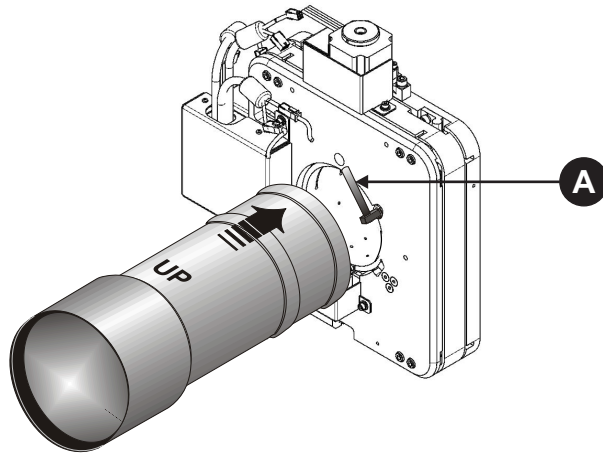


7. Fully insert the assemble into the lens mount opening without turning.
The lens is seated properly and the aperture is installed correctly when the lens is fully inserted.
8. Rotate the lens clamp downward to lock the lens assembly in place.

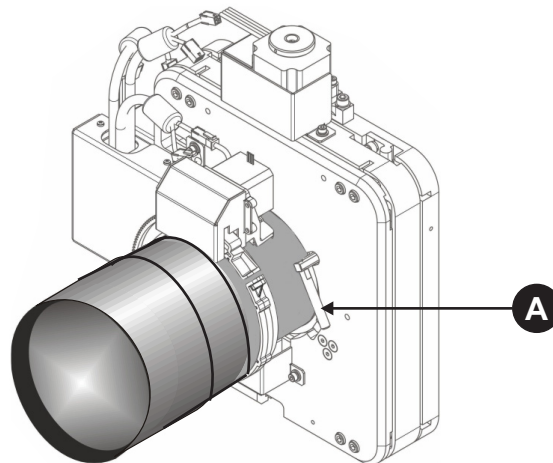

9. Install the cover with the screws (A), ensuring the cover is between the mounting tabs (B).

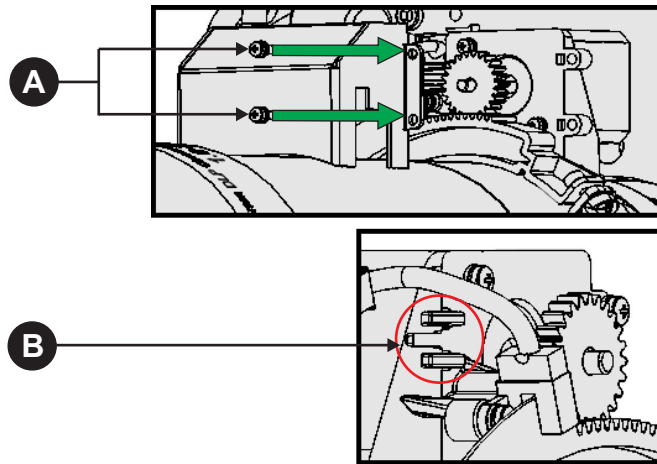

10. Connect the harness wires (A).

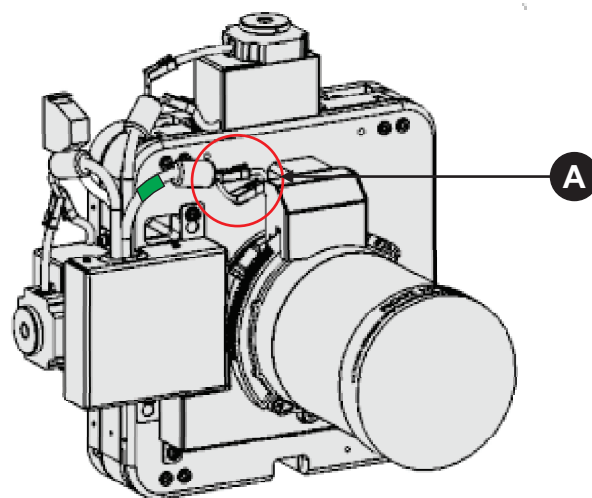

11. Install the shroud.

Connect fiber optic cables to the projector

WARNING

Failure to comply with the following could result in death or serious injury.

- The laser module breakers must be turned off when installing or inspecting the fiber optic bundle
- Beam stop must be in the **closed** position.

NOTICE

Failure to comply with the following may result in equipment damage.


- Connect fiber optic cables to the projector once it is securely positioned.
- Secure the tethered protective end cap to the threaded hole in the base of the projector whenever the fiber optic cable is disconnected.

1. Turn off the laser module breakers.
2. Pull the beam stop knob on the projector and rotate it to **closed**.
3. If the fiber optic cable comes from the side or the ceiling, loosen 5 mm hex screws (quantity four) securing the fiber optic stress relief.
4. Rotate the fiber optic stress relief to the correct orientation.


The fiber optic strain relief can be placed in one of four positions: pointing up, down, left, or right.

5. Secure the fiber optic stress relief.
6. Remove the four screws securing the fiber optic strain relief cover and set the screws and cover aside.
7. Remove the four screws securing the breakout ferrule and set the screws and ferrule aside.
8. Unlock and open the Optical Access Door.
9. Thread the fiber optic cable through the strain relief into the projector.
10. Remove the tethered cap from the fiber optic cable.
11. Using a fiberscope, inspect the end of the fiber optic connector.
12. If it is dirty, blow the surface with a stream of clean dry air (CDA) to dislodge larger, loose, particles.
13. Re-inspect the fiber optic cable.
14. If the fiber end face still appears contaminated, apply some isopropyl alcohol to the tip of a cotton swab and gently wipe the surface.
15. Inspect the fiber optic cable again.
16. If it is still dirty, repeat steps 12 to 15 until the end face is clean.
17. Open the dust cover on the fiber receiver.

18. Insert the cable with the dowel pin and dowel hole lined up. Insert the cable all the way in until it stops.

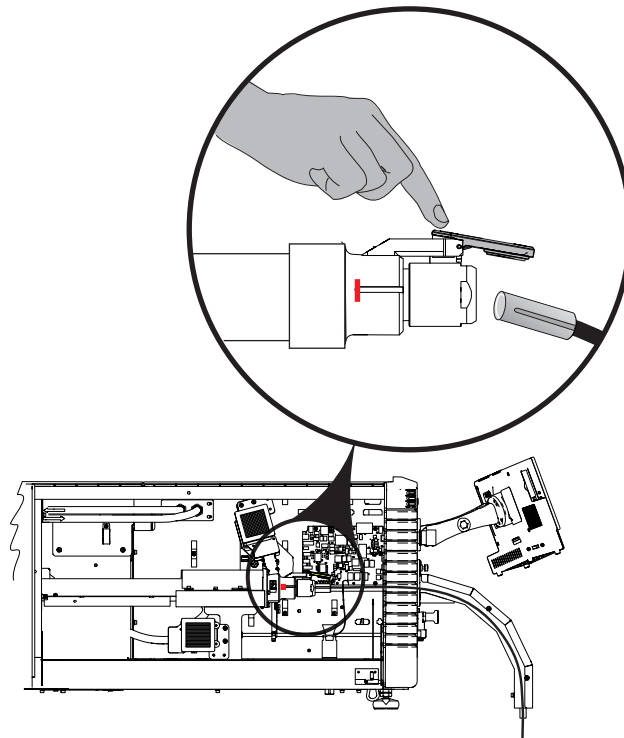

19. Finger-tighten the coupler to secure the fiber optic connection.
20. Attach the tethered end cap from the fiber optic bundle to the threaded hole on the base of the projector.

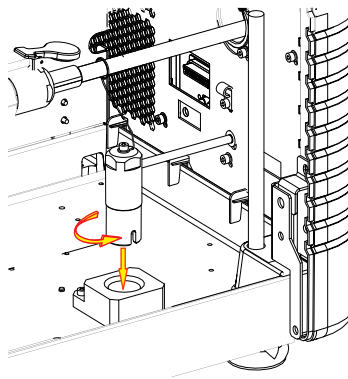

21. Replace the breakout ferrule on the fiber optic strain relief with the four screws removed in step 7.
22. Replace the cover of the fiber optic strain relief with the four screws removed in step 3.
23. Close and lock the Optical Access door.

Connect the interlock to the projector

1. Attach the female connector of the longest 9-pin Interlock cable to the **Interlock IN** connector of the bottom laser module in the laser rack.

See *Connect the interlock cables to the laser modules* on page 34.

2. Connect the male connector of the cable to the **Laser Interlock** connector at the back of the projector.

Connect the laser rack harness

1. Connect the 25-pin laser rack harness to the laser rack connector at the back of the projector.

Connect the Ethernet cable to the projector

1. Remove the bottom cover of the touch pad controller.
2. Connect the Ethernet cable to the connector at the bottom of the TPC.




3. Replace the bottom cover feeding the cable through the opening.



4. Connect the other end of the Ethernet cable to the laser system network switch.

Projector connections and status LEDs

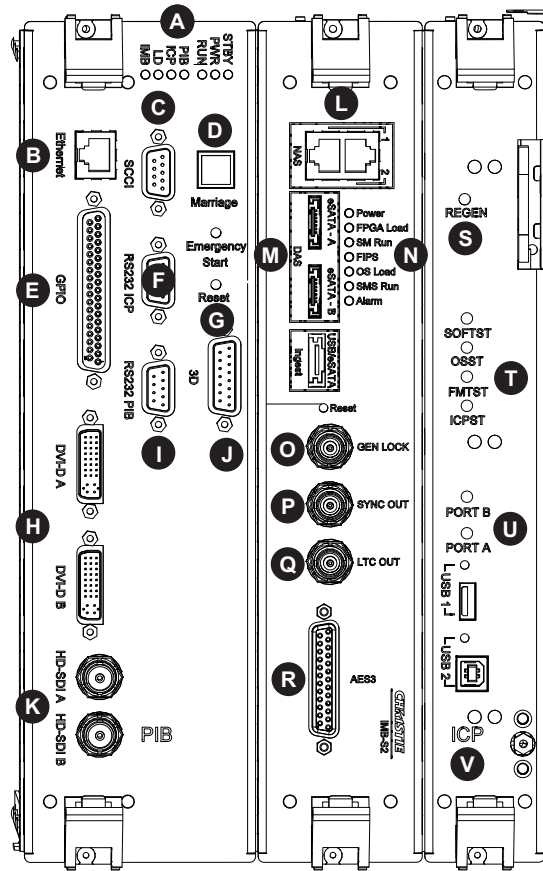

Item	Description
A	<ul style="list-style-type: none"> • STBY—The LED is green when the standby power supply is active. If the LED is not illuminated, the standby power supply has failed or the projector circuit breaker is off. • PWR—The LED is green when the Low Voltage Power Supply (LVPS) is active. If the LED is not illuminated, the LVPS has failed or the projector circuit breaker is off. • RUN—The LED flashes green when the projector is operating normally. If the LED is not illuminated or solid green, a communication, software, or hardware error has occurred. If the LED is yellow, the projector cannot communicate with the touch panel controller (TPC). • PIB—The LED is green when the Projector Intelligence Board (PIB) is detected and operating correctly. A red LED indicates a communication error. A flashing red LED indicates the PIB is not installed correctly. If the LED is not illuminated, the PIB is inactive. • ICP—The LED is green when the ICP is operating correctly. A red LED indicates a communication issue. If the LED is not illuminated, the ICP is inactive. • LD—The LED is green when the Link Decrypter (LD) is active. • IMB—The LED is green when the Integrated Media Block (IMB) is operating correctly. A red LED indicates a communication issue. If the LED is not illuminated, the IMB is inactive.
B	Connects the projector to a 10Base-T/100Base-TX Ethernet connection.
C	A Simple Contact Closure Interface (SCCI) port that uses a simple dry contact closure to open or close the douser.

Item	Description
D	Indicates marriage status. In full power mode, a green LED indicates that the projector is properly married and encrypted content can be displayed. A red LED indicates marriage is broken and encrypted content cannot be displayed.
E	Connects the projector to external input and output devices, such as the Christie ACT.
F	Connects the projector to a computer.
G	Resets the projector electronics. After restarting, the projector returns to its previous power mode.
H	Connects the projector to non-cinema video and graphics sources. These are single-link ports for single-link cables and connectors. The connectors can be used together as a twin-link DVI port.
I	Connects the projector to Christie or third-party automation equipment. Utilizes the Christie-proprietary protocol.
J	Connects the projector to 3D devices such as MasterImage or RealD.
K	Connects the projector to high-definition cinema sources. The connectors can be used together to deliver Dual Link HD-SDI following the SMPTE 372M standard.
L	Ethernet ports to connect network-attached storage (NAS) devices.
M	eSATA ports to connect direct attached storage (DAS) devices.
N	LED status indicators: <ul style="list-style-type: none"> • Power—The LED is green when the Christie IMB is on. • FPGA Load—The LED is green when all FPGAs are successfully loaded. • SM Run—The LED flashes green when the security manager (SM) is running correctly. • FIPS—The LED is green when the FIPS (Federal Information Processing Standards Publications) security status is operating correctly. If the LED is red, an error has occurred. Restart the Christie IMB. If the LED remains red, return the Christie IMB to Christie Digital. • OS Load—The LED is green when the Christie IMB has successfully loaded the screen management system (SMS) operating system. • SMS Run—The LED flashes green when the screen management system (SMS) is running correctly. • Alarm—The LED is green when the screen management system (SMS) is operating correctly.
O	Input for multi-projector playback (Christie IMB to Christie IMB only).
P	Output for multi-projector playback.
Q	LTC output.
R	AES3 port for digital audio output.
S	Indicates the status of the regulator. A solid blue LED indicates the regulator is enabled. If the LED is not illuminated, the regulator is not enabled.
T	<ul style="list-style-type: none"> • SOFTST (Software State)—Indicates the state of the software application running on the ICP. During normal operation, this LED blinks. During start up, the LED changes from off to blinking. • OSST (Operating System State)—Indicates the state of the ICP operating system. During normal operation, the LED is green. During start up, the LED changes from off to green. • FMTST (FMT FPGA State)—Indicates the state of the FMT FPGA. During normal operation, the LED is green. When the power is turned on, the LED turns green immediately. • ICPST (ICP FPGA State)—Indicates the configured state of the ICP FPGA. During normal operation, the LED is green. When the power is turned on, the LED turns green immediately.

Item	Description
U	<ul style="list-style-type: none"> • PORT B—Indicates the status of the USB port. A green LED indicates the port is active. If the LED is not illuminated, the port is inactive. • PORT A—Indicates the status of the USB port. A green LED indicates the port is active. If the LED is not illuminated, the port is inactive.
V	Indicates the status of the Integrated Cinema Processor (ICP). A green LED indicates the ICP is operating correctly. A red LED indicates a communication issue. If the LED is not illuminated, the ICP is inactive.

Connect the projector to a computer

Connect one end of an Ethernet or a RS232 cable to the Ethernet or the RS232 PIB port on the projector communications panel and the other end to your computer. To communicate with the projector, add the projector to the same network as the computer.


Connect devices to the GPIO port

The GPIO port is a 37-pin D-sub connector located on the PIB input panel. The port provides eight input and seven output signals for connecting external devices to the projector. To configure the pins on the connector, tap **Menu > Administrator Setup > GPIO Setup**.

Each available pairing of pins (\pm) is defined as an input or an output. Four inputs and three outputs are predefined. If you want the projector to respond to an incoming signal, configure a pin as an input. If you want an external device to respond to the projector as an output signal, configure a pin as an output.

PIN	Positive	Negative	Description
GPIN #1	Pin 1	Pin 20	3-D L/R Input Reference
GPIN #2	Pin 2	Pin 21	3-D L/R Display Reference
GPIN #3	Pin 3	Pin 22	Reserved
GPIN #4	Pin 4	Pin 23	Reserved
GPIN #5	Pin 5	Pin 24	Input
GPIN #6	Pin 6	Pin 25	Input
GPIN #7	Pin 7	Pin 26	Input
GPIN #8	Pin 8	Pin 27	Input
GPOUT #1	Pin 9	Pin 28	External 3-D L/R Output Reference
GPOUT #2	Pin 10	Pin 29	Reserved
GPOUT #3	Pin 11	Pin 30	Reserved
GPOUT #4	Pin 12	Pin 31	Output
GPOUT #5	Pin 13	Pin 32	Output
GPOUT #6	Pin 14	Pin 33	Output
GPOUT #7	Pin 15	Pin 34	Output
PROJ_GOOD	Pin 16	Pin 35	Projector Good

The following diagram shows how to wire a GPIO cable to a server or a 3D device.

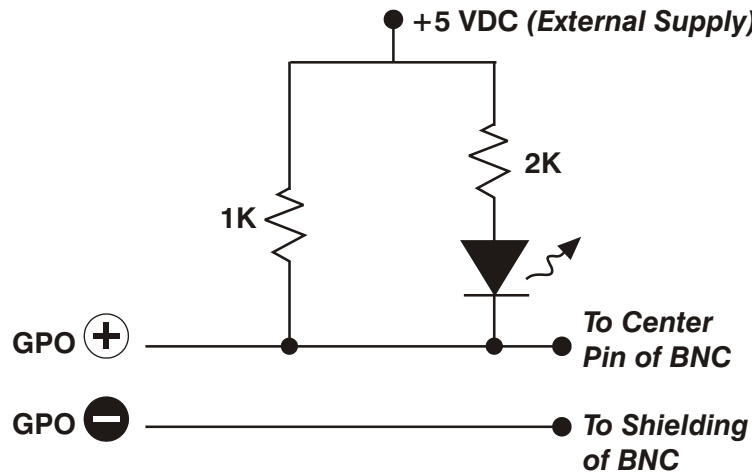

The recommended operating point is 5 mA, the maximum current is 50 mA, and the forward voltage drop is ~ 1 V (@ 5 mA).

Connect devices to the SCCI port

The Simple Contact Closure Port (SCCI) port is a DB-9 (male) connector located on the PIB input panel. The SCCI port controls a limited set of projector functionality through contact closures. This table lists the control functions available through the SCCI port:

PIN	Signal Name	Direction	Description
1	+5V standby	Out	Current limited 5VDC supply
2	Laser on	In	Projector power and lasers are on.
3	+5V standby	Out	Current limited 5VDC supply
4	Laser off	In	Projector power is on and laser are off.
5	+5V standby	Out	Current limited 5VDC supply
6	Douser closed	In	Close douser.
7	Douser open	In	Open douser.
8	Health output	Out	Playback stops and the open collector registers low when one of these interlocks is activated: <ul style="list-style-type: none"> • Tamper • Marriage Playback functions normally when the open collector registers high and all CineLink and laser interlocks are not activated.
9	Ground	Out	Ground

All SCCI inputs require a pulse input of 50ms to several seconds to operate reliably. Inputs are 5V resistor current limited LEDs inside of optocouplers.

The open-collector Health Output (PIN 8) circuit only draws power when a failure occurs or an interlock is activated.

Connect devices to the 3D terminal

The 3D Sync terminal is a 15-pin D-sub connector (female) located on the projector communications panel. This table lists the control functions available through the 3D connector.

PIN	Signal Name	Direction	Description
1	+12V	Out	Power to 3D device. Maximum 1A (total between both +12V pins).
2	GND	/	Ground
3	GND	/	Ground
4	RS232_RX	In	Data to projector from 3D device. 1200 Baud, 8 bits, no parity. Currently unsupported.
5	RS232_TX	Out	Data to projector from 3D device. 1200 Baud, 8 bits, no parity. Currently unsupported.
6	CONN_3D_MODE+	Out	SYNC from projector. To projector GPO collector. Compatible with current projector GPIO requirements and restrictions. (24VDC max, 50mA max) 3D ON = Hi logic level = O/P transistor ON 3D OFF = Low logic level = O/P transistor OFF
7	CONN_SYNC+	Out	SYNC from projector. To projector GPO collector. Compatible with current projector GPIO requirements and restrictions. (24VDC max, 50mA max)
8	3D_INPUT_REFRERENCE+	In	3D L/R Input Reference (P) (Voltage Limit: 2 VDC to 12VDC)
9	+12V	Out	Power to 3D system. Maximum 1A (Total between both +12V pins)
10	3D_INPUT_REFRERENCE-	In	3D L/R Input Reference (N) (Voltage limit: 1.4VDC to 12VDC)
11	3D_DISPLAY_REFERENCENCE+	In	3D L/R Input Reference (P) (Voltage limit: 1.4VDC to 12VDC)
12	3D_DISPLAY_REFERENCENCE-	In	3D L/R Input Reference (P) (Voltage limit: 1.4VDC to 12VDC)
13	CONN_3D_MODE-	Out	3D mode state from projector. From projector GPO emitter. Compatible with current projector GPIO requirements and restrictions. (24VDC max, 50mA max)
14	CONN_SYNC-	Out	SYNC from projector. From projector GPO emitter. Compatible with current projector GPIO requirements and restrictions. (24DC max, 50mA max)
15	Not connected		

Complete the installation checklist

Complete the installation checklist at the end of this document and return it to Christie. See [Christie Laser Projection System Installation Checklist](#) on page 84.

Adjust the Image



Always follow the laser safety regulations when completing any mechanical adjustments. Turn the laser power down to a safe level before opening the projector. Failure to comply could result in death or serious injury.

For optimum results, follow the procedures in this section in the order that they appear. *Do not complete procedures out of order.* Image adjustment is an iterative process.

Turn the system on

1. Check the interlock cables are securely attached to the laser modules.
2. Check the interlock cable to the projector is securely attached.
3. Check the Ethernet cable between the projector and the laser system network switch is securely attached.
4. Check the Ethernet cable between the laser bank manager and the laser system network switch is securely attached.
5. Turn the Rack Switch on.
6. Turn on the laser bank manager.
7. Turn on the circuit breaker on the projector baseplate under the front lens-side corner.
8. If the emergency-stop button on either the Laser Rack or the projector is activated, release it by turning the button clockwise.
9. Turn the Beam Stop on the projector to **OPEN**.
10. Turn the Laser Rack key switch on.
The key must be in the switch at all times.
11. Turn on the laser system network switch at the rear of the Laser Rack.
12. Turn on the breakers (one per laser module) in the power distribution unit in the front of the Laser Rack.

13. Press **MANUAL RESET** on the side of the Laser Rack or on the back of the projector.
14. Verify the status lights on the back of the projector and the front of the laser modules are white.

The projector is armed, but the lasers are off.

Test the interlocks

Once the projector is running, ensure the safety interlocks are functioning.



Before displaying an image from the projector, test the three interlock devices. Every time the interlock is activated, the laser modules turn off. Failure to comply could result in death or serious injury.

Test the key switch

1. Turn the key switch on the Laser Rack off.
2. Check the status lights on the back of the projector are off.
3. Turn on the key switch.
4. Press **Manual Reset** on the projector.

Test the Laser Rack emergency stop

1. Press the emergency stop button on the Laser Rack.
2. Check the status lights on the back of the projector are off.
3. To release the E-stop, rotate the knob clockwise.
4. Press **Manual Reset** on the projector.

Test the projector emergency stop

1. Press the emergency stop button on the projector.
2. Check the status lights on the back of the projector are off.
3. To release the E-stop, rotate the knob clockwise.
4. Press **Manual Reset** on the projector.

Add the laser modules to the system

1. On the Laser Bank Controller, start the laser bank control application.
2. Under **Available Modules**, click **Add IP**.
3. Enter the IP address. The default is **192.168.252.1**.

4. Click **Add IP** and enter the IP address. The default is **192.168.252.50**.
5. Under **Available Modules**, click **Connect All**.

Disconnect all but one laser modules

Initial image adjustments require low power from a single laser module.

1. Under **Connected Modules**, select the IP address of a laser module you want to disconnect.
2. Click **Disconnect**.
3. Repeat steps 1 to 2 until there is only one laser module connected.

Image adjustments performed with low white light



Make image adjustments with low light levels from a single laser module. Failure to comply could result in minor or moderate injury.

The image adjustments described in this section are done with low light from a single laser module.

Orient the screen image

1. To display the a white test pattern, on the Home tab in the Pattern list, select **Flat White**.
2. Tap **Menu > Configuration > Image Orientation**.
3. Select the orientation you want from the list.

Adjust the image to fit the screen

1. Center the image on the screen.
 - a. On the TPC, tap the **Lens** tab.
 - b. Tap the left, right, up, and down arrows until the image is centered on the screen.
2. To display the DC2K Framing2 test pattern, on the Home tab in the Pattern list, select **DC2K Framing2**.
3. To adjust the position of the test pattern, repeat step 1.
4. Under **Zoom**, tap the magnifying glasses until the image fits the screen.
5. Under **Focus**, tap the left and right arrows until the test pattern details are in focus.

The words and lines on the test pattern should be distinguishable uniformly across the screen.

Adjust the offset



- For the best optical performance and minimal keystone error, use offset and not aiming to center the image in off-axis installations.
- Avoid extreme tilts or offsets. Corner vignettes on a white test pattern indicate extreme offset that should be avoided using mechanical alignment.

1. Select a framing test pattern and adjust the horizontal and vertical offset to display a square image on the screen with minimal projector aiming error.

Adjust the offset with an Intelligent Lens System (ILS)



- For the best optical performance and minimal keystone error, use offset and not aiming to center the image in off-axis installations.
- Avoid extreme tilts or offsets. Corner vignettes on a white test pattern indicate extreme offset that should be avoided using mechanical alignment.

1. Tap **Menu > Advanced Setup > Lens Setup**.
2. Verify the correct lens is selected.
3. Tap **Enable Automatic ILS**.

Modifying the offset now results in overwriting the pre-defined settings.

4. Tap the Test Patterns button and select a framing test pattern.
5. Tap **Menu > Advanced Setup > ILS File Setup**.
6. Tap the arrows in the Offset area.

Rotate the integrator rod

The integrator rod is aligned by Christie. If there are screen shadows, perform this procedure.

1. Unlock and open the optical access door.
2. Loosen the two screws (3 mm hex) securing the retaining clip to the rear of the integrator using an allen key.


Use caution when loosening these screws to avoid damaging the Remote Temperature Sensor Module (RTSM).
3. Rotate the integrator rod to remove the shadow from the corners.
4. To focus the integrator rod, slide it forward and back.
5. Tighten the two retaining clip screws to secure the integrator rod.
6. Close and lock the optical access door.

Align the fold mirror

Align the fold mirror if a corner or edge of an image is missing.

1. Adjust the two screws located on the bottom front of the projector.

2. To raise or lower the image, adjust the screw closest to the operator side (right-side when facing screen).
3. To move the image left or right, adjust the screw furthest from the operator side.

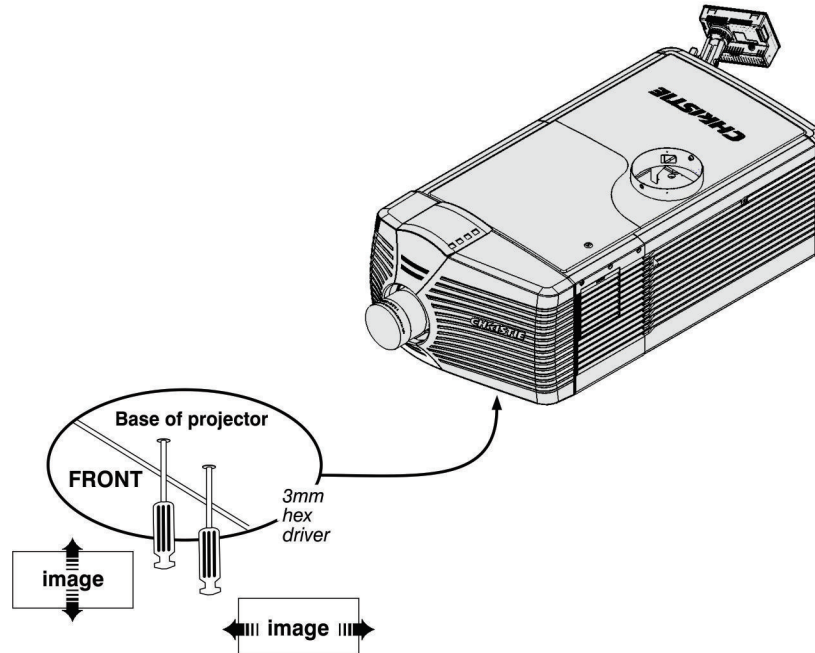

You may have to repeat the integrator and the fold mirror alignments until the corners are focused and the shadows are off the screen.

Adjust horizontal boresight

⚠ WARNING

Failure to comply with the following could result in death or serious injury.


- Do not look into the lens. The extreme brightness can cause permanent eye damage.
- Keep hands, clothing, and all combustible material away from the light path.

⚠ CAUTION

Adjust the Boresight with low light levels from a single laser module. Failure to comply could result in minor or moderate injury.

Adjust the boresight if the image cannot be focused uniformly across the screen.

1. Loosen the lens mount stabilization screw (D)

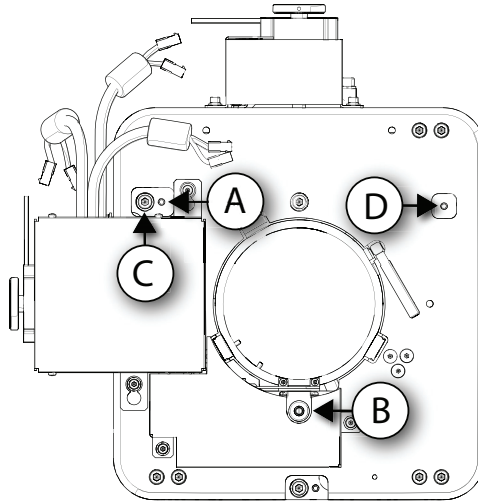


2. Loosen the horizontal lock screw (A).
3. Extend the lens focus (B) completely.
4. Using the focus knob to retract the lens, adjust the **Focus**. Watch the image at the left edge of the screen until it comes into focus.
If the entire screen is in focus, proceed to step 8.
5. Continue retracting the lens.
 - a. If the right side of the image comes into focus before the lens is completely retracted, adjust the horizontal boresight bolt (C) to balance the left and right edges.
 - b. If the right side of the image fails to focus, adjust the horizontal boresight bolt (C).
6. When both sides appear equally blurry, adjust the offsets to re-center the image.
7. Repeat steps 1 to 6 until both sides of the image are focused.
8. Tighten the lock screw (A) and the lens mount stabilization screw (D) to maintain the adjustments.
9. Check the boresight again.
10. Unless proceeding to adjust vertical boresight, calibrate the lens motors: on the TPC tap **Lens** > **Calibrate Lens**.

Adjust vertical boresight

1. Focus the image at the top edge of the screen.

- Loosen the lens mount stabilization screw (D).

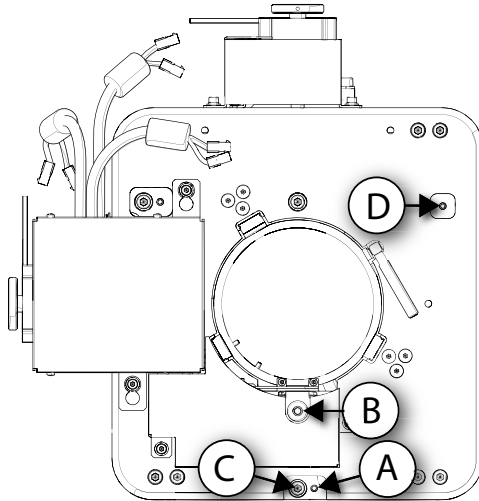


- Loosen the vertical lock screw (A).
- Extend the lens focus (B) completely.
- To retract the lens, adjust the **Focus** knob. Watch the image at the top edge of the screen until it comes into focus.
If the entire screen is in focus, proceed to step 10.
- Continue retracting the lens.
 - If the bottom edge of the image comes into focus before the lens is completely retracted, adjust the vertical boresight bolt (C) to direct or aim the lens mount UP towards the top of the screen to balance the top/bottom edges.
 - If the top edge of the image is not in focus, adjust the vertical boresight bolt (C) to direct or aim the lens mount toward the bottom of the screen.
- When both sides appear equally blurry, adjust the horizontal and/or vertical offset to re-center the image on the screen.
- Repeat steps 2 to 7 until the top and bottom of the screen are both well-focused.
- Re-focus the center of the image. The goal is for good focus at the center and on all sides.
- Tighten the lock screw (A) and the lens mount stabilization screw (D) to maintain the adjustments.
- Check the boresight again.
- Calibrate the lens motors: on the TPC tap **Lens > Calibrate Lens**.

Adjust vertical boresight with an ILS

Perform this procedure if there is an ILS. If there is no ILS, see [Adjust vertical boresight](#) on page 58.

- Focus the image at the top edge of the screen.

2. Loosen the vertical lock screw (A).

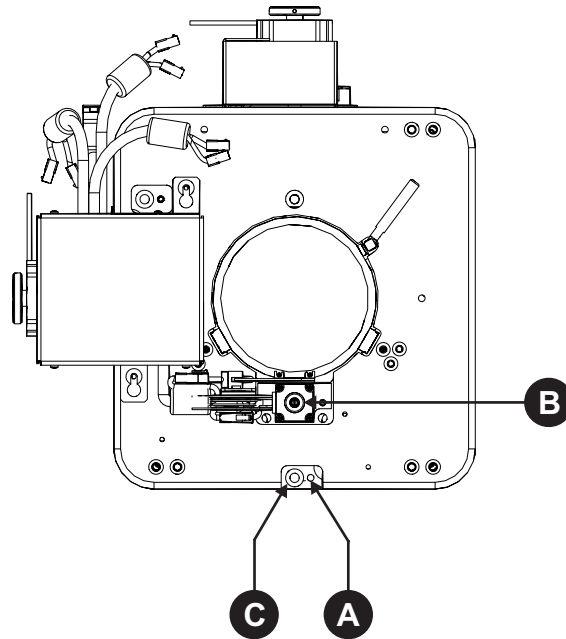

3. Extend the lens focus (B) completely.
4. To retract the lens, adjust the **Focus** using the counter-clockwise button on the ILS Adjust window. Watch the image at the top edge of the screen until it comes into focus. If the image appears well-focused on the top edge but not on the bottom, determine if the bottom edge focuses in front of or behind the screen.
If the entire screen is in focus, proceed to step 8.
5. Continue retracting the lens.
 - a. If the bottom edge of the image comes into focus before the lens is completely retracted, adjust the vertical boresight bolt (C) to direct or aim the lens mount UP towards the top of the screen to balance the top/bottom edges.
 - b. If the top edge of the image is not in focus, adjust the vertical boresight bolt (C) to direct or aim the lens mount toward the bottom of the screen.
6. When both sides appear equally blurry, tap menu > Advanced Setup > ILS File Setup and tap the directional arrows in the Offset area to center the image on the screen.
7. Repeat steps 2 to 6 until the top and bottom of the screen are both well-focused.
8. Re-focus the center of the image. The goal is for good focus at the center and on all sides.
9. Tighten the vertical lock screw (A) to maintain the adjustments.
10. Check the boresight again.

Image adjustments with full light

The image adjustments described in this section are done with all laser modules.

Turn on all laser modules

The remaining image adjustments require power on all laser modules.

1. In the Laser Bank Control Application under Available Modules, click **Connect All**.
2. Under **System > Power Status**, click **Standby**.
The laser module tabs read WARMUP.
3. When the laser module tabs read STANDBY, click **On**.
4. In the System Power group, bring Green to 100%.

Calibrate lens motors

1. On the TPC, tap **Lens > Calibrate Lens**.

Adjust DMD convergence

CAUTION

Failure to comply with the following could result in minor or moderate injury.

- Always wear an electrostatic discharge (ESD) strap and use insulated tools when replacing the light engine or any other circuit board; however, Christie does not recommend wearing a strap while converging a live unit, but to instead ensure frequent contact with the bare metal of the projector to prevent static buildup.
- Do not touch the heat sink in the Light Engine compartment when converging a projector as it can cause burns.

NOTICE


Do not run the projector while performing convergence with the Light Engine Fan Pack removed. This causes overheating of the Satellite Formatter Board FPGAs. Failure to comply may result in equipment damage.



- All procedures must be followed as described and performed by Christie authorized, trained personnel.
- Safety glasses are not required for convergence as exposures greater than Class 1 are not possible.
- These instructions are intended to be a supplement descriptive guideline for information on convergence. Personal tool preference, mechanical experience, and individual techniques are all variables that make this document a subjective tool for use only by experienced professional technicians.
- Color separation can occur when viewing the convergence through optics such as glasses or binoculars.

The projector uses three separate digital micromirror device (DMD) panels to produce three separate red, green, and blue image components. To ensure the most accurate color representation

across the whole image, adjust the convergence to perfectly align the three panels so that all pixels line up. Read this entire section before adjusting convergence.

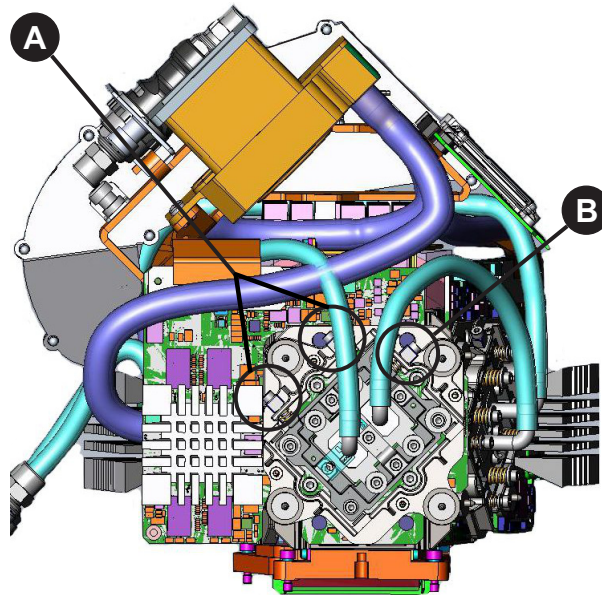

A	Screws 1 and 2: Vertical and Twist Adjustment
B	Screw 3: Horizontal Adjustment

Before convergence

- Make sure image zoom and centering is complete.
- Make sure boresight procedures are completed.
- Allow the projector to warm up for 15 minutes to reach nominal operating temperature.
- During convergence, the lid and/or filter side of the projector is open, causing decreased prism cooling performance and possible shifts in convergence or DMD focus. The prism temperature must be monitored during the adjustment and kept within a few degrees of the nominal temperature achieved above by lowering the laser power or periodically replacing the cover for a cool-down.
- If the procedure takes longer than an hour, watch for over-temperature alerts. Cool-down periods with the douser closed and cover on may be required.
- Typically the blue image component can be used as the fixed reference, so no adjustment is required. However, if you need to adjust the blue image component it is easy to adjust, but the side panel must be removed. The recommended normal convergence adjustments are from green to blue and red to green.
- Christie recommends that the vertical and rotation adjustment be done first, as they work dependently together, and the horizontal adjustment done last.
- Use extreme caution to not damage any electronic components.


- Do not force the adjustment, the board should move easily with gentle pressure.

Evaluate convergence


1. Display either the **Alignment Pattern** or the **Framing Pattern**.

The framing pattern may not be installed on the projector in some cases. Keep a copy of this pattern on your computer and load it to the projector you are working on if not present.

2. Zoom and focus the image to see the entire outer edge of the test pattern frame.

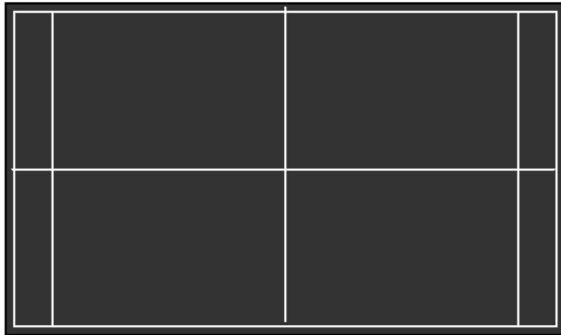

Alignment Pattern

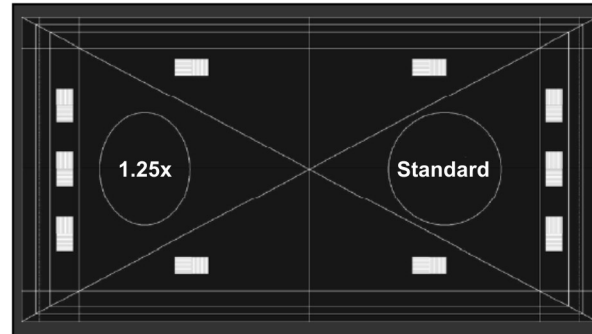

Framing Pattern

3. Using the horizontal and vertical white lines, you can judge the convergence issues. Look at one color at a time and remember that you can see a possible seven colors to lead you to a valid conclusion. The stripe pattern boxes along the outer frames can be helpful as well.

Magenta=Blue+Red / **Yellow**=Green+Red / **Cyan**=Green+Blue / **White**=Red+Green+Blue



4. Look for *twist* using the center vertical and horizontal lines—scan from one side of the screen to the other, observing any change in vertical position of the color in question relative to the point where you started.

Adjust formatter convergence




Remove all jewelry (rings, watches, necklaces, bracelets and so on) before adjusting convergence.



Do not apply excessive force on the adjustment screws. This might cause the convergence adjustment to become misaligned once you remove the adjustment tool.

The red and green formatters are identical in physical layout and adjuster function. The blue formatter board is slightly different in physical layout, but the adjustment functions are the same. The twist and vertical adjustments interact with each other on the horizontal axis.

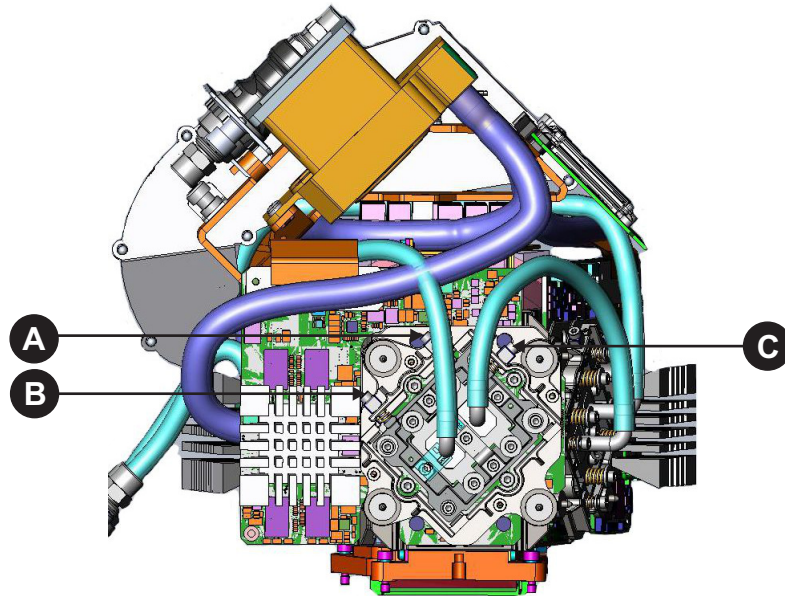


Screen / Screw	A	B	C
			N/A
			N/A
			N/A
			N/A
	N/A	N/A	
	N/A	N/A	

The physical layout of the Formatter boards dictates the behavior of the twist and vertical adjustments:


- The adjustment is like a “Twist with the left-side of the screen as a sliding hinge point to allow vertical travel”.
- The vertical adjustment screw and twist adjustment screw interact with each other such that if one is turned in the opposite direction of the other, the twist is affected.
- If both screws are turned equal amounts in the same direction, the image moves vertically.
- Remove the light engine air filter and fan pack to access the blue convergence adjustment screws.

Cooling is affected by removing the filter and fan pack assembly.

You do not always have to turn the screws simultaneously; however, adjusting one at a time requires equal or equal and opposite turn on the other to prevent binding and achieve the required adjustment. It is recommended to locate the shorter blade 2.5 mm driver on adjusting screw #2 (especially on the red), and use the longer blade 2.5 mm driver for screw #1 and horizontal (screw #3).

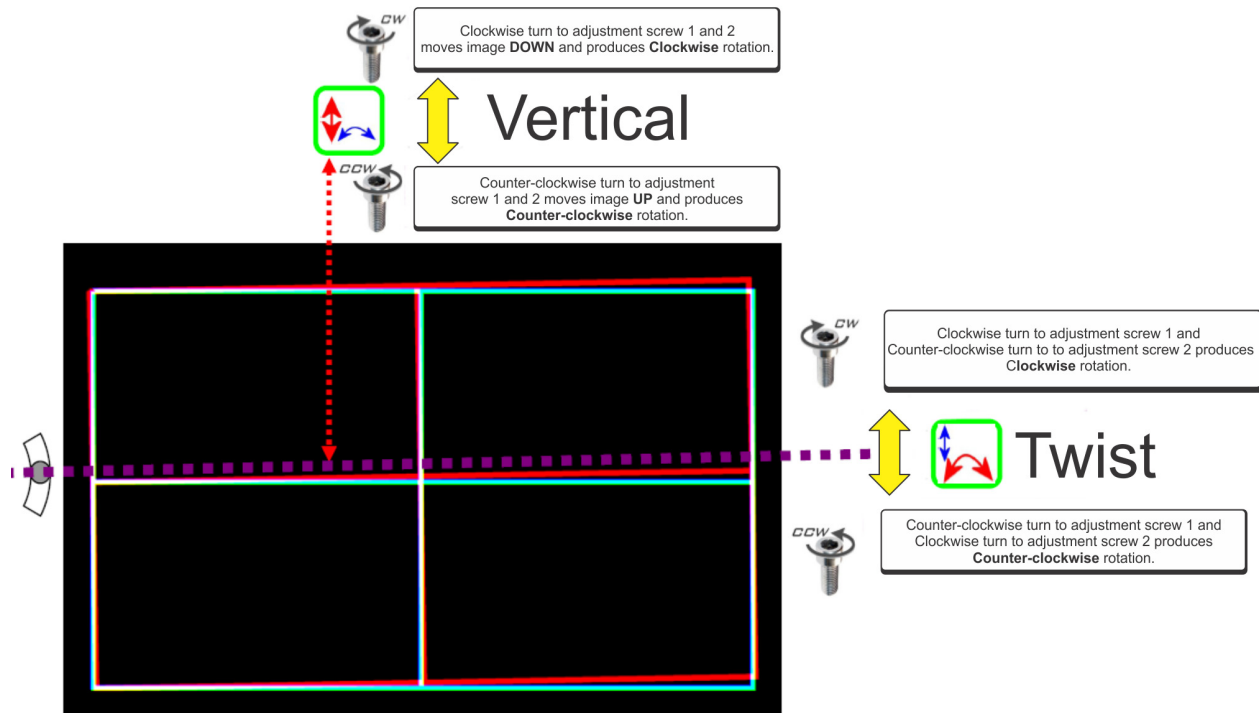

- The horizontal adjustment screw is independent of the twist and vertical adjustments.

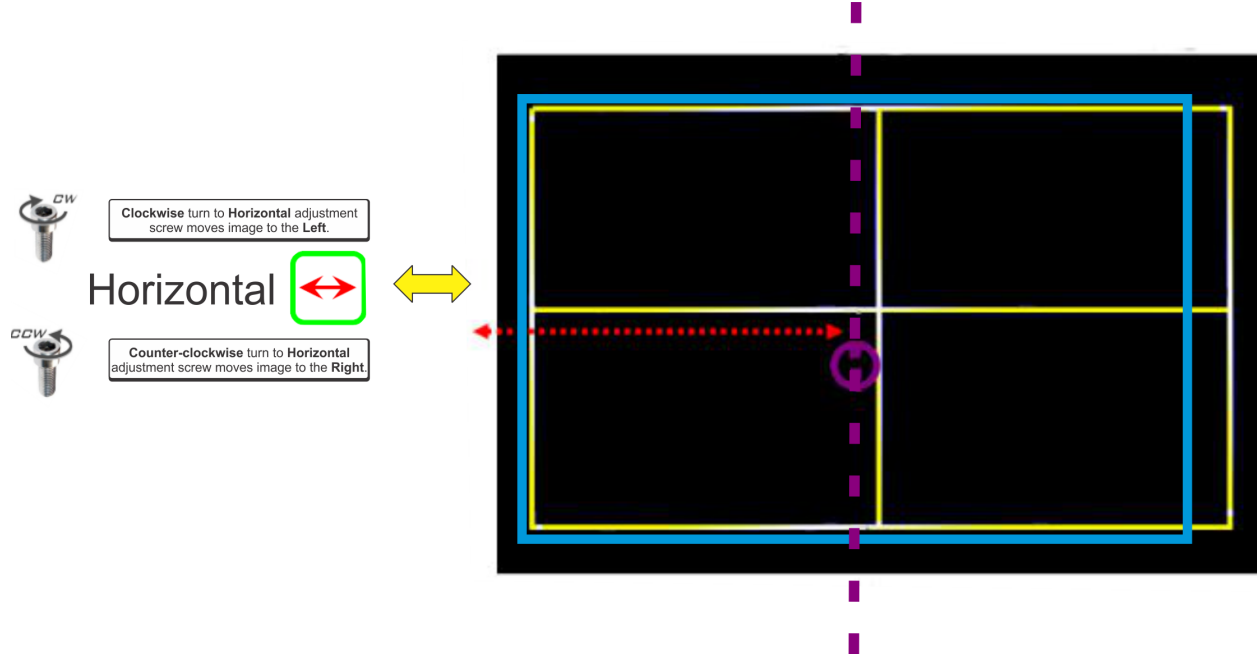


- Christie recommends that you locate the twist adjustment screw with the 2.5mm Allen driver and leave it in place, resting against the lens mount/formatter board.
- Use a second driver to adjust the horizontal/twist adjustment screw or the vertical adjustment screw.

Final convergence assessment

- On the prisms, the red image is slightly larger than the blue and green. The larger size is caused by the natural properties of Red light due to a *slow* wavelength compared to blue and green. The angle that light is traveling is affected by every medium it travels through, and in this case several pieces of glass are between red and the screen—the red image is affected more so as it ends up slightly larger.
 - This means that the best possible convergence would be the center area should be perfectly aligned showing solid white pixels, as shown in the simplified diagram.
 - The Red must be evenly 1/4 to 1/2 a pixel out all the way around the outer area, showing cyan (green + blue) towards the center of the screen.

- c. Green and blue must always be perfectly aligned to each-other (to within 1/4 pixel total in one or a combination of directions.)

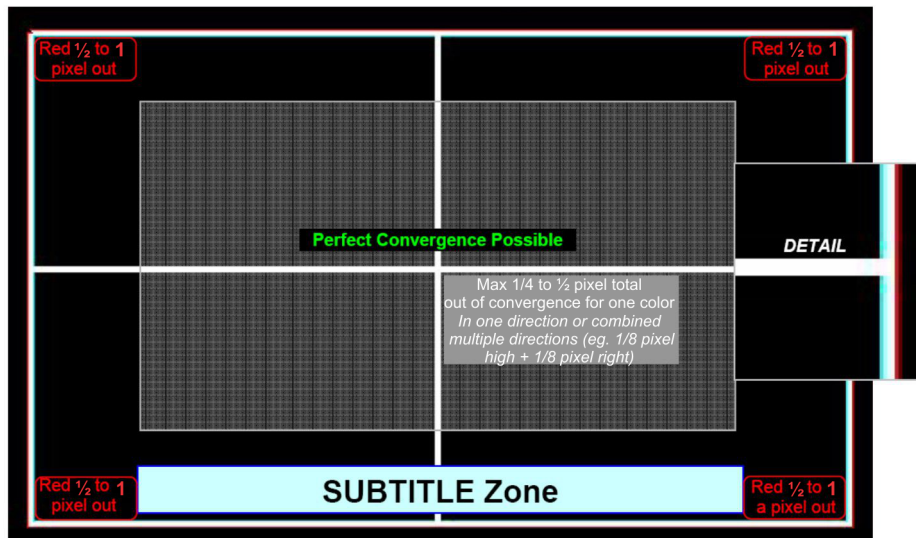

2. In certain circumstances, there may be further tolerance deficiencies in the prism assembly in combination with the projection lens that causes the normal Red over-sizing to become slightly non-uniform.
- In practice, this extra increase in size has generally appeared on the lower-right of the image, causing an apparent clockwise twist in the lower-right corner only—the upper left, right and lower-left all look fine.
 - To “Split the difference” push the rest of the image slightly twisted counter-clockwise to minimize the effect on the bottom of the screen, keep the subtitle zone as converged as possible.
 - If the problem appears to be more than an extra 1/2 of a pixel out of uniformity, a new lens/prism assembly may be the only solution.

Obtain the white point and brightness

Create a white point laser setting file for 3D and 2D channels. You may also need to create one for scope and flat features.

- In the laser bank control application under Screens, click **System**.
- Under Color Levels, move the System Green control (CTL) slider to 100%.
- Wait approximately 30 seconds for the green lasers to respond.
Every time you adjust the green lasers, wait for the lasers to move to the new value.
- Using a spectroradiometer, such as Photo Research PR-655 SpectraScan® measure the brightness and color of the screen.
- Move the System Red and System blue CTL sliders up or down to bring the measured values closer to the target white point values:

DCI: $x = 0.314$, $y = 0.351$

D65: $x = 0.3127$, $y = 0.3290$

For more precise adjustments, click the cap on the slider and press the up and down arrow keys.

- Repeat steps 4 to 5 until the measured values are approximately the same as the target white point.

Save the laser settings

- On the System tab under Configuration Management, click **Save**.
- Type a name for the settings file and press Enter.

Dual-projection

For information on setting up two projectors for high-brightness 2D and 3D projection, see the Christie Duo User Manual (Part Number 020-100978-XX).

Add the projector to a network

- On the TPC, tap **Menu > Communications > Ethernet Settings > Modify IP Settings**.
- To obtain the IP address automatically, tap **Automatic** then **Ok**.
- To specify the settings, tap Manual, type the IP Address, Subnet Mask, and Gateway (optional), then tap **Ok**.
- On the touch panel controller (TPC), tap **Menu > Login**.
- In the **Username** list, select an administrator account.
- Enter a password in the **Password** field and tap **Login**.
- Tap **Menu > Administrator Setup > Communications Configuration**.
- Complete these fields:

Field	Description
Device Name	The name of the projector.
IP Address	The IP address of the projector.
Subnet Mask	The subnet mask to which the IP address belongs.
Gateway	The IP address for the network gateway.
Apply	Applies Ethernet settings.
Serial Speed (Baud)	The baud rate of the serial port. The default is 115200.
Enable SNMP	Enables SNMP.

Field	Description
SNMP V2 / SNMP V3	The SNMP protocol type. Contact Christie technical support for the SNMP V3 user ID and password.
Management IP	The IP address where SNMP information and notifications are sent.
Download MIB to USB	Sends the SNMP Management Information Base (MIB) file to a USB flash drive.
Apply	Applies SNMP settings.
Serial Access	Grants access to serial connections.
Ethernet Access	Grants access to Ethernet connections.

Connect sources

1. Tap **Menu** > **Administrator Setup** > **Communications Configuration**.
2. In **IP Address** field, type the Ethernet settings.
3. In the Serial Speed (Baud) list, select a baud rate for the input device.
4. Tap **Apply**.

Calibrate color

1. To determine the Measured Color Gamut Data (MCGD) value, measure the colors displayed on the screen from the center of the audience viewing location.
2. On the TPC, tap **Menu** > **Advanced Setup** > **MCGD File Setup** and enter the color values in the x and y fields for the different colors.
3. Tap **Save**.

The software determines the Target Color Gamut Data (TCGD) value, which determines the corrections needed to display the correct colors.

Create channels

Channels store customized projector settings for different inputs. You can create up to 64 channels.

1. In the **Channel Name** field, type the name.
2. To specify general settings, tap **Config 1**.
3. To specify color settings, tap **Config 2**.
4. To specify 3D settings, tap **3D Control**.
5. To use this channel, click **Activate**.

Turn system off

- On the TPC on the projector, tap and hold the red Power button.

Turn system off in an emergency

1. Press the E-Stop button either on the back of the projector (see [Projector safety features](#) on page 23) or on the operator side of the Laser Rack (see [LM Rack safety features](#) on page 22) to shut down the laser modules.


The laser modules turn off.

Troubleshooting

The section provides information about laser module status on the laser bank control application.

Check the laser module status

1. Open the Christie Laser Bank Manager application.
2. Review the quick status panels (A).

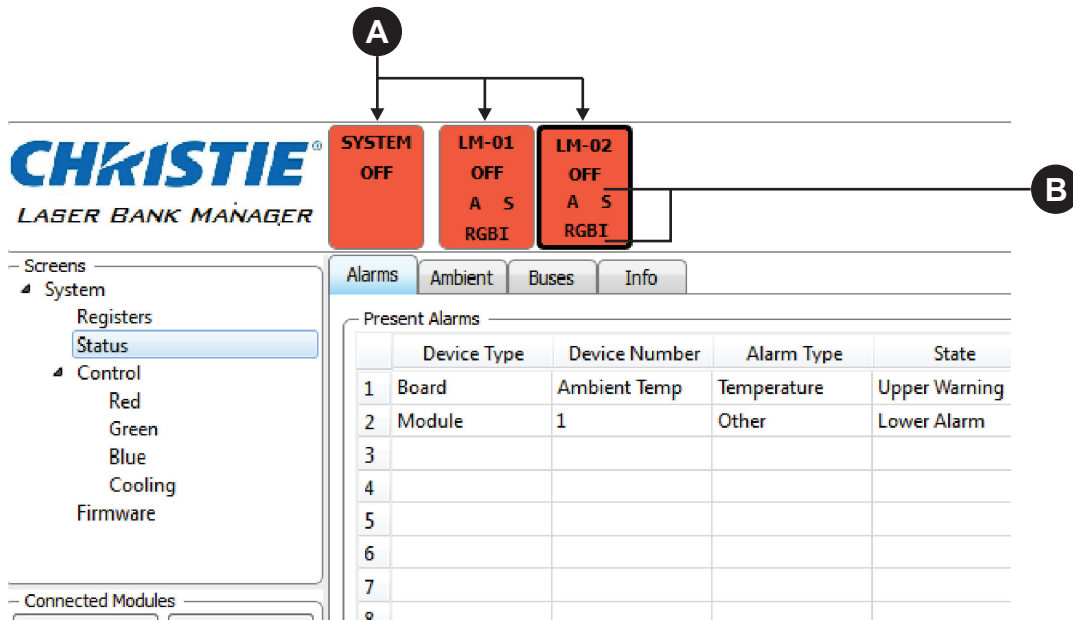

During normal operation, the quick status panels have a green background. A yellow background indicates a warning, and a red background indicates an alarm condition.

Do not operate a laser module if the humidity sensor is not working. Operating with a failed humidity sensor can reduce the longevity of the laser and void the warranty. Failure to comply may result in equipment damage.

3. Check the alarm codes (B).

Code	Description
V	Bus voltages

Code	Description
A	Ambient temperature
F	Fans
C	Chiller
S	File System (SD card)
E	Red enclosure
R	Red laser
G	Green laser
B	Blue laser
I	Interlock
P	Power-up

4. Click the corresponding quick status panel to open a status pane for a specific laser module.
5. Click the **Alarms** tab to view the alarm type and status.
6. To view the current ambient temperature and warning and alarm thresholds, click the **Ambient** tab.
7. To view bus voltage levels, click the **Buses** tab.
8. To view laser module build, software, and use data, click the **Info** tab.

Missing focus/zoom warning

If you calibrate the lens with a fixed lens installed, a warning appears about the missing focus/zoom. The calibration itself is correct. The error disappears the next time the projector is turned on.

Projector Specifications

This section provides detailed specifications for the projector head.

Power requirements


Item	Description
Voltage	100 -240 VAC
Maximum Current	10 A
Line Frequency	50 - 60 Hz
Inrush Current	45 A maximum

Physical specifications

Item	Description
Size (L x W x H) (without front shroud)	(without lens mount, stack, and feet) 1097 mm (43.2 inches) x 644 mm (25.4 inches) x 432 mm (17.0 inches)
	(includes lens mount, stack, and feet) 1211 mm (47.7 inches) x 644 mm (25.4 inches) x 480 mm (19.0 inches)
	Shipping (includes skid) 1448 mm (57inches) x 914 mm (36 inches) x 711 mm (28 inches)
Size (L x W x H) (with front shroud)	(includes front shroud, stack, and feet) 1330 mm (52.4inches) x 644 mm (25.4 inches) x 480 mm (19.0 inches)
	Front shroud is shipped separately
Weight (without front shroud)	102 kg (224 pounds)
	Shipping (includes packaging) 133 kg (294 pounds)
Weight (with front shroud)	104 kg (230 pounds)
	Shipping (includes packaging) 136 kg (300 pounds)

Operating position

This diagram shows how the projection can be positioned.

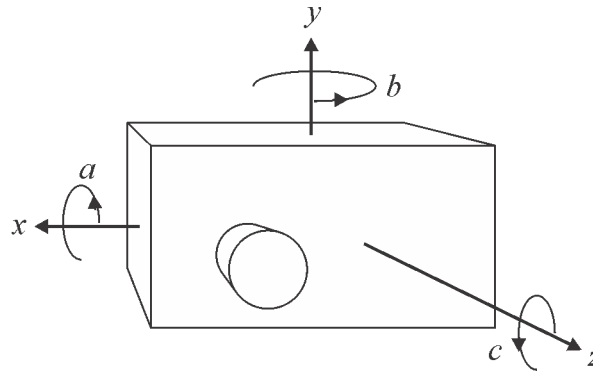

Angle	Range
a	-20 degrees to 20 degrees
b	360 degrees
c	-15 degrees to 15 degrees

Operating environment

Item	Description
Temperature	10 °C to 25 °C (50 °F to 77 °F)
Humidity (non-condensing)	20 % to 80 %

Non-operating environment

Item	Description
Temperature	-20 °C to 60 °C (-4 °F to 140 °F)
Humidity (non-condensing)	0 % to 95 %

Projection lens compatibility

Item	Description/Part Number
DLPCine High Brightness Prime Zoom Lens	<ul style="list-style-type: none"> • 1.25-1.45:1 (2K) / 1.13-1.31:1 (4K) (108-274101-xx) • 1.25-1.83:1 (2K) / 1.13-1.66:1 (4K) (108-342100-xx) • 1.45-1.8:1 (2K) / 1.31-1.63:1 (4K) (108-275101-xx) • 1.45-2.05:1 (2K) / 1.31-1.85:1 (4K) (108-335102-xx) • 1.45-2.1:1 (4K) (108-421108-xx) • 1.6-2.4:1 (2K) / 1.45-2.17:1 (4K) (108-336103-xx) • 1.8-2.4:1 (2K) / 1.63-2.17:1 (4K) (108-276101-xx) • 1.8-3.0:1 (2K) / 1.63-2.71:1 (4K) (108-337104-xx) • 2.15-3.6:1 (2K) / 1.95-3.26:1 (4K) (108-338105-xx) • 2.2-3.0:1 (2K) / 1.98-2.71:1 (4K) (108-277101-xx) • 3.0-4.3:1 (2K) / 2.71-3.89:1 (4K) (108-278101-xx) • 4.3-6.0:1 (2K) / 3.89-5.43:1 (4K) (108-279101-xx) • 5.5-8.5:1 (2K) / 4.98-7.69:1 (4K) (108-280101-xx)
DLPCine High Contrast Prime Zoom Lenses	<ul style="list-style-type: none"> • 1.25-1.83:1 (2K) / 1.13-1.66:1 (4K) (108-400105-01) • 1.45-2.05:1 (2K) / 1.31-1.85:1 (4K) (108-401106-01) • 1.6-2.4:1 (2K) / 1.45-2.17:1 (4K) (108-402107-01) • 1.8-3.0:1 (2K) / 1.63-2.71:1 (4K) (108-403108-01) • 2.15-3.6:1 (2K) / 1.95-3.26:1 (4K) (108-404109-01)

Accessories

Standard

- Touch panel controller with interface cable
- Installation and User Guides
- Interconnect diagram
- Front shroud
- Motors and zoom kit for motorized lens mount
- Lock down screws for lens mount

Optional

Item	Description/Part Number
Rack Stand	108-282101-xx
Bracket Foot Lock used with optional Rack Stand	116-100101-xx
Duo Stacking Frame	108-450100-xx
DuoAlign Kit	100-469100-xx
Right Arm Duo Assembly	108-449108-xx
Left Arm Duo Assembly	108-463104-xx
Mirror Duo Spare	108-476108-xx
Adjustable Rack Stand for Duo	108-416102-xx
DLP Cinema® Firmware Installation Program	Available online
TPC Remote Cable (30m)	003-111169-xx

Third-party accessories

- 3D Equipment

Replacement air filters

Item	Description/Part Number
LAD Filter	03-001982-5XP
Intake LE Filter	003-005010-XX
IOS Air Filter	003-005011-XX
Radiator Filter Washable	003-005009-XX

Laser Module Specifications

This section provides detailed specifications for Christie laser modules. Due to continuing research, specifications are subject to change without notice.

Power requirements.

Item	Description
Voltage	46 -53 VDC
Maximum Current	22 A

Physical specifications

Item	Description
Size (L x W x H)	3800 mm (31.5 inches) x 443 mm (17.5 inches) x 130 mm (5.25 inches)
	Shipping (includes packaging)
	953 mm (37.5 inches) x 851 mm (33.5 inches) x 286 mm (11.25 inches)
Weight	32 kg (70 pounds)
	Shipping (includes packaging)
	46 kg (100 pounds)
Operating Position	Tilt of projection axis from horizontal ± 30 degrees maximum

Operating environment

Item	Description
Temperature	10 °C to 25 °C (50 °F to 77 °F)
Humidity (non-condensing)	20 % to 80 %

Non-operating environment

Item	Description
Temperature	-25 °C to 65 °C (-13 °F to 149 °F)
Humidity (non-condensing)	0 % to 95 %

Accessories

Included

- Ethernet cable
- Interlock cables

Additional

- LM Rack (Full) P/N 146-110103-XX
- LM Rack (Half) P/N 146-104106-XX
- LM Rack (Full) Plenum P/N 146-109101-XX
- DC Power Harness
- Fiber Bundle
- Modular DC Power Supply

Optional

- Air Filters
- Replacement Fan Pack

LM Rack Specifications

This section provides detailed specifications for the LM Rack (Full) and LM Rack (Half).

Power requirements

One to four single phase circuits power the LM Rack (Full).

One to three single phase circuits power the LM Rack (Half).

Item	Description
Voltage	200 - 240 VAC
Maximum Current	24 A
Line Frequency	50 - 60 Hz

Two single phase circuits for the laser system network switch and the laser bank manager.

Item	Description
Voltage	100 - 240 VAC
Maximum Current	15 A
Line Frequency	50 - 60 Hz

One to two single phase circuits for a NAS. The second AC input is for an optional backup source, such as an uninterruptible power supply (UPS).

Item	Description
Voltage	100 - 240 VAC
Maximum Current	15 A
Line Frequency	50 - 60 Hz

Physical specifications

LM Rack (Full)

Item	Description
Length	with front plenum removed 1081.6 mm (42.58 inches)
	with front plenum installed 1375.6 mm (54.16 inches)
Width	without side duct installed 644 mm (25.83 inches)
	with side duct installed 744.6 mm (29.31 inches)
Height	without top duct installed 2196.6 mm (86.48 inches)
	with top duct installed 2296.6 mm (90.42 inches)
	with fiber optic bundle routed through top 2546.6 mm (100.26 inches)
Weight	with front plenum installed 299.8 kg (661 pounds)
	with front plenum removed 263.0 kg (580 pounds)
	with front plenum and rear door removed 257.1 kg (547 pounds)



The optional earthquake kit adds 10 mm (0.39 inches) to the height.

LM Rack (Half)

Item	Description
Length	1081.6 mm (42.58 inches)
Width	without side duct installed 644 mm (25.83 inches)
	with side duct installed 744.6 mm (29.31 inches)

Item	Description
Height	without top duct installed 1529.8 mm (60.23 inches)
	with top duct installed 1629.8 mm (64.17 inches)
	with fiber optic bundle routed through top 1879.8 mm (74.01 inches)
Weight	204.1 kg (450 pounds)
	with rear door removed 193.7 kg (427 pounds)



The optional earthquake kit adds 10 mm (0.39 inches) to the height.

Operating environment

Item	Description
Temperature	10 °C to 25 °C (50 °F to 77 °F)
Humidity (non-condensing)	20% to 80%

Non-operating environment

Item	Description
Temperature	-25 °C to 65 °C (-13 °F to 149 °F)
Humidity (non-condensing)	0% to 95%

Regulatory

This product conforms to the following regulations related to product safety, environmental requirements and electromagnetic compatibility (EMC). Due to continuing research, specifications are subject to change without notice.

Safety

- CAN/CSA C22.2 No. 60950-1
- UL 60950-1
- IEC 60950-1
- EN60950

Laser safety

- IEC 60825-1 (2007)
- FDA CDRH CFR 1040.10
- FDA CDRH CFR 1040.11

Electro-magnetic compatibility

Item	Description
Emissions	<ul style="list-style-type: none">• FCC CFR47, Part 15, Subpart B, Class A - Unintentional Radiators• CAN ICES-3 (A) / NMB-3 (A)• CISPR 22/EN 55022 Class A - Information Technology Equipment
Immunity	CISPR 24/EN55024 EMC Requirements - Information Technology Equipment

Environmental

- EU Directive (2011/65/EU) on the restriction of the uses of certain hazardous substances (RoHS) in electrical and electronic equipment and the applicable official amendment(s).
- EU Regulation (EC) No. 1907/2006 on the registration, evaluation, authorization and restriction of chemicals (REACH) and the applicable official amendment(s).

- EU Directive (2012/19/EU) on waste and electrical and electronic equipment (WEEE) and the applicable official amendment(s).
- China Ministry of Information Industry Order No.39 (02/2006) on the control of pollution caused by electronic information products, hazardous substances concentration limits (SJ/T11363-2006), and the applicable product marking requirements (SJ/T11364-2006)

Certification

The product is designed to comply with the rules and regulations required for the product to be sold in various regional markets, including USA/Canada, EU, Australia/New Zealand, Kuwait, China, Korea, Japan, Mexico, Ukraine, Russia, India, South Africa, and Saudi Arabia.

TRAINING / DOCUMENTATION PROVIDED TO THEATER OPERATOR	Yes	No
FDA/CDRH installation requirements (modifications must be approved)		
User Manual provided with the laser projection system		
PROJECTOR AND PROJECTION ROOM INSPECTION	Yes	No
Laser warning and restricted access signs posted		
Projector securely mounted		
Housing is assembled properly		
Shutter, E-stop, key control, and emission status indicators function correctly		
Laser warning labels are affixed to the projector (including aperture locations) See the label placement drawing for label locations		
Projection system safety features have not been modified		
THEATER CLEARANCE DISTANCES CONFIRMED	Yes	No
Nominal Ocular Hazard Distance (NOHD) is confirmed to be ____ meters from the projector.		
Christie Nominal Ocular Hazard Distance (NOHD) calculator used to calculate NOHD?		
Describe how the NOHD was confirmed and calculated (if the Christie NOHD was not used):		
(Note: If measurements are taken, attach the detector and meter model, serial number, and calibration date)		
Beam is 2.5 meters above floor where the audience is permitted to stand and/or 1.0 meters below or lateral		
No objects (except projection window) intercept the beam path within the NOHD		

Installer’s Signature: _____ **Date:** _____

Return completed forms to Compliance-Dept@christiedigital.com or by facsimile to 519-749-3131

Provide a copy of the completed form to theater management



ASSY TECH DOCS CP42LH

Corporate offices

USA – Cypress
ph: 714-236-8610

Canada – Kitchener
ph: 519-744-8005

Consultant offices

Italy
ph: +39 (0) 2 9902 1161

Worldwide offices

Australia
ph: +61 (0) 7 3624 4888

Brazil
ph: +55 (11) 2548 4753

China (Beijing)
ph: +86 10 6561 0240

China (Shanghai)
ph: +86 21 6278 7708

Eastern Europe and
Russian Federation
ph: +36 (0) 1 47 48 100

France
ph: +33 (0) 1 41 21 44 04

Germany
ph: +49 2161 664540

India
ph: +91 (080) 6708 9999

Japan (Tokyo)
ph: 81 3 3599 7481

Korea (Seoul)
ph: +82 2 702 1601

Republic of South Africa
ph: +27 (0)11 510 0094

Singapore
ph: +65 6877-8737

Spain
ph: + 34 91 633 9990

United Arab Emirates
ph: +971 4 3206688

United Kingdom
ph: +44 (0) 118 977 8000

